


**LINEA** ■ LIGHTING

---

**ELINA VANITY SCONCE**  
LL-WL301

**ASSEMBLY INSTRUCTIONS**

REMOVE ALL PARTS FROM PACKAGE, BE CAREFUL NOT  
TO DAMAGE ANY COMPONENTS.

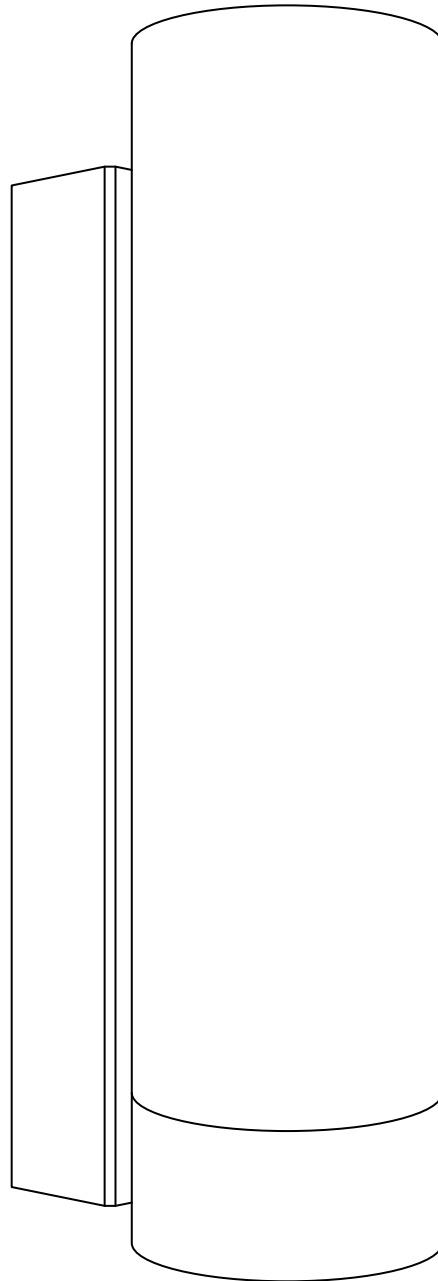

---


PROFESSIONAL INSTALLATION RECOMMENDED

# LINEA ■ LIGHTING

## ELINA VANITY SCONCE

LL-WL301

REMOVE ALL PARTS FROM PACKAGE, BE CAREFUL NOT TO DAMAGE ANY COMPONENTS.

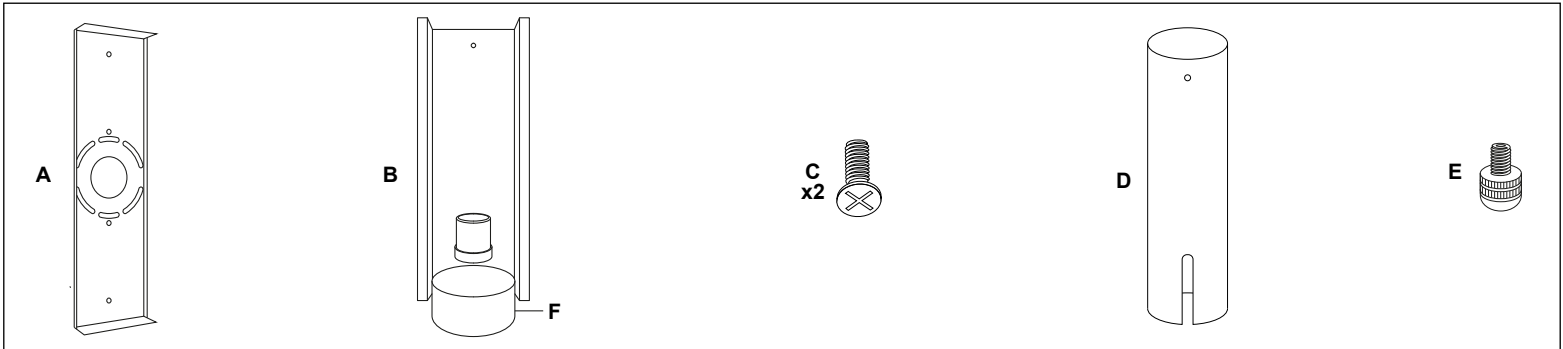

1. Measure area and determine desired mounting height.

2. Detach mounting plate [A] from backplate [B].


3. Mounting plate [A] will attach to junction box.

4. Install light to wall. Linea Lighting recommends installation by a qualified electrical professional. Backplate screws [C] are used to tighten light to wall.

5. Install light bulb 60W max (not included).

6. Detach finishing screw [E]. Place shade [D] over light bulb notch side facing backplate [B]. Position notch so shade [D] can be gently pushed to bottom of shade bracket [F]. Make sure hole at top of shade [D] aligns with hole at top of backplate [B].

7. Secure shade [D] to backplate [B] by reaching inside of shade [D] with finishing screw [E], threading through both holes and tightening.

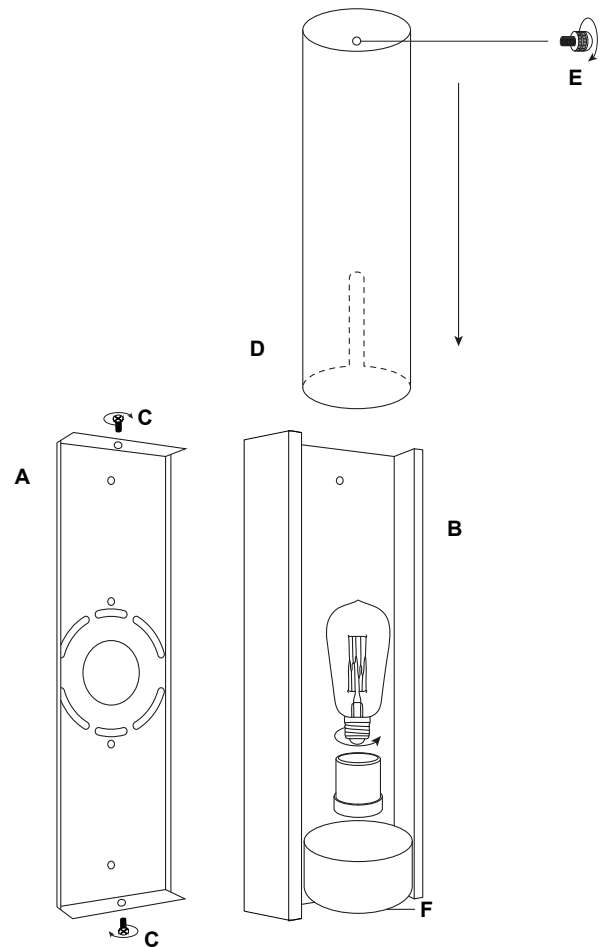

Note: Turn off switch before replacing the bulb. Make sure the bulb has sufficient time to cool down. Do not subject the lamp to any shock while lit as shattering of glass shade may result.