


LINEA ■ LIGHTING

ANDANTE INDUSTRIAL WALL SCONCE LL-WL407

ASSEMBLY INSTRUCTIONS

REMOVE ALL PARTS FROM PACKAGE, BE CAREFUL NOT
TO DAMAGE ANY COMPONENTS.

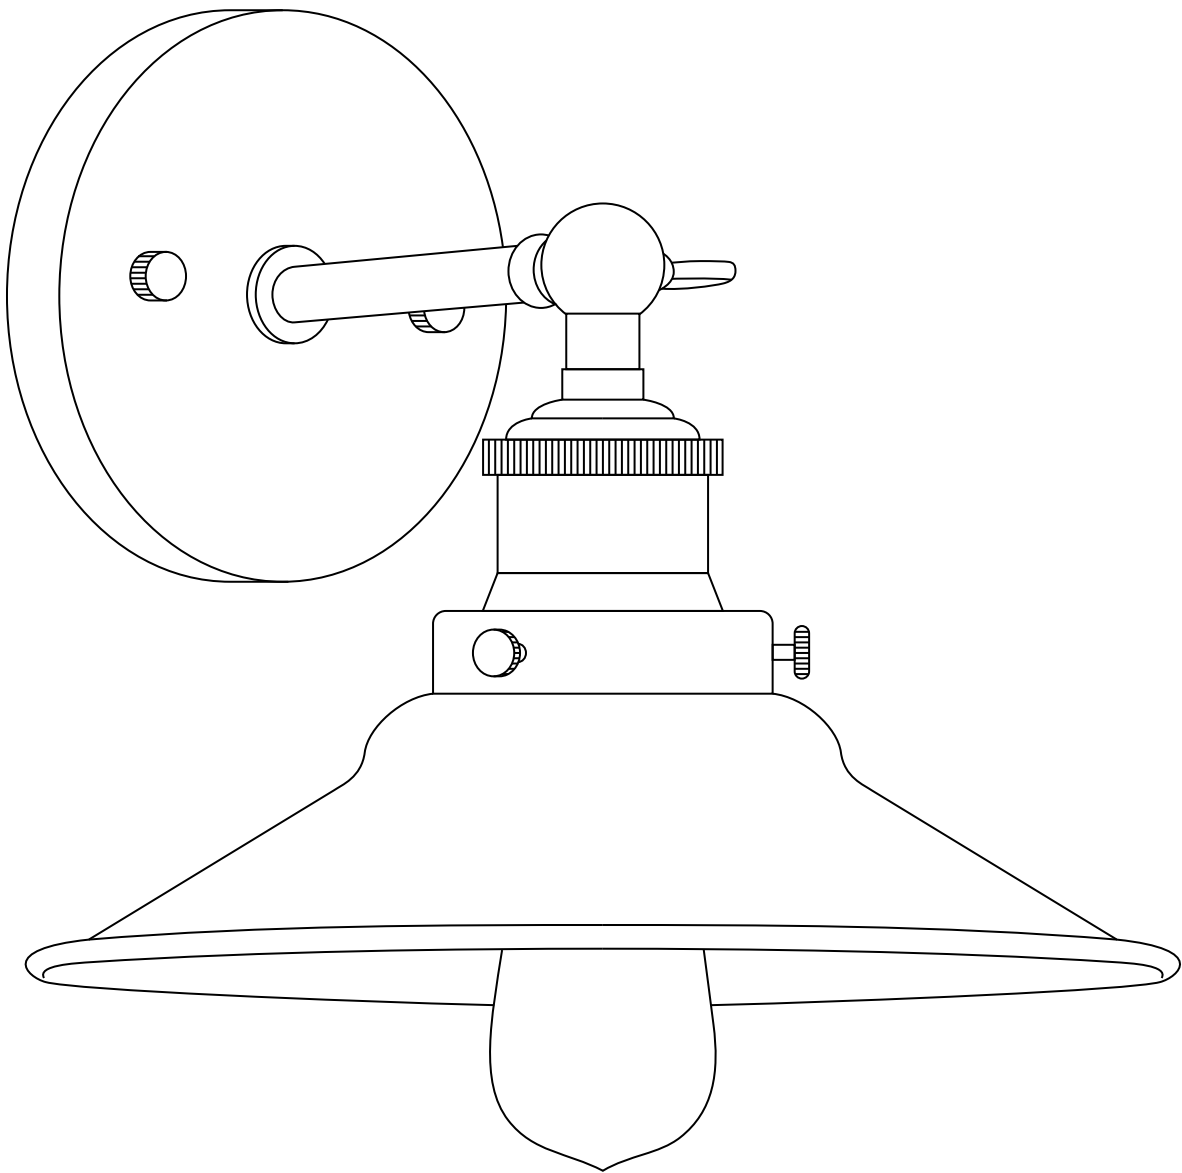


PROFESSIONAL INSTALLATION RECOMMENDED

LINEA ■ LIGHTING

ANDANTE INDUSTRIAL WALL SCNCE

LL-WL407

REMOVE ALL PARTS FROM PACKAGE, BE CAREFUL NOT TO DAMAGE ANY COMPONENTS.

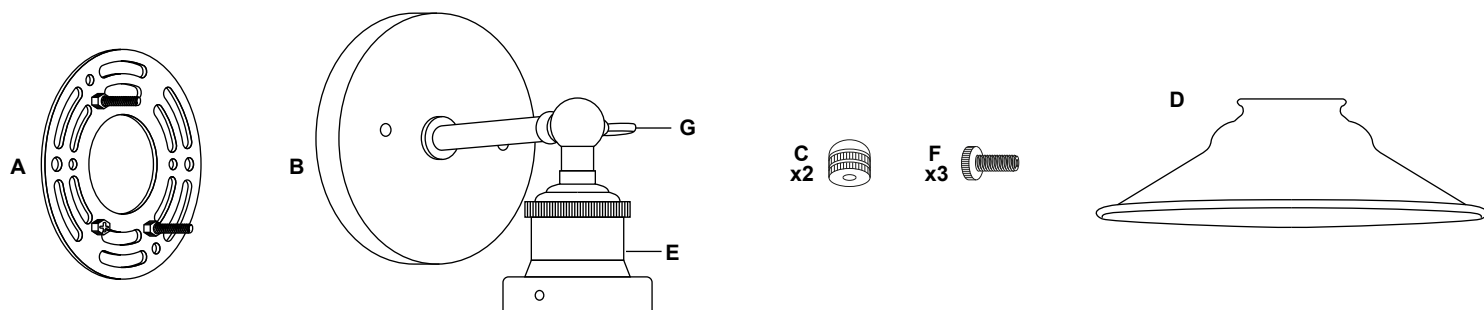

1. Measure area and determine desired mounting height.

2. Detach mounting plate [A] from backplate [B].


3. Mounting plate [A] will attach to junction box.

4. Install light to wall. Linea Lighting recommends installation by a qualified electrical professional. Backplate nuts [C] are used to tighten light to wall.

5. Install the metal shade [D] onto socket [E] and tighten by using shade screws [F].

6. Install bulb 60W max (included).

7. To change orientation - wing screw [G] may be loosened and re-tightened after positioning.

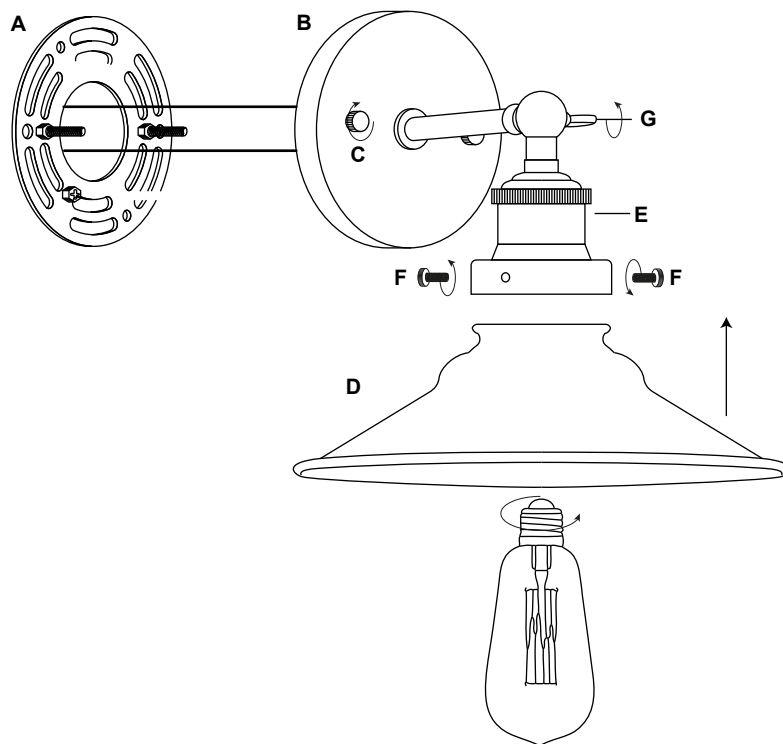

Note: Turn off switch before replacing the bulb. Make sure the bulb has sufficient time to cool down.
Do not subject the lamp to any shock while lit as shattering of glass shade may result.