


## **AVELLINA WALL SCONCE**

LL-WL828

## ASSEMBLY INSTRUCTIONS

REMOVE ALL PARTS FROM PACKAGE, BE CAREFUL NOT TO DAMAGE ANY COMPONENTS.

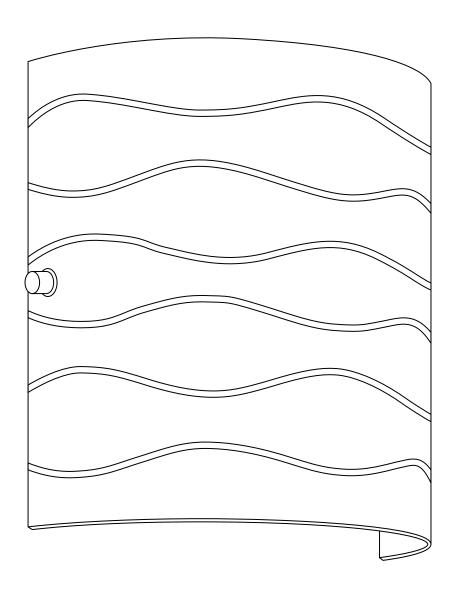




## AVELLINA WALL SCONCE

LL-WL828

REMOVE ALL PARTS FROM PACKAGE, BE CAREFUL NOT TO DAMAGE ANY COMPONENTS.

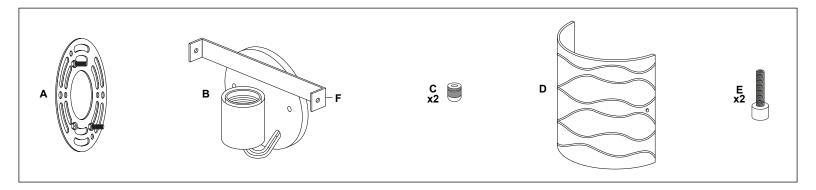

- 1. Measure area and determine desired mounting height.
- 2. Detach mounting plate [A] from backplate [B].
- 3. Mounting plate [A] will attach to junction box.
- 4. Install light to wall. Linea Lighting recommends installation by a qualified electrical professional. Backplate nuts [C] are used to tighten light to wall.
- 5. Install light bulb 60W max (not included).
- 6. Detach finishing screws [E] from shade bracket [F]. Place shade [D] so the holes in the shade [D] align with the holes in the shade bracket [F].
- Secure shade [D] to shade bracket [F] by tightening with finishing screws [E].

