




























6 x 3m POLYTUNNEL ASSEMBLY GUIDE

1	1A	2	3	4	5	6	7	8	9	P1	P2	P3	P4	P5	P7	P8
																
26PCS	2PCS	7PCS	7PCS	7PCS	21PCS	14PCS	4PCS	2PCS	4PCS	49 + 2 PCS	8PCS	57 + 2 PCS	1PCS	1PCS	1PC	1PC

A	B	C	D	E	F	G	H	I
								
1PC	1PC	1PC	1PC	1PC	1PC	1PC	1PC	1PC

Fit all Horizontal and diagonal bars on the INSIDE of the tunnel Arch.


STEP 1

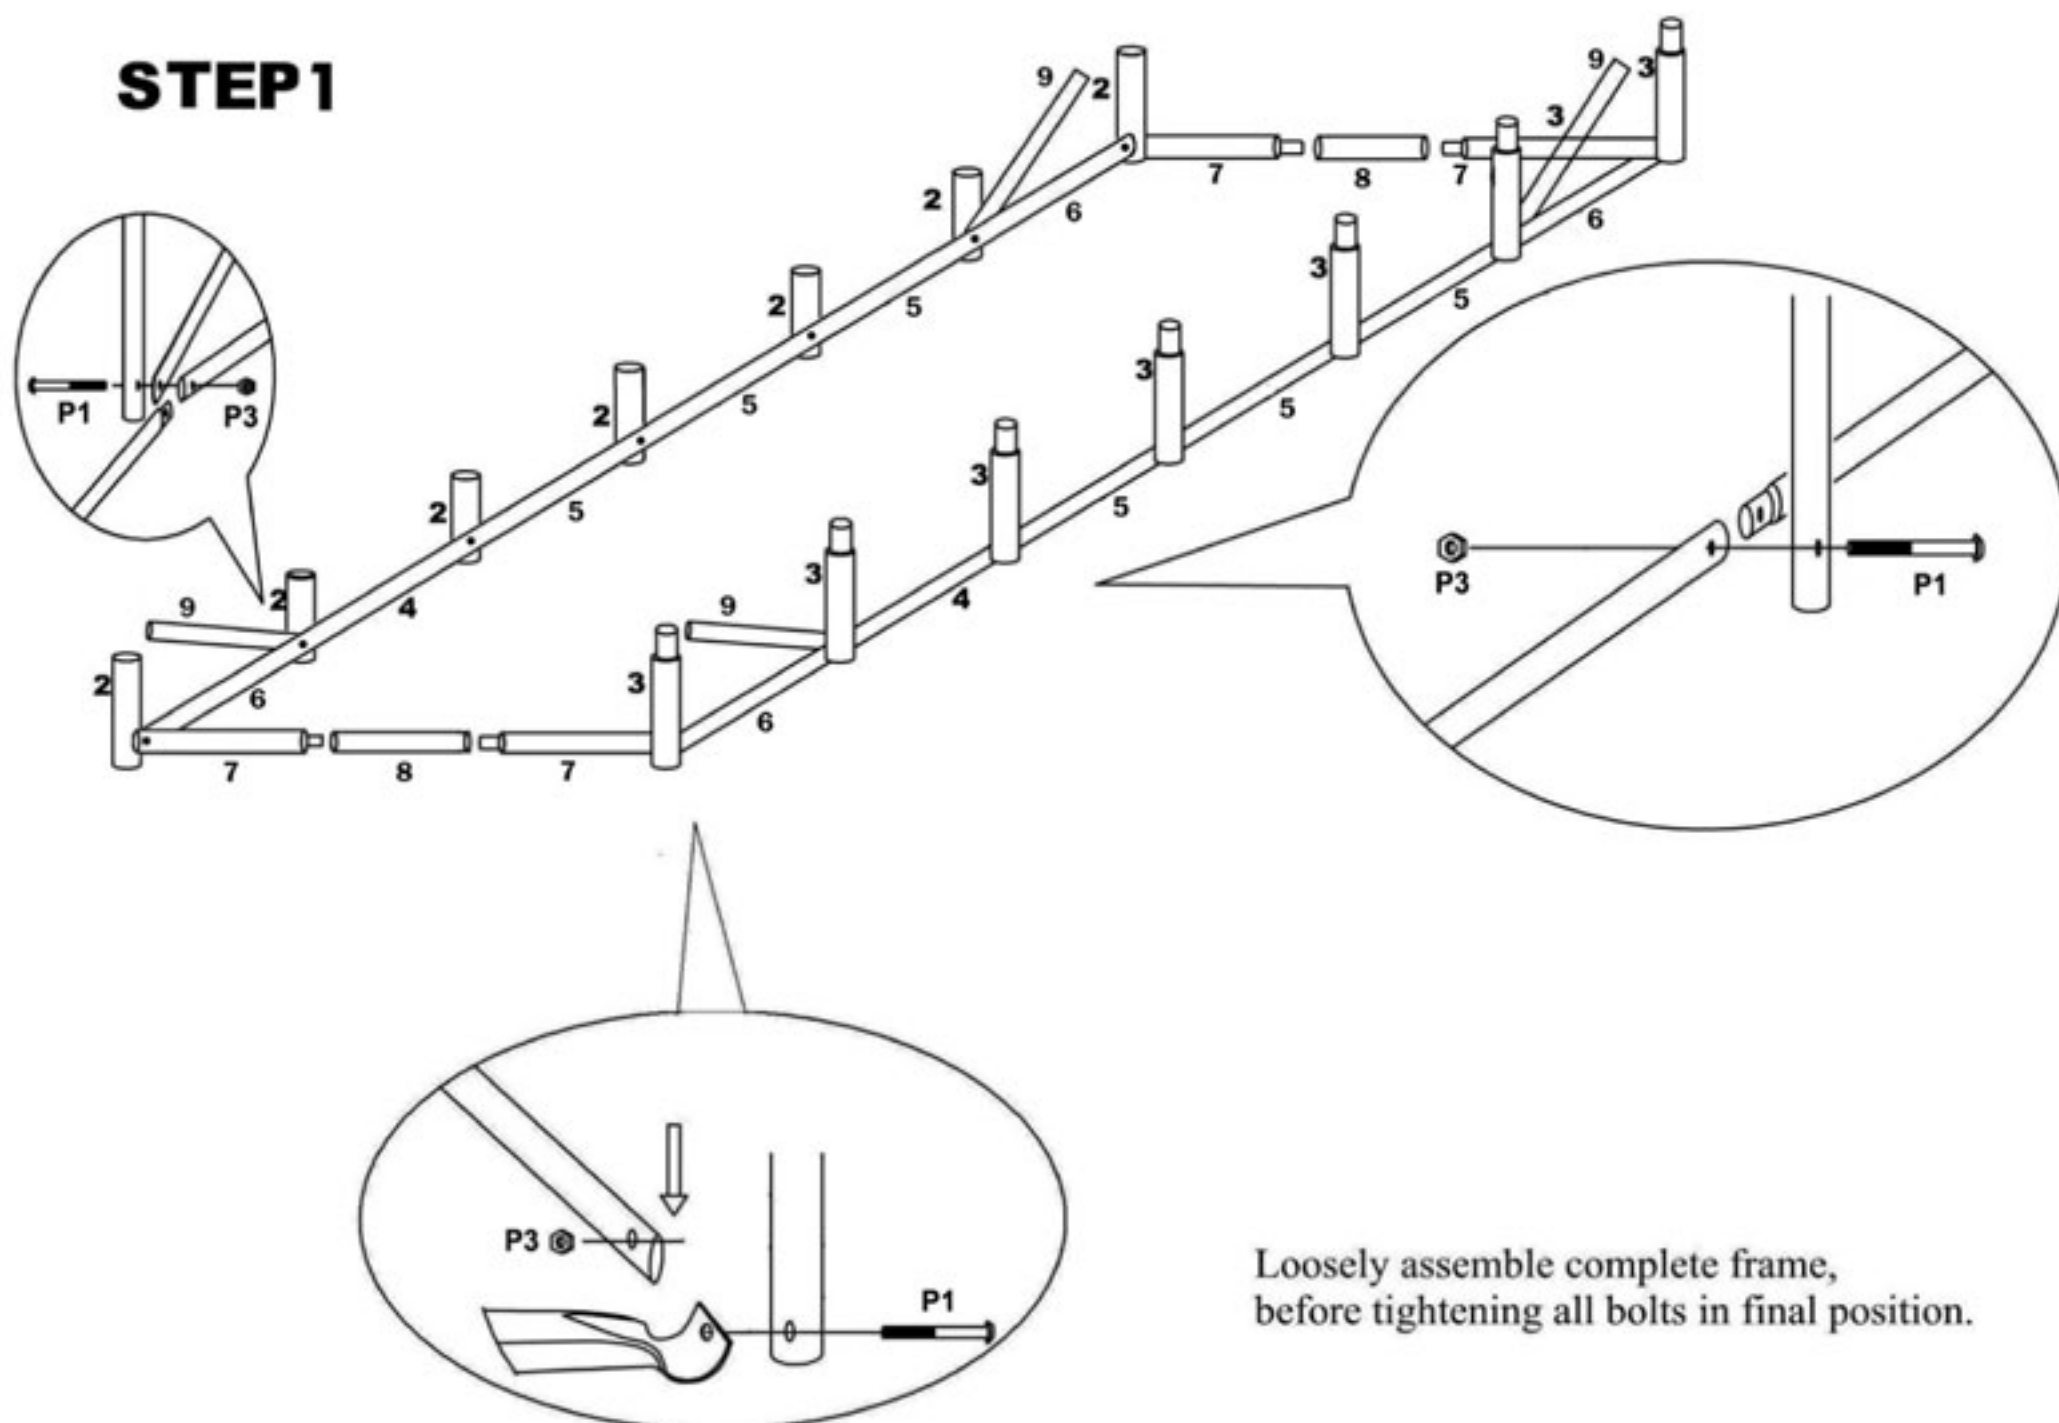


Loosely assemble complete frame,
before tightening all bolts in final position.

Fit all Horizontal and diagonal bars on the INSIDE of the tunnel Arch.

STEP2

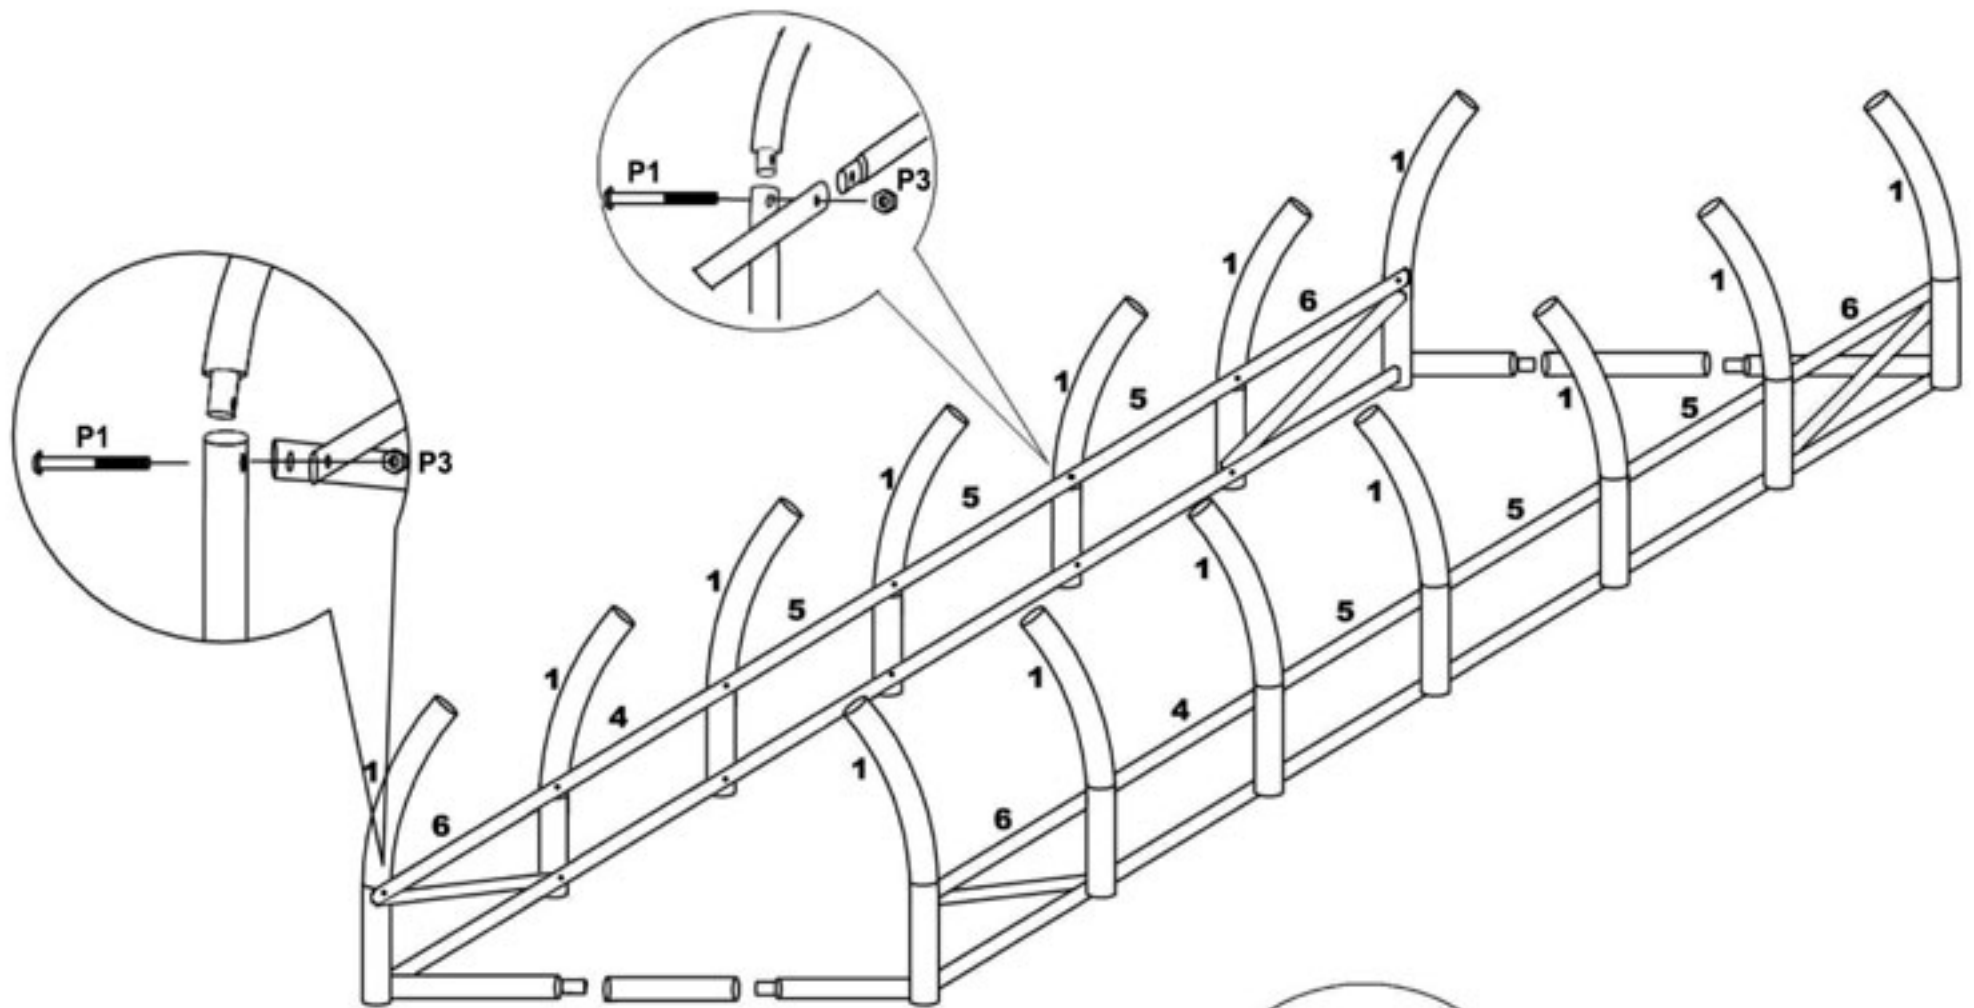


STEP3

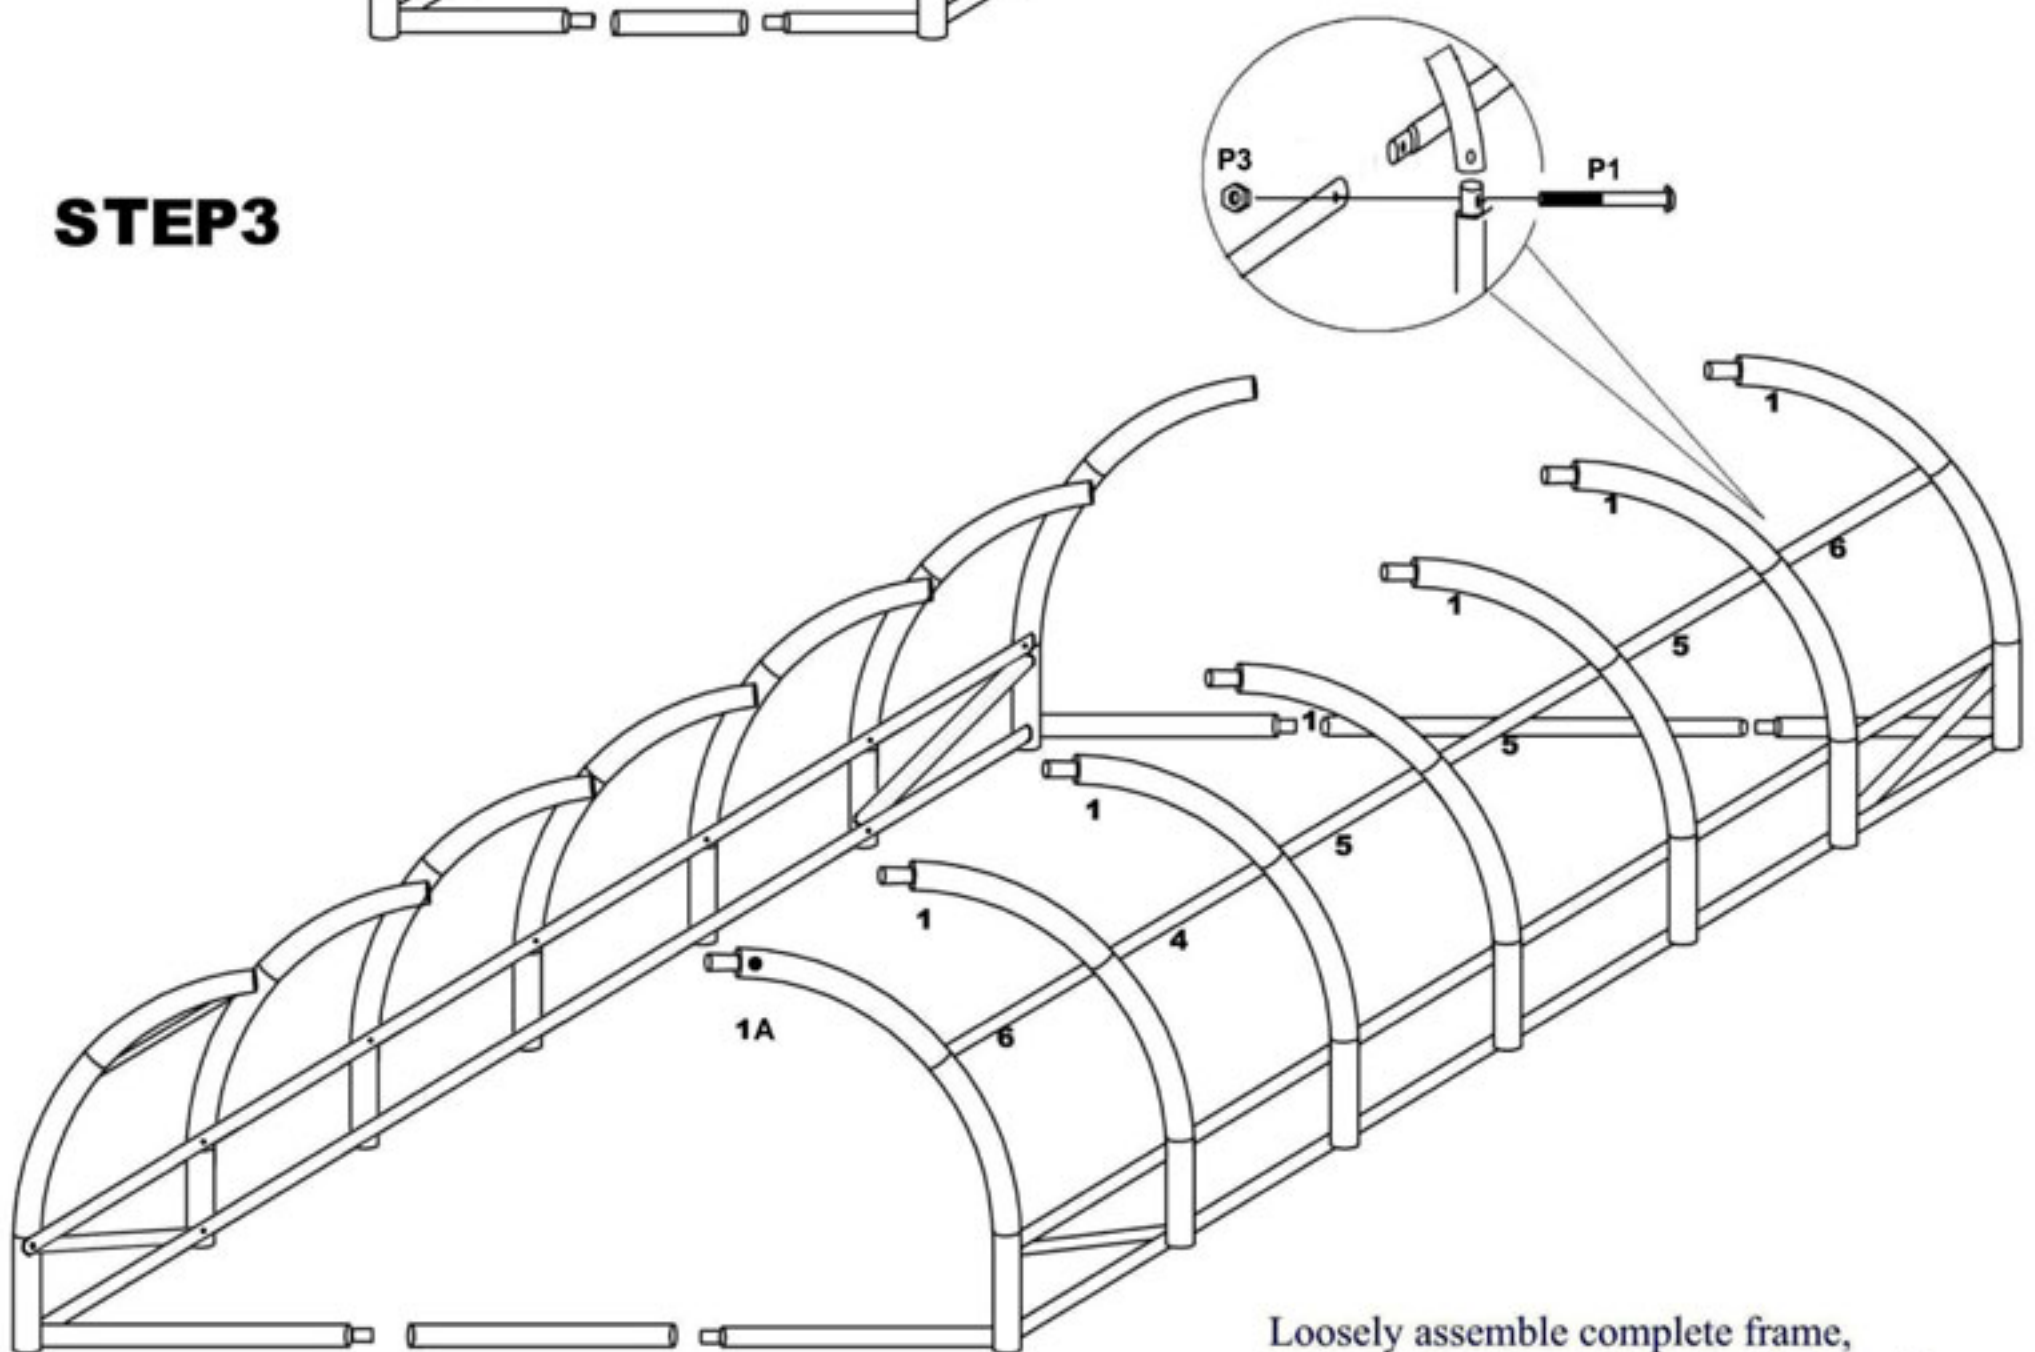


Loosely assemble complete frame,
before tightening all bolts in final position.

Fit all Horizontal and diagonal bars on the INSIDE of the tunnel Arch.

STEP4

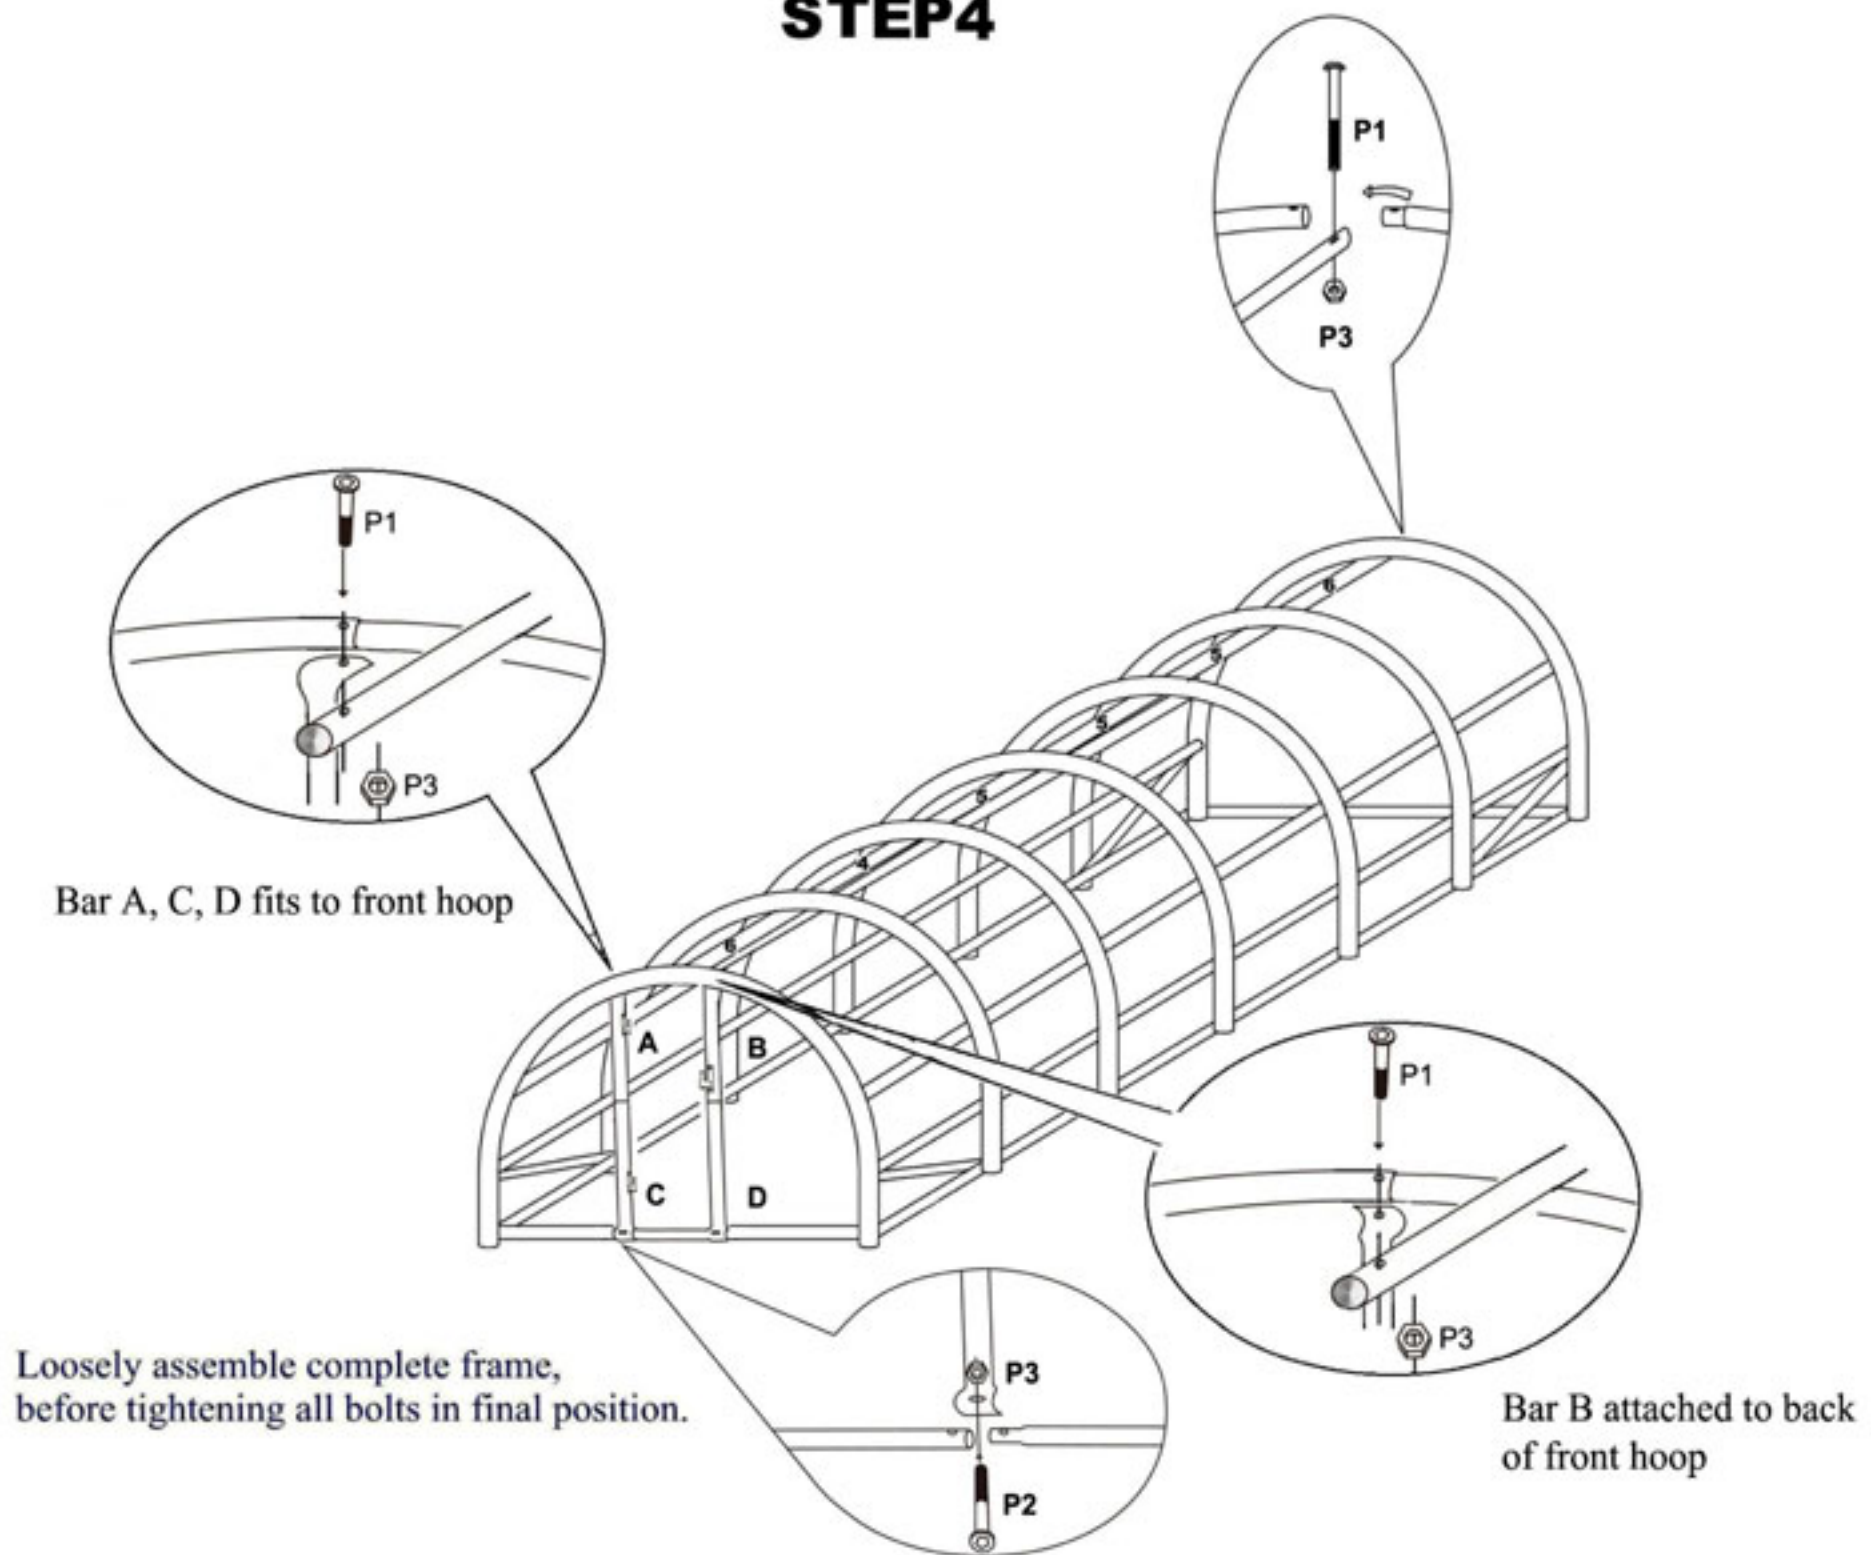


STEP5

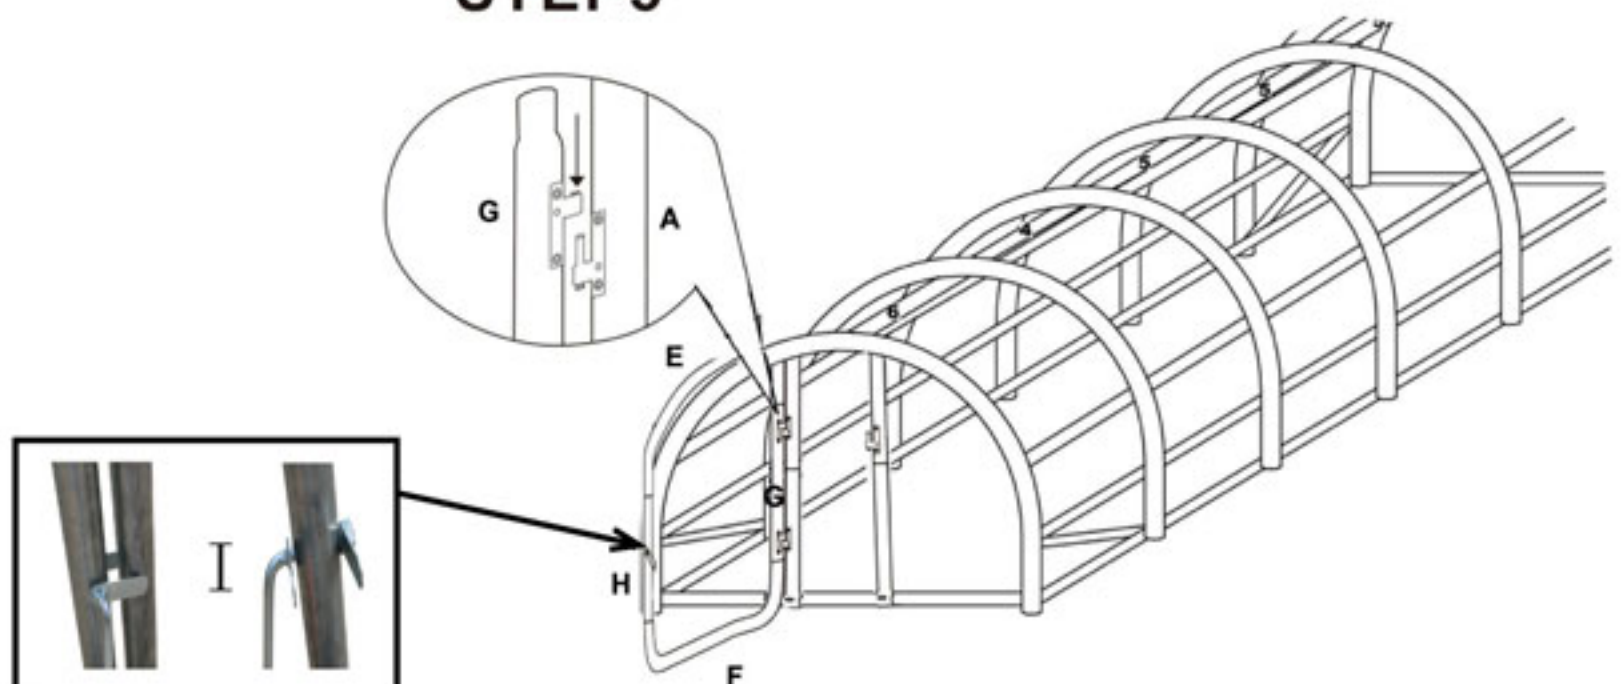

Next thread through the locking screw and tighten.

Fit all Horizontal and diagonal bars on the **INSIDE** of the tunnel Arch.

STEP 6

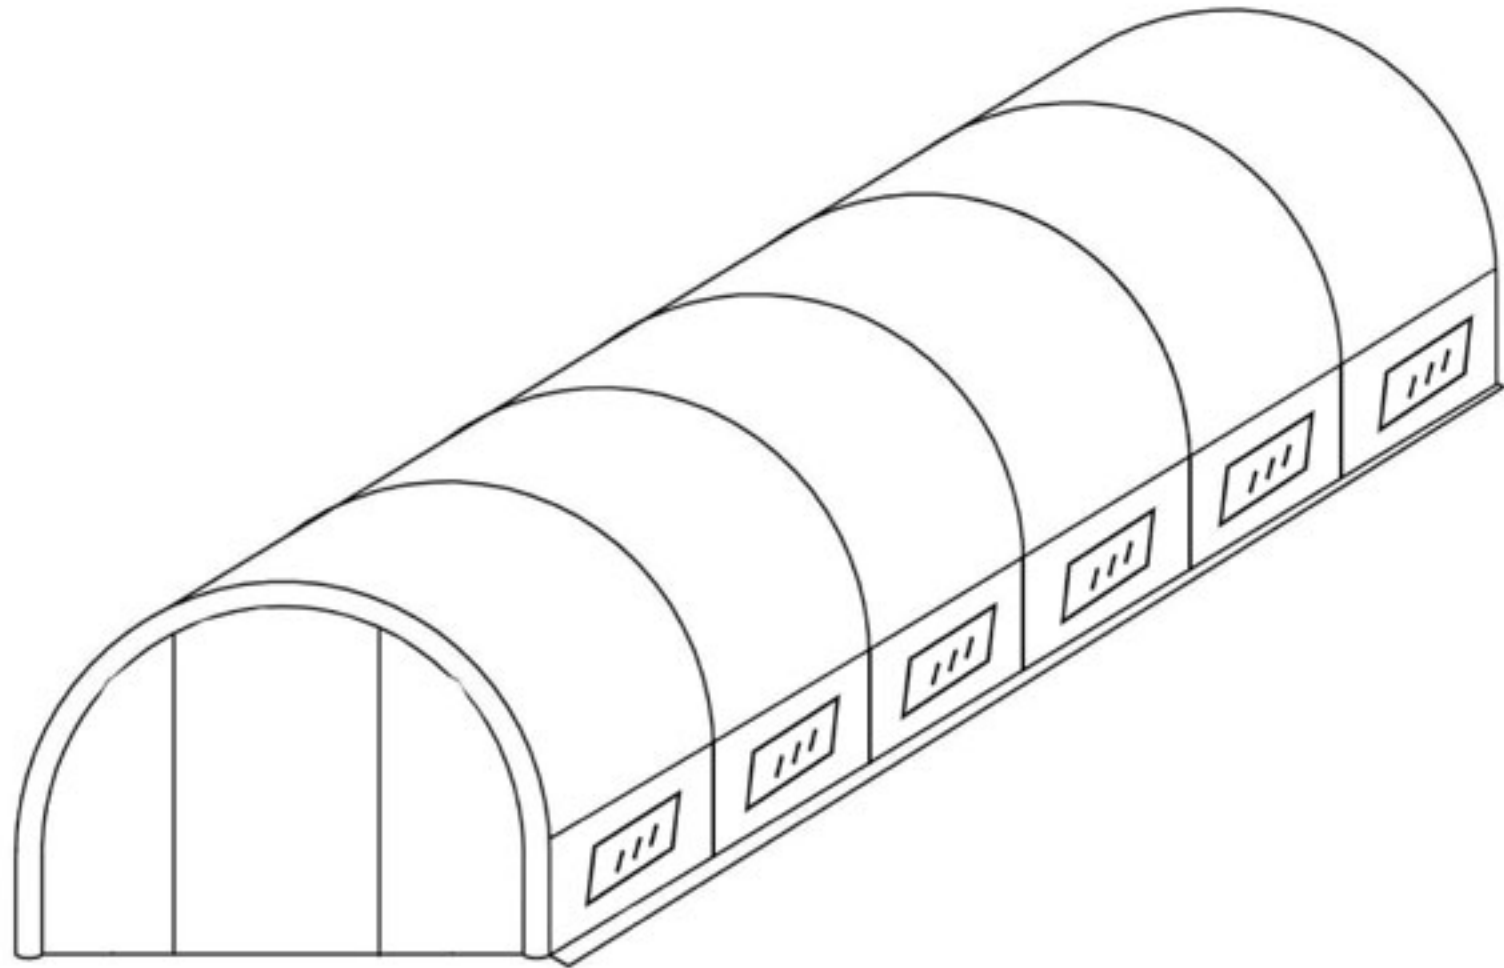

- 1) Please carefully follow the assembly instructions.
- 2) 2-3 people are recommended for final assembly.
- 3) Attach the cover to the frame using the ties located on the inside cover, hot spot tape (not supplied) may also be used. The ground skirt can be buried and weighted or surface mounted and weighted. Care must be taken to ensure weighting applied (locally sourced) is adequate to cope with weather conditions.