


GRATZ

How to convert your Reformer to Cadillac Bed

1.

Locate and remove hitch pins under the carriage

Remove Shoulder blocks

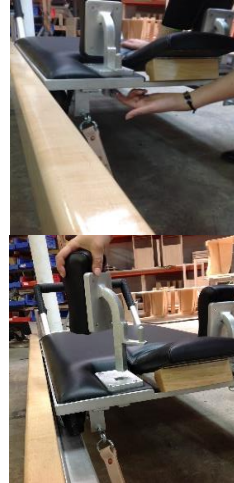

2.

Disengage springs and slide the carriage to the rear of the frame



GRATZ

3.

Lower Foot Bar down onto the tracks

Adjust Foot Bar Support toward the rear of the Reformer



4.

Place Insert Bed onto tracks, wrapped upholstery ends together and lower it gently into place.



5.

You have now converted your Reformer to Cadillac mode.

Optional Belly Strap is included and can be tied underneath the frame, for anchoring feet/legs at either end

Any additional questions can be directed to:

customercare@gratzindustries.com

