

WTA



Installation Guide




Ford Transit Shelf


It is crucial to ensure that all WTA products are assembled and securely attached to your vehicle. Failure to do so may result in automobile accidents, posing a significant risk of bodily injury or even death to yourself and others. As the owner, it is your responsibility to properly assemble and secure WTA products, diligently inspecting the mounting points and attachments before use, and regularly checking for any signs of wear or damage.

To guarantee optimal safety, we strongly advise engaging the services of a professional installer for the installation of any aftermarket accessories to your vehicle. If you lack mechanical experience or are unfamiliar with the installation procedures, it is imperative to have the product installed by a qualified professional or individuals who possess the necessary expertise. Remember, the responsibility lies with you, and it must be taken seriously to ensure the safety of all individuals involved.


PACKAGE CONTENTS

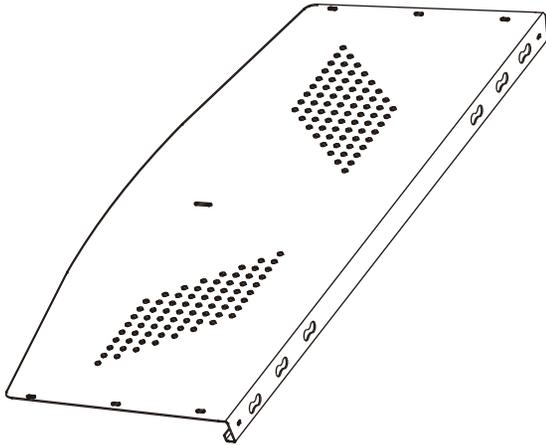


M6-25 HEXGON HEAD
SCREW QTY-4

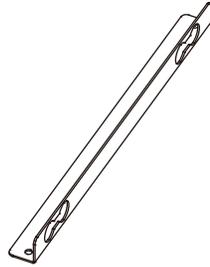


M6-25 HEXGON HEAD
SCREW QTY-10

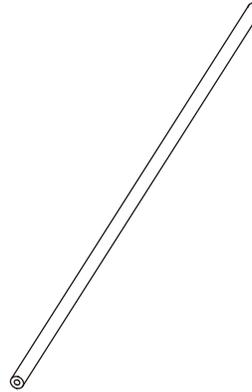


M6-25 HEXGON HEAD
SCREW QTY-5

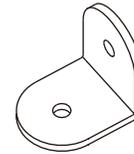


M6-25 HEXGON HEAD
SCREW QTY-5

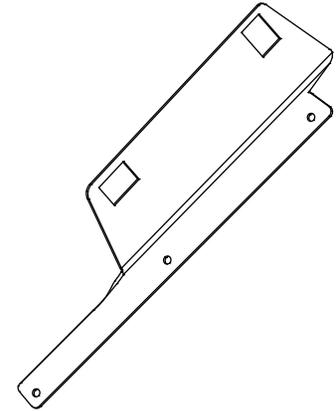

M6-25 HEXGON HEAD
SCREW QTY-5

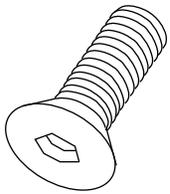

M6-25 HEXGON HEAD
SCREW QTY-4

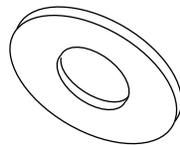

M6-25 HEXGON HEAD
SCREW QTY-4




M6-25 HEXGON HEAD
SCREW QTY-4

FIGURE 1

LET'S GET STARTED!



- 1 PLACE THE LADDER HALVES FRONT SIDE DOWN, INSERT THE COUPLERS INTO ONE HALF (SEE FIGURE 1), AND TIGHTEN DOWN USING THE M6-16 SCREWS.
- 2 SLIDE THE OTHER LADDER HALF ONTO THE COUPLERS AND TIGHTEN DOWN. *NOTE- IF DESIRED YOU CAN USE BLUE LOCTITE ON THE SCREWS.*

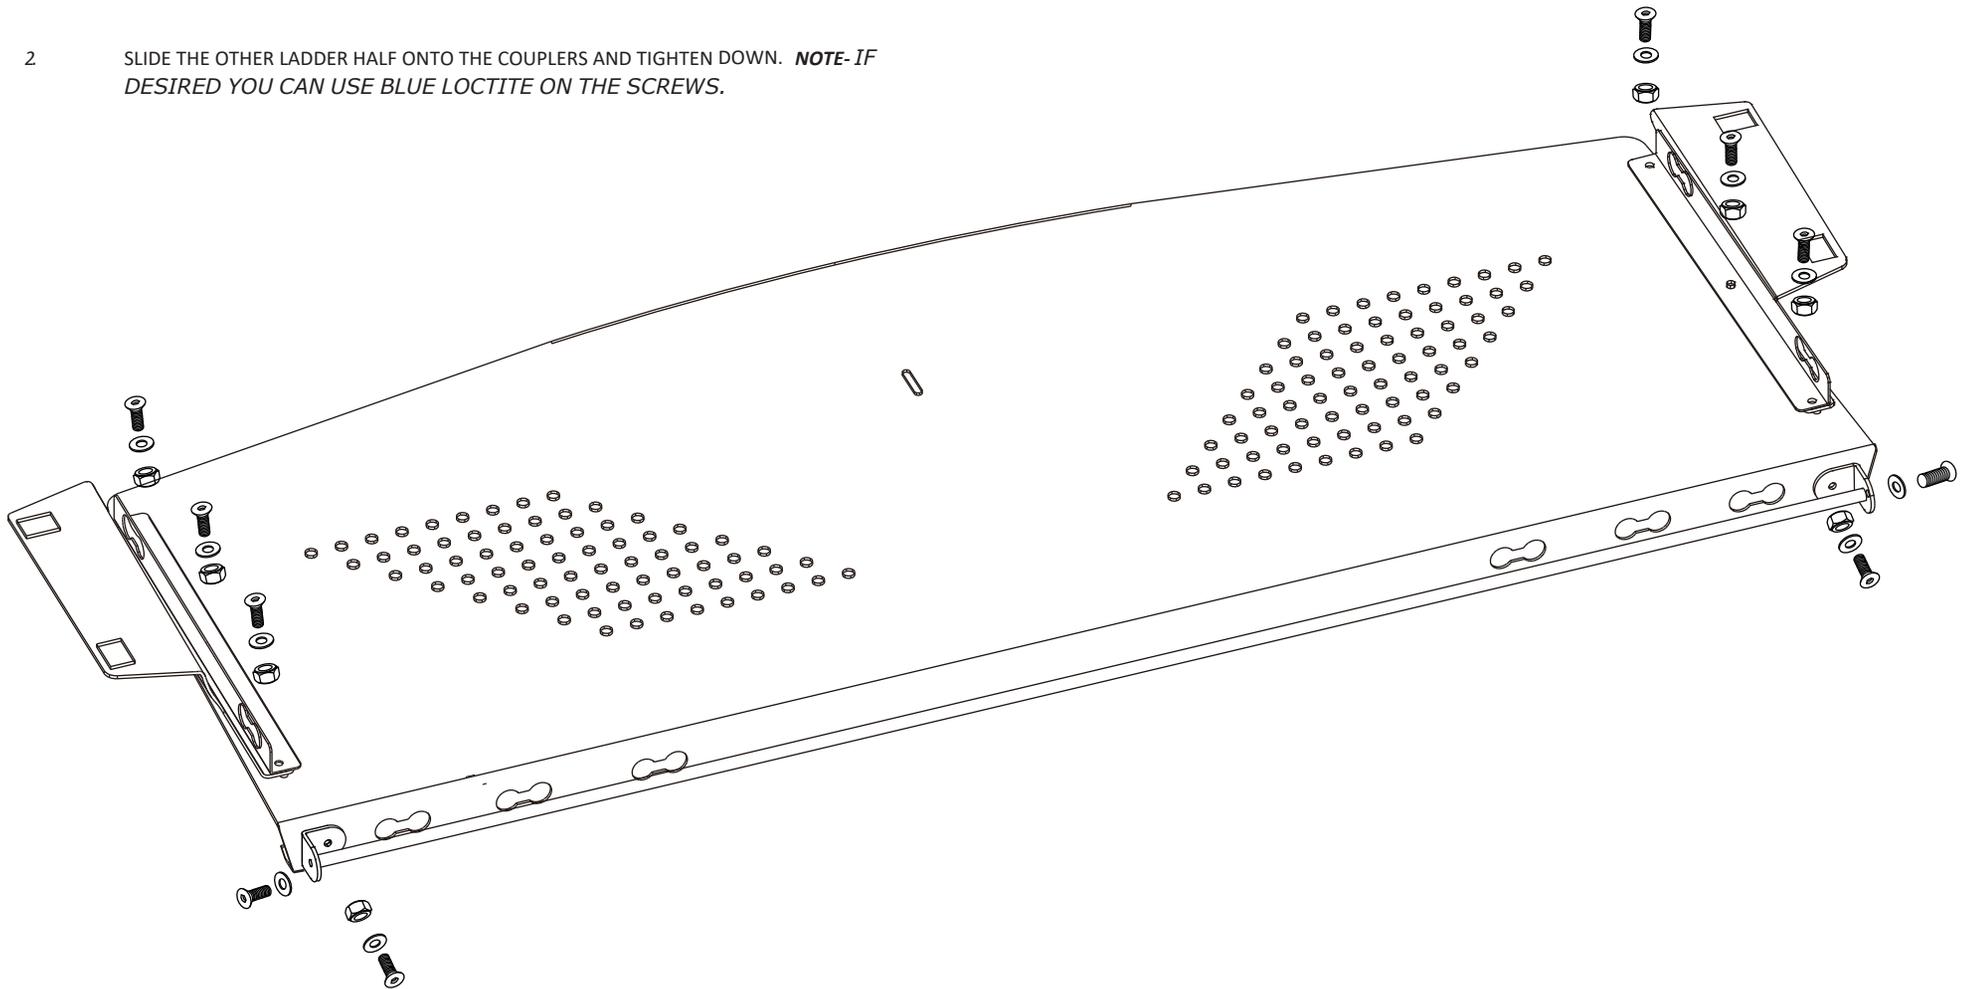

3. NEXT, SLIDE THE TWO (2) RAIL NUTS INTO THE ROOF RAIL ON YOUR VAN. *NOTE-* IF YOU'VE ALREADY INSTALLED A ROOF RACK, THIS MAY BE TIME CONSUMING.

4. NOW POSITION THE LADDER ON THE VAN, HANGING IT ON THE ROOF RAIL. LOOSELY SCREW THE TOP OF THE LADDER DOWN TO THE ROOF RAIL USING THE M10-22 SCREWS AND THE M10 SPRING LOCK WASHERS AND M10 FLAT WASHERS JUST ENOUGH THAT IT IS SNUG (SEE FIGURE 3)

NOTE- WE LIKE TO PLACE THE LADDER AS CLOSE TO THE REAR WHEEL WELL AS WE CAN. SEE IMAGE BELOW.

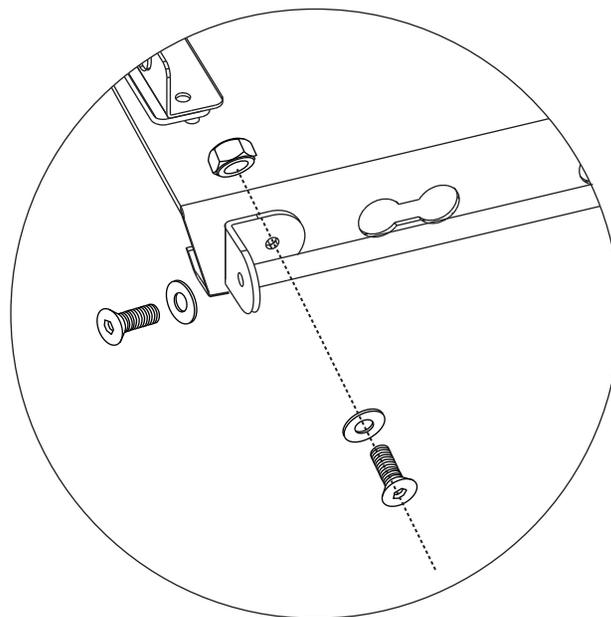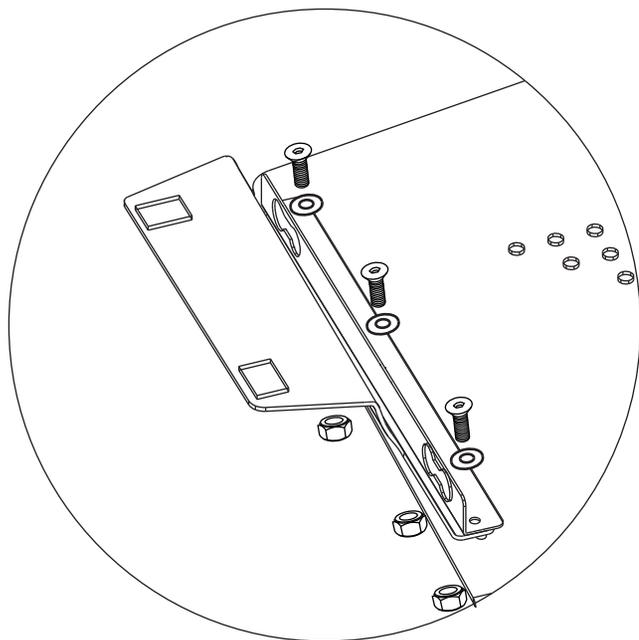

GET THERE WITH WHITE TOP ADVENTURES



thanks!



info@whitetopadventures.com