



SSV WORKS, 201 N. Rice Ave Unit A, Oxnard, CA 93030
www.SSVworks.com | Phone: 818-991-1778 | Fax: 866-293-6751

JJK-DS10

2007-2017 Jeep Wrangler JK 4-door 10" subwoofer enclosure

WARRANTY INFORMATION:

All SSV Works enclosures are covered by a limited lifetime warranty against defects in material or workmanship. All SSV Works Electronics are covered by a limited 1 year warranty against defects in material or workmanship. All Kicker Speakers are covered by a limited 1 year warranty against defects in material or workmanship. All Kicker Amplifiers are covered by a limited 2 year warranty against defects in material or workmanship. Labor for replacement of defective components is not covered. Contact SSV Works for further warranty information.



Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

TOOLS NEEDED FOR INSTALLATION

- 10mm & 18mm Deep Sockets & Ratchet

- T-30 & T-50 Torx Driver

- #2 Phillips Screwdriver

PARTS LIST IMAGES



1. JJK-DS10 sub enclosure



2. M6x1.0x16mm T30 torx screw x8



3. M6x1.0x25mm T30 torx screw x4



4. M6x1.0x40mm T30 torx screw x3



5. M6 washer x15



6. Bracket "MB-1"




7. Bracket "MB-2"



8. #7 - 19x1.25" screw x8

INSTALLATION NOTES

Disconnect the (-) negative battery cable on the Jeep using a 10mm wrench.

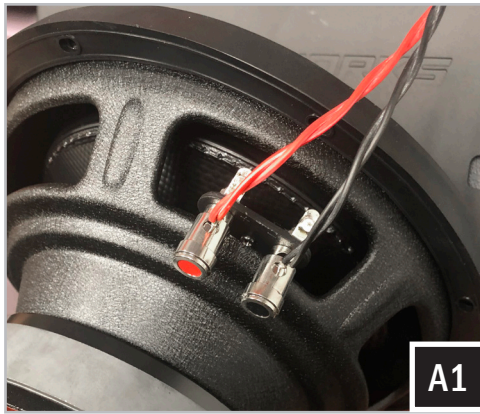

A. Connect your subwoofer to the JJK-DS10 speaker harness. Using the provided (8) #7 screws, secure your subwoofer to the enclosure with a #2 phillips screwdriver. Do not over torque.

If your enclosure already has the subwoofer pre-installed, please proceed to the next step.



B. Place the JJK-DS10 grill on the enclosure. Fasten the (3) M6x1.0x40mm T30 Torx screws and M6 washers at the pink positions. Fasten the (4) M6x1.0x25mm T30 Torx screws and M6 washers at the green positions.



C. Secure the MB-2 Bracket to the bottom of the JJK-DS10 enclosure with the provided (3) M6x1.0x16mm T30 torx screws and M6 washers.



D. Align the MB-1 Bracket over the mounting points on the backside of the JJK-DS10 enclosure. The bracket is slotted so that it can be mounted on JK's equipped with or without the freedom top. Secure the MB-1 bracket to the JJK-DS10 with (4) M6x1.0x16mm T30 torx screws and M6 washers. Additional bracket adjustments will be made in Step G if needed.

FOLD REAR SEATS DOWN FOR THE NEXT STEPS



JJK-DS10



E. Remove the (2) T50 torx screws from the driver side rear mounting rail. The (2) factory screws will be re-used to fasten the MB-1 Bracket to the mounting rail and secure the JJK-DS10 to the vehicle. (circled in blue)

F. Remove the (1) rear seat mounting nut with a 18mm socket. The MB-2 bracket will be placed over this mounting stud that the (1) nut was removed from. (circled in pink)


For a hassle-free installation, we recommend having a second set of hands to help position the assembled sub enclosure into its position in the vehicle. From the rear passenger door and the rear cargo area, lift the unit into place as a team.



G. Re-fasten the (2) factory T50 screws through bracket "MB-1" and into the mounting rail. Make sure that the bracket sits flush against mounting rail before tightening down. Make any necessary adjustments to the bracket mounting bolts if needed.



H. Re-fasten the (1) 18mm nut to the rear seat mounting stud securing the Bracket "MB-2".

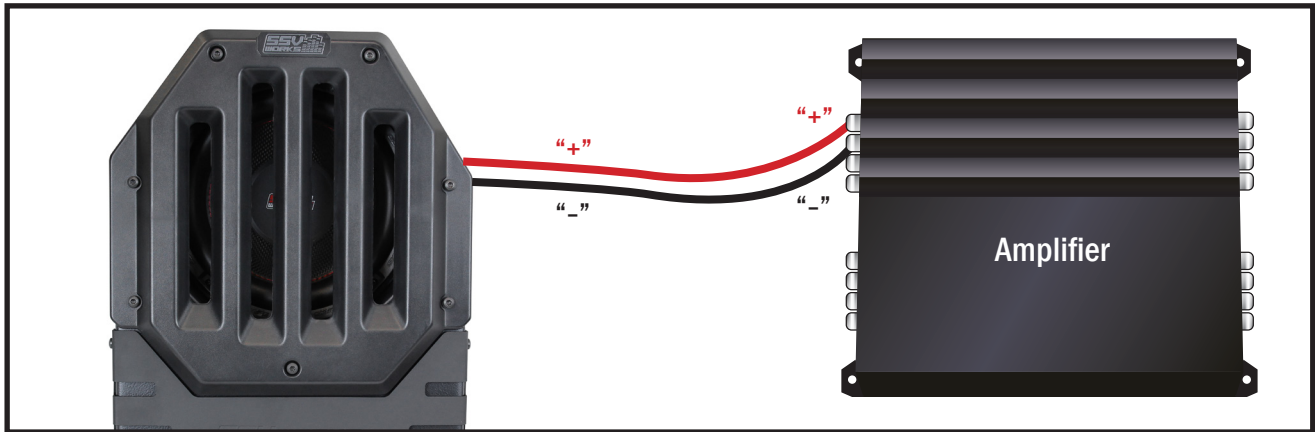

For proper sound, ensure the speaker polarity is correct connect the "+" to the "+" and the "-" to the "-" from the speaker wire to the amplifier. If using with an SSV Works complete system refer to the amplifier wiring instructions for more detailed wiring information.