

SS-SPP65

Tools Needed For Installation

Drill with drill bits
#2 and 3 Phillips Head Screwdriver

Wire Crimpers / Strippers
Thread Locker



Figure 1



Figure 2



Figure 3

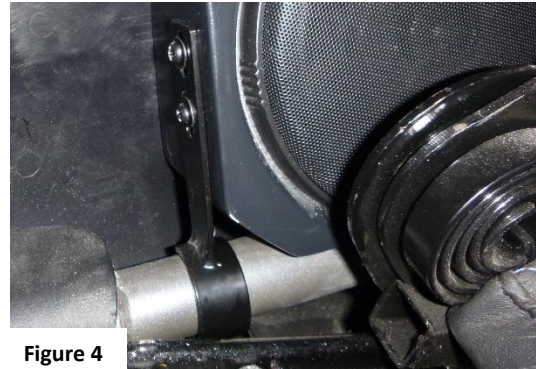


Figure 4



Figure 5



Figure 6

- 1) With the 1/4" drill bit, drill a hole in the enclosure for the speaker wire. After running the speaker wire in to the enclosure, seal the hole with silicone. (Figure 1).
- 2) With 1/8" drill bit, drill screw holes for mounting the speaker. Mount the speaker in the pod. (Figure 2).
- 3) Set pod in its location. (Figure 3)
- 4) Loosely attach the rear bracket.(Figure 4)
- 5) Loosely put in the front screw.(Figure 5)
- 6) While pulling up on the rear of the pod, tighten the rear bracket first, then tighten the front screw. (Figure 6)
- 7) Run the speaker wire to your music source.
- 8) Repeat for the other side.

*Loctite is recommended to prevent loosening of screws caused by vibrations