A.S.HELSINGÖ


Sideboards Mounting Instructions / Ingarö, Ensiö, Samsö

Before you begin

Please read these instructions carefully before you start assembling your new sideboard:

- Our sideboards are easy to assemble, but you need to have basic skills in using tools such as an electric screwdriver and clamps.
- Make sure you have assembled the IKEA METOD cabinet frames according to IKEA's instructions.
- Do check carefully that the cabinet frames are straight to ensure a beautiful result.
- Assemble the sideboard on a smooth and even surface, preferably on a thin carpet close to the area you are planning to place it. We also recommend having help to minimize the risk of damaging any of the parts.

Tools needed

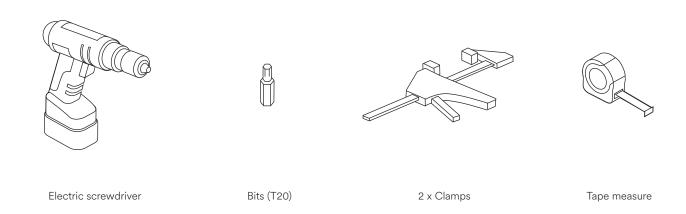


Sideboard styles


Our assembly instructions are style specific, not model specific. All the sideboard models, INGARÖ, ENSIÖ, and SAMSÖ come in three frame styles shown on the following pages. Each style has specific mounting instructions. You will find the style of your sideboard from the order confirmation.

Style: Plain

Contents


Width	120 cm	160 cm	200 cm
Screws (4 x 30 mm)	20	22	30
Doors	3	4	5
Side panels	2	2	2
Top panels	1	1	1

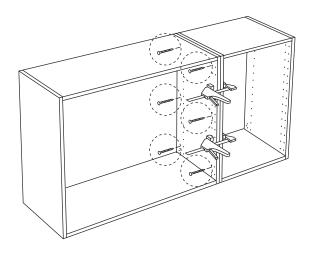


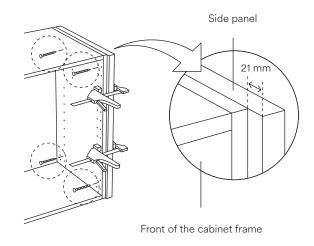


1. Attach the IKEA cabinet frames using six screws.

2. Install the side panels. They should stand out of the front of the cabinet frame by 21 mm.

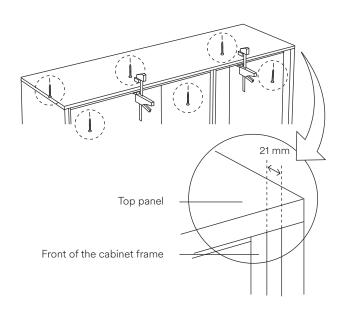

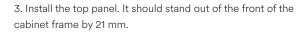


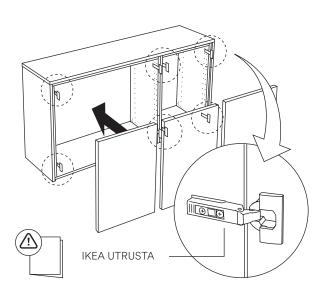

4. Install the door hinges following IKEA's instructions. Then attach the door fronts.

How it will look



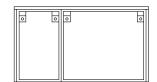


Front view


Back view

Safety

Please always follow the safety instructions that apply to your IKEA products, especially when securing the cabinet to the wall. It's essential as the weight distribution changes when the doors are open. Use the anchor brackets provided with the IKEA cabinets.

Please note that the design varies slightly depending on the selected model and the size of your sideboard.

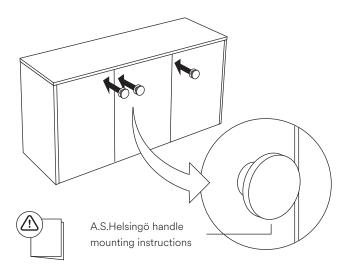

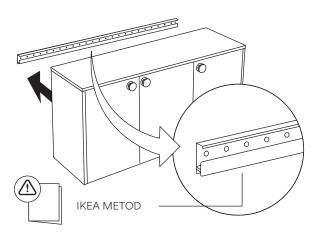



5. If you have selected handles or push-open handles, install them on your sideboard following the mounting instructions provided with the handles. 6. Fasten the suspension rail to the wall following IKEA's instructions. Then hang the sideboard on the rail. This phase only applies to wall-mounted sideboards.

Style: Frame

Contents


Width	120 cm	160 cm	200 cm
Screws (4 x 30 mm)	26	30	40
Doors	3	4	5
Side panels	2	2	2
Top panels	1	1	1
Bottom panels	1	1	1

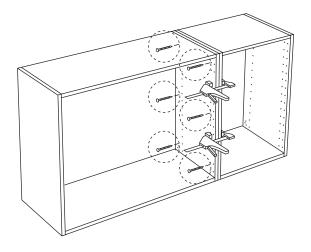


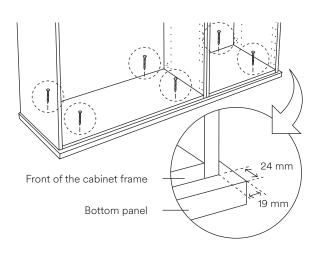

1. Attach the IKEA cabinet frames using six screws.

2. Install the bottom panel. It should stand out of the front of the cabinet frame by 24 mm.

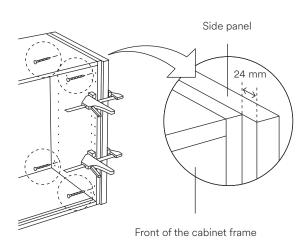


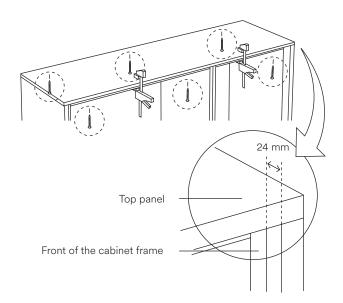


3. Install the side panels. They should stand out of the front of the cabinet frame by 24 mm.

4. Install the top panel. It should stand out of the front of the cabinet frame by $24\ \mathrm{mm}$.

How it will look

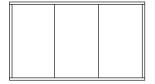

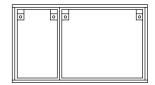


Front view

Back view


Safety

Please always follow the safety instructions that apply to your IKEA products, especially when securing the cabinet to the wall. It's essential as the weight distribution changes when the doors are open. Use the anchor brackets provided with the IKEA cabinets.


Please note that the design varies slightly depending on the selected model and the size of your sideboard.

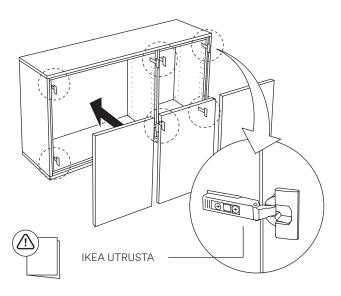



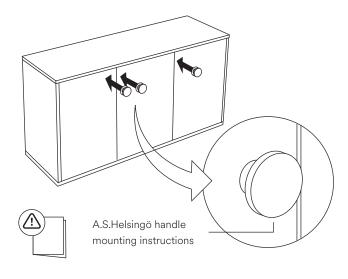

6. If you have selected handles or push-open handles, install them on your sideboard following the mounting instructions provided with the handles.

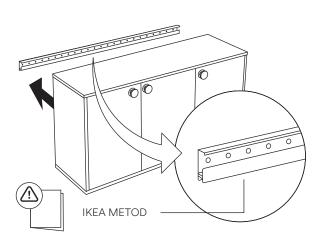



7. Fasten the suspension rail to the wall following IKEA's instructions. Then hang the sideboard on the rail. This phase only applies to wall-mounted sideboards.

Style: Spacer Panel


Contents


Width	120 cm	160 cm	200 cm
Screws (4 x 30 mm)	20	24	28
Screws (4 x 50 mm)	12	18	24
Doors	3	4	5
Side panels	2	2	2
Top panels	1	1	1
Bottom panels	1	1	1
Spacer panels	2	3	4

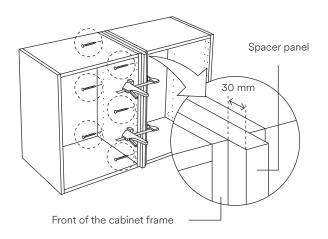

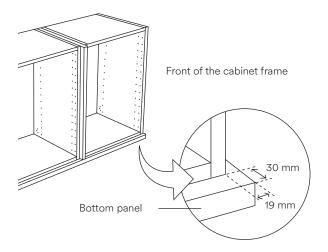

- 1. Attach the IKEA cabinet frames using six screws (50 mm). Install the spacer panels between the cabinets. They should stand out of the cabinet frame by 30 mm.
- 2. Install the bottom panel. It should stand out of the front of the cabinet frame by 30 mm.

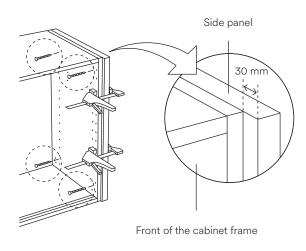

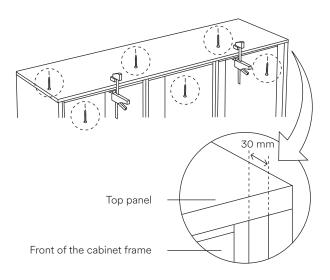

- 4. Install the top panel. It should stand out of the front of the cabinet frame by 30 mm. $\,$

How it will look






Front view

Back view


Safety

Please always follow the safety instructions that apply to your IKEA products, especially when securing the cabinet to the wall. It's essential as the weight distribution changes when the doors are open. Use the anchor brackets provided with the IKEA cabinets.


Please note that the design varies slightly depending on the selected model and the size of your sideboard.

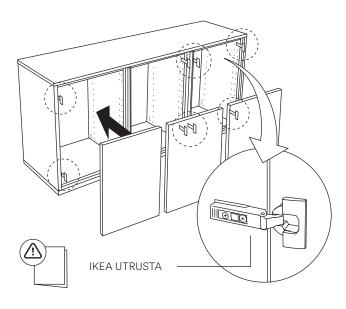

5. Install the door hinges following IKEA's instructions. Then attach the doors.

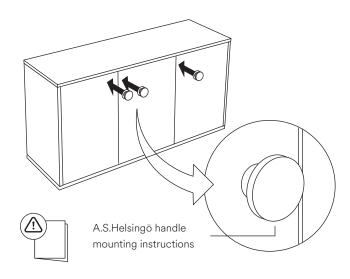

6. If you have selected handles or push-open handles, install them on your sideboard following the mounting instructions provided with the handles.

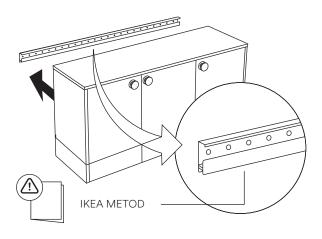

7. Fasten the suspension rail to the wall following IKEA's instructions. Then hang the sideboard on the rail. This phase only applies to wall-mounted sideboards.

We are happy to help! Email or call us for further assistance:

info@helsingo.com +358 20 718 1510