


ORION VAN GEAR

Surf/SUP Board Hooks

Proudly Made in Oregon



INSTALLATION GUIDE v2

support@orionvangear.com - (971) 267-2552




PLEASE READ BEFORE INSTALLATION

ORION VAN GEAR LLC STRONGLY RECOMMENDS PROFESSIONAL INSTALLATION OF AFTERMARKET ACCESSORIES TO YOUR VEHICLE. IMPROPER INSTALLATION COULD RESULT IN AN AUTOMOBILE ACCIDENT AND COULD CAUSE SERIOUS INJURIES OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ORION VAN GEAR PRODUCTS TO YOUR VEHICLE, CHECKING THE MOUNTING POINTS AND ATTACHMENTS PRIOR TO USE, AND REGULARLY INSPECTING THE PRODUCTS FOR WEAR AND OR DAMAGE. YOU MUST ENSURE THE PERSON(S) INSTALLING THE PRODUCT READ, UNDERSTAND, AND FOLLOW ALL INSTRUCTIONS AND WARNINGS BEFORE BEGINNING THE INSTALLATION. THE RESPONSIBILITY TO CORRECTLY INSTALL ORION VAN GEAR PRODUCTS IS YOURS AND MUST BE TAKEN SERIOUSLY. ORION VAN GEAR LLC WILL NOT BE HELD LIABLE OR RESPONSIBLE FOR DAMAGES OR PERSONAL INJURIES RESULTING FROM THE USE OF OUR PRODUCTS.



[LINK TO ORIONVANGEAR.COM](https://www.orionvangear.com)

- ALWAYS INSPECT YOUR PRODUCTS UPON ARRIVAL FOR SHIPPING DAMAGE OR MISSING PARTS
- REPORT MISSING OR DAMAGED PIECES TO OUR SUPPORT TEAM BEFORE BEGINNING THE INSTALLATION - SUPPORT@ORIONVANGEAR.COM




MATERIALS REQUIRED

REQUIRED

- 1x 3/16" Allen Key
- 1x 1 oz Anti-seize Lubricant
[RECOMMENDED ON ALL NYLON LOCKNUT JOINTS]

RECOMMENDED

- Extra Rags (to keep things clean)

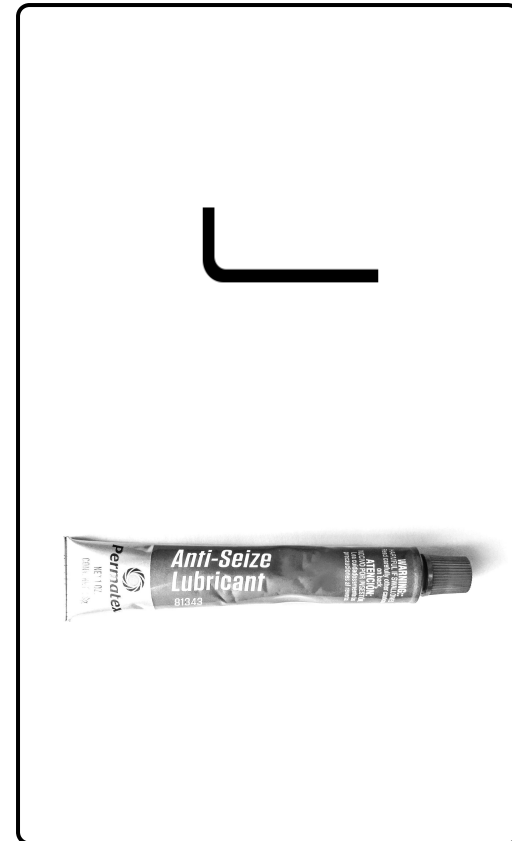

**Included hardware shown on next page*



INCLUDED HARDWARE


Hooks 2x



Hook Clamp 2x



Back Clamp 2x

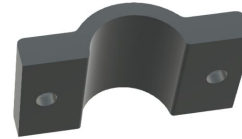

Hand Screw 2x



Cotter Pin 2x



Tube Cap 2x



1/4 - 20 Hardware




4x
3/4" BL

HEX NYLON NUT BL



4x




STEP 1

1A - Determine the location and height on your Ladder and/or Board Poles where you want the hooks to mount.

1B - Secure 1x preassembled Hook/Front clamp assembly and 1x Back Clamp to the ladder/board pole at height determined in 1A using 2x 3/4" SCREWS & 2x NYLON NUTS. {Apply Anti Seize}

1C - Repeat above steps for additional hooks

3/4" BL SCREW & BL
NYLON NUT (2 EA)
[1/4"-20 HARDWARE]
{APPLY ANTI SEIZE}

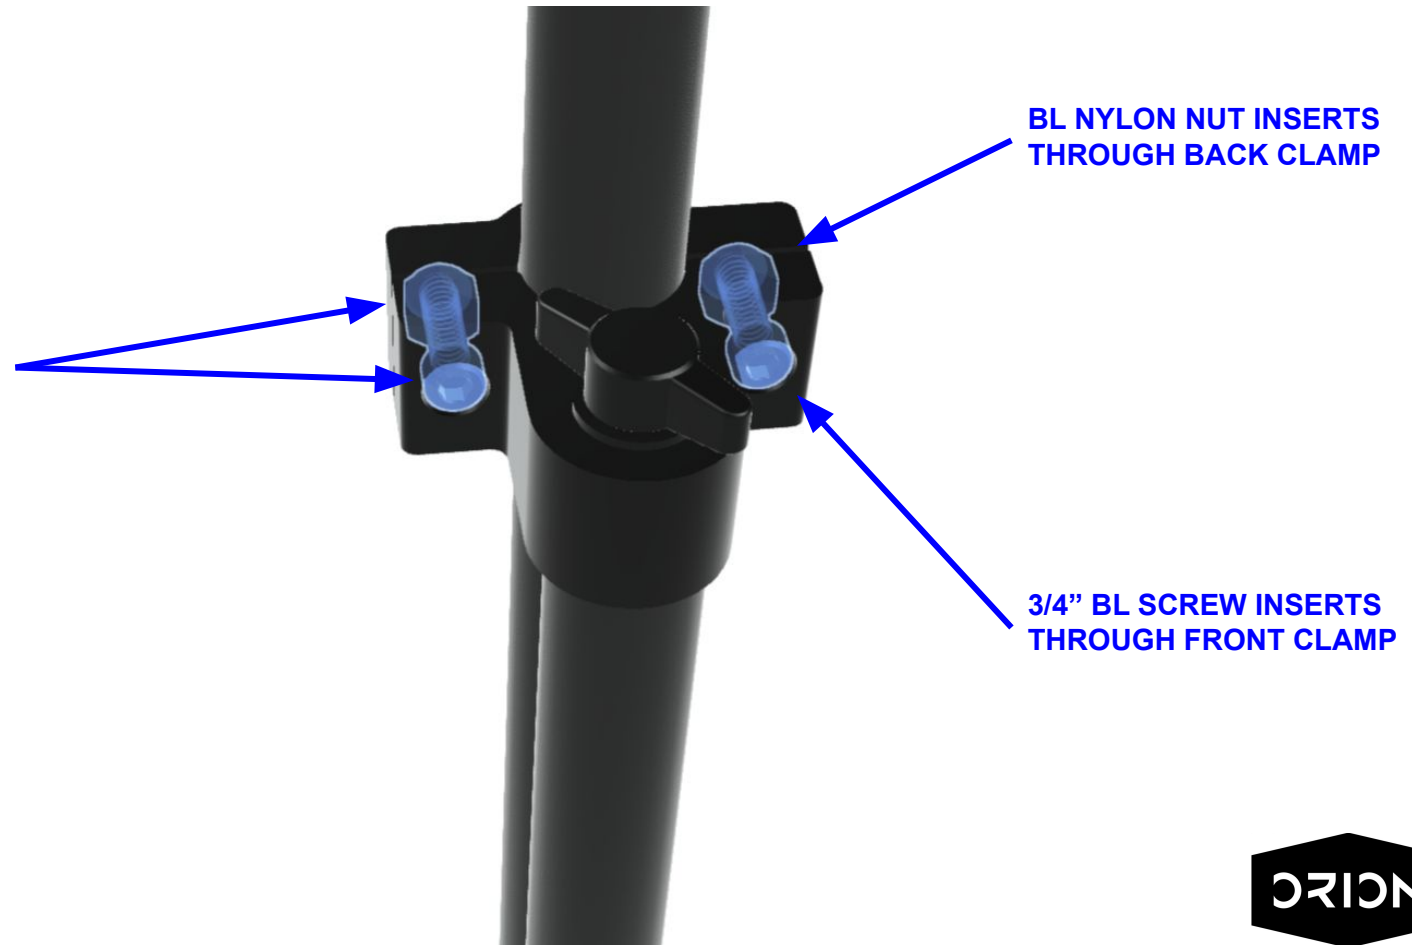

ORION

STEP 2

2A- Hooks are designed to be locked into place with included cotter pins at 5 possible 45 degree orientations, either perpendicular to the van or parallel (right or left facing) to the van. To change orientation, remove the cotter pin, loosen the hand screw* and rotate, then secure cotter pin and tighten hand screw*.

TOOL-LESS 90-DEGREE ROTATION
(PICTURED ATTACHED TO A BOARD POLE AND FOLDED FLAT)




* Periodically check hand screw as road vibrations can loosen it over time



**FOR ANY QUESTIONS REGARDING INSTALLATION
OR REPLACEMENT PARTS CONTACT US:**

 support@orionvangear.com

 (971) 267-2552

STOKED WITH YOUR NEW ORION PRODUCTS?

Help us spread the word about by tagging us in your photos and videos (@OrionVanGear) on Instagram, Facebook, and TikTok! We can't wait to see your adventures and hear your stories!

 [instagram.com/orionvangear](https://www.instagram.com/orionvangear)

 [facebook.com/orionvangear](https://www.facebook.com/orionvangear)

 [tiktok.com/@orionvangear](https://www.tiktok.com/@orionvangear)



WIN UNIQUE PRIZES 🏆

Leave an eligible photo/video review on our website after installing our products to automatically enter to win unique prizes. You will receive a unique review link via email 2-3 weeks after your rack is delivered so keep an eye out! Or use this link: <https://orionvangear.com/pages/reviews>

FOLLOW, SNAP & TAG TO WIN!



Follow us
[@orionvangear](https://www.instagram.com/orionvangear)



Snap it



Tag it
[#OrionVanCrew](https://www.instagram.com/hashtag/orionvancrew)



Win Prizes!



ORION VAN GEAR PRODUCTS
ARE PROUDLY MADE IN THE USA.

