

1 Thread comp onto the muzzle as far as it will go while still staying in line with the slide

2 Flip the gun over and ensure the comp is timed correctly with the gun.

3 Using the provided set screws, insert one screw on each side and turn until they are snug against the barrel.


4 Insert the remaining two screws on each side and turn until second set screw is tight against the first.

INSTALLATION INSTRUCTIONS

Make sure everything is tightened up and in place.

Tools Needed: 0.5" Allen Wrench

IMPORTANT: If screws are not threading in easily, do not force. Replace with an extra screw provided in the bag. Nothing should be forced into place. If you are having any issues getting the comp to attach, please do not use and contact us for a replacement.

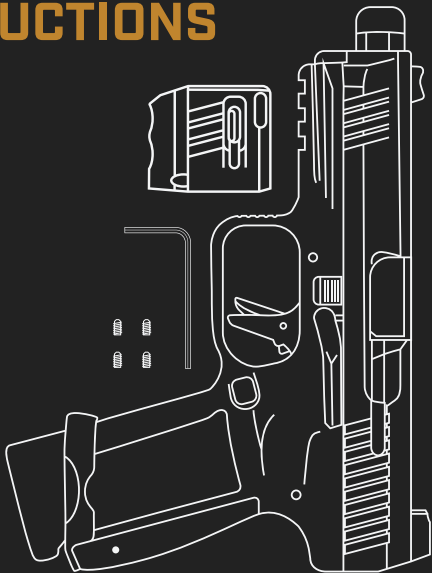

45BLAST

TP9 Elite Threaded