


# Glass Limo Instructions

## MONOPOD/TRIPOD ATTACHMENT

Monopods and tripods can be attached to the side of the backpack by putting two legs into the stretchable bottom pocket and then attaching it with two "tripod straps".



**Step 1:** Locate the "tripod" or "monopod" straps with the two buckles inside of the backpack.

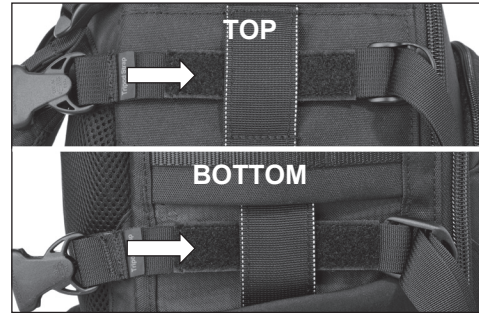

**Step 2:** Thread the "tripod" or "monopod" straps under the webbing near the top of the bag and directly above the stretch pocket (two locations).



**Step 3:** The side release buckle should be located on the side of the "tripod" straps. Adjust the strap position on the bag so it is in this position.



**Step 4:** The ladder lock buckle should also be located on the side of the tripod. Use this buckle to tighten the strap.

## ATTACHING A MODULAR BELT



Remove the Glass Limo waist belt. Open the rear lumbar panel and slide your Thin Skin Belt, Pro Speed Belt or Steroid Speed Belt in place. Secure the hook and loop panel on the bottom of the bag. (belts sold separately)

## BIG GLASS SUPPORT



Use the foam donut to secure your 300 f/4 or similar lenses in the bottom of the bag, or remove it when using larger lenses up to a 600 f/4.

## ATTACHING MODULAR COMPONENTS



Expand the capacity of your backpack by using the Modular rails to attach up to three modular or Skin pouches. (pouches sold separately)



Open the rear panel on any modular or skin pouch and slide it behind the modular rail. To lock in place, use the plastic tab to slide through the webbing loop attached to the rail.



The included foam yolk can be used to secure large glass to the back of the bag.

# Glass Limo Instructions

**thinkTANK** photo  
Be Ready "Before The Moment"

## REMOVABLE WAISTBELT



The included waist belt is removable by unthreading the webbing through the buckle.

## RE-ATTACHING THE WAISTBELT



To re-attach the waistbelt, thread the webbing completely through the buckle.



Be sure to "double back" or "reverse thread" your webbing to lock it into place.