

stealthRO™₁₀₀ / stealthRO™₂₀₀

Membrane Flush Kit Instructions

This kit allows you to bypass the flow restrictor and "power flush" the membrane(s) to remove scale build-up and organic and inorganic contaminants from the membrane surface. By flushing the membrane(s) regularly you can help extend the life of the membrane(s). Ideally, you want to flush the membrane(s) for 3-5 minutes directly after every time you use the Reverse Osmosis unit.

Installation instructions:


1) Remove the existing flow restrictor from your Reverse Osmosis unit by pushing in on the collets on the quick connect fittings and pulling the tubing out. Leave the short piece of black tubing connected to the automatic shut-off valve.



2) Insert flow restrictor into flush kit by pushing the open ends of the tubing into the quick connect fittings. Make sure the arrow is pointing in the direction of water flow (away from the RO unit)




Instructions Continued on Back

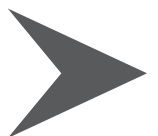

stealthROTM₁₀₀ / stealthROTM₂₀₀

Membrane Flush Kit Instructions

3) Connect flush kit to the short piece of tubing on the A.S.O.V. The longer piece of black tubing connects to the open end of the "Y" fitting. The ball valve on the blue product water line should be open (parallel to the blue line) and the ball valve on the flush kit should be in the closed position when producing purified water as displayed below.

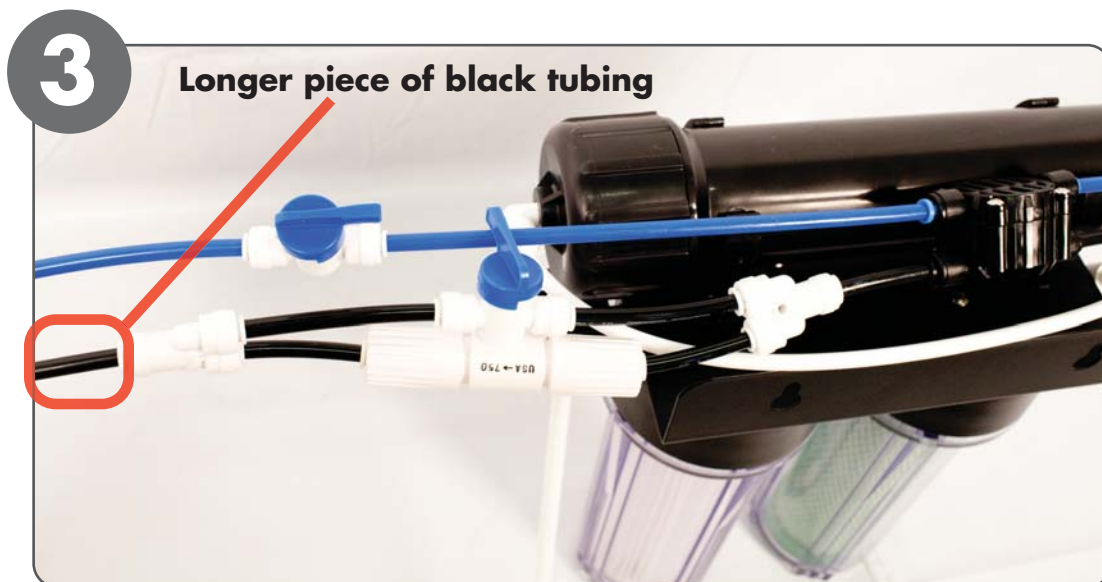

4) To "power flush" the membrane(s) simply turn the ball valve (on the blue product line) to the off position and turn the ball valve on the black waste water line to the open position (parallel to the black waste water line). Flush membrane(s) for 3-5 minutes after each use or at least once a week. This will extend the life of your membrane(s). Once finished flushing turn both the ball valve handles back to their position displayed in step 3 for normal operation.



HydroLogic[®]
PURIFICATION SYSTEMS

888-426-5644

www.hydrologicsystems.com

info@hydrologicsystems.com



Useful Video Links

How to Operate Quick Connect Fittings: <http://youtu.be/EhWXj6DWcH0>

Stealth RO100 and Stealth RO200 Membrane Flush Kit Instructions: <http://youtu.be/0tXRFbHtQh8>