


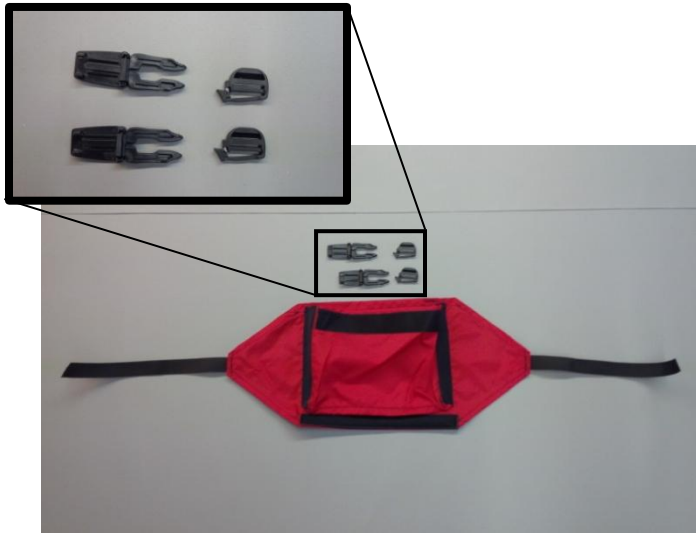

Removable Back Pocket (20RES-40)

1. Install tension sliders onto the webbing loops in the rear interior of the PFD.



2. Lift up upper and lower rear Velcro panels.



3. Sandwich bottom Velcro edge of Back Pocket in the lower Velcro Panel.



4. Fold Pocket back and slide annex clips into webbing loops.



5. Slide the other half of the annex clip through the webbing above the Velcro strip on the back of the PFD and close the clip.



6. Fold upper Velcro panel down to close and secure the pocket



Form Flow PRO Removable Back Pocket is now installed and ready for use.



7. Bring webbing straps around the sides of the PFD and secure in the inner tension sliders from Step 1.

