

Basic Worm Farm Quick Assembly

1. Set the Collection Base

2. Install the Worm Ladder


Set the worm ladder inside the base. The worm ladder helps worms that have fallen into the collection tray climb back into the working tray.

3. Add a Stacking Tray

This tray is referred to as the "Starting Tray."


4. Add the Lid

Your Worm Farm Composter is now ready to add bedding materials and worms.

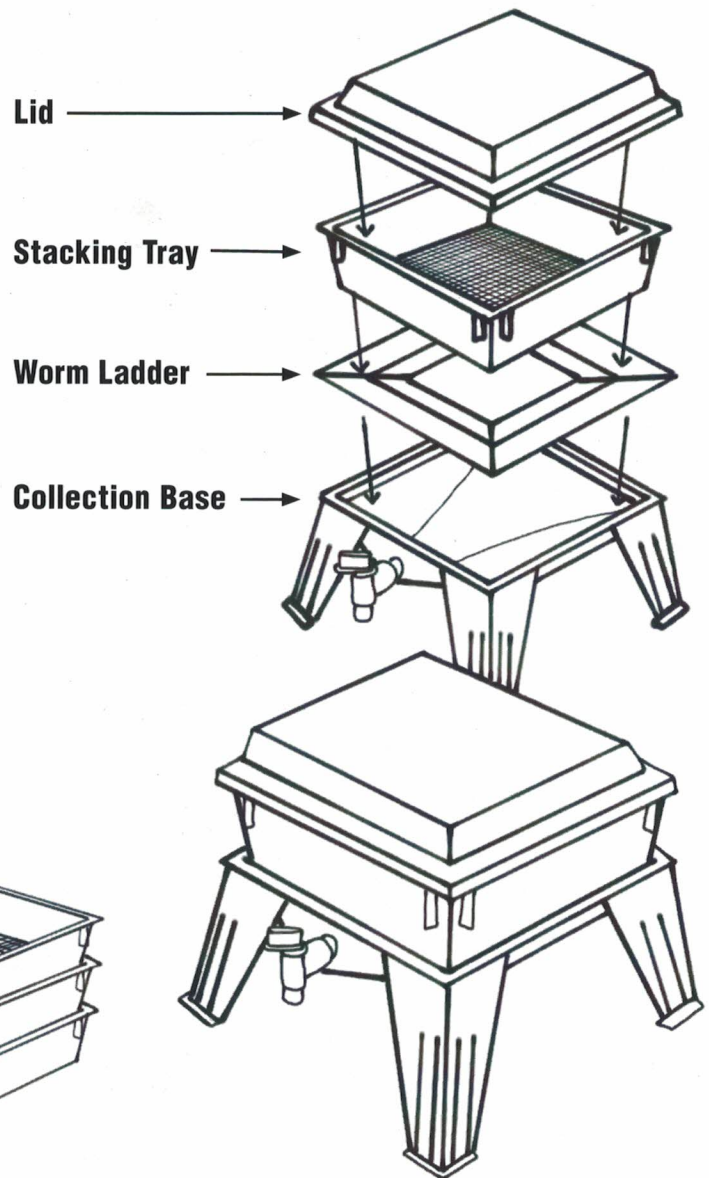

Set Aside the Remaining Trays

The remaining trays are added one at a time as they are needed. It may take 3–4 months to put all four trays into operation.

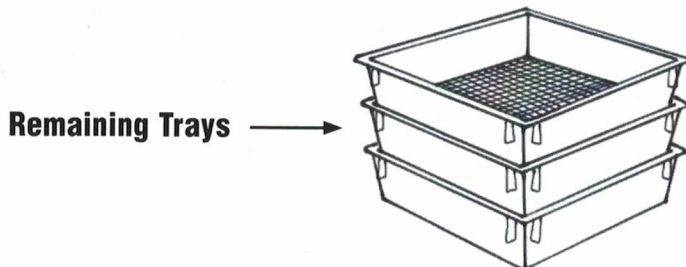

Find a Good Location For Your Worm Farm

Worms do best in a bedding temperature range of 55–75°F. The bedding temperature is generally an average of the air temperature. So, if it's 45°F at night and 75°F during the day, the average temperature is 60°F, and your worms will be fine.

The Worm Farm can be kept outdoors as long as it is protected from direct sunlight and not exposed to rain and wind. A porch, patio, or balcony with an overhang is a good location. Placing it underneath a leafy tree can also work. The Worm Farm should be moved indoors during conditions of extreme weather (temperatures below 34°F or over 90°F).

Keeping the Worm Farm inside, in a kitchen, garage, basement, or utility area, also works. As long as the farm is maintained correctly, it will not have an offensive odor.