


### Water Hammer Arrestor Kit includes:

- 1 - Water Hammer Arrestor
- 1 - \*Reducer Bushing (for 1', 1 1/2" and 2" kits ONLY)
- 1 - Tee
- 1 - 4" Nipple
- 1 - Elbow
- 1 - Close Nipple
- 1 - Union
- 1 - Roll of pink Teflon<sup>®</sup> tape

# Water Hammer Arrestor Kit

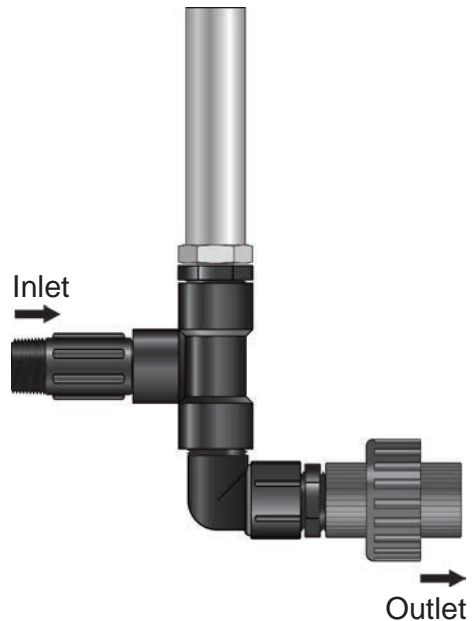

**NOTE:** Installation illustrations are to be used as a reference guide only.



2090 Sunnydale Blvd. • Clearwater, FL 33765  
1-800-523-8499 • [www.dosatronusa.com](http://www.dosatronusa.com)



LIT-EN-WHA-KITS

- |               |                              |
|---------------|------------------------------|
| <b>3/4"</b>   | <b>Part #: WHA34-SS-KIT</b>  |
| <b>1"</b>     | <b>Part #: WHA100-SS-KIT</b> |
| <b>1 1/2"</b> | <b>Part #: WHA150-SS-KIT</b> |
| <b>2"</b>     | <b>Part #: WHA200-SS-KIT</b> |

WHA Kit includes parts listed.  
Dosatron injector sold separately.

# Water Hammer Arrestor Kit

## Step-by-Step Assembly Instructions

1

Prepare all male threads by wrapping 5 to 6 turns of **Teflon® tape** around them. Make sure to wrap tape clockwise to prevent unravelling.




2

Attach **4" Nipple** to center opening of the **Tee**.



3

Holding the **Tee** so that the **4" Nipple** faces to the left, install the **\*Reducer Bushing** and **Water Hammer Arrestor** on the top opening of the **Tee**.

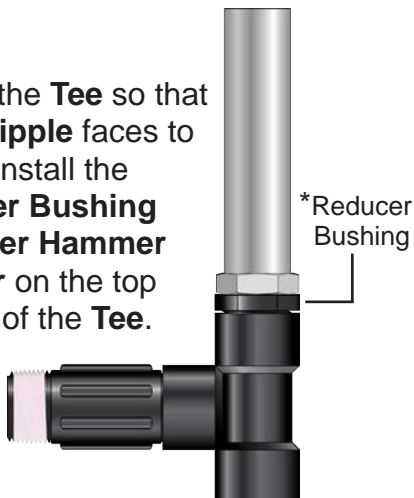

Use **\*Reducer Bushing** for 1", 1 1/2" and 2" kits only, not for the 3/4" kits.

4

Attach the **Close Nipple** to the **Elbow**.



5

Install the **Elbow** at the bottom opening of the **Tee**. Make sure the **Nipple** faces to the right.



6

Attach the **Union** to the **Close Nipple**.

