


# Clipper Vac® Attachment

## Compatible with Andis® AGP®



- Step 1** Remove the clipper drive assembly service cap.
- Step 2** Remove the two Phillips screws that are holding the drive assembly.
- Step 3** Place the Clipper Vac® Attachment on the clipper in the place of the drive assembly cover plate.

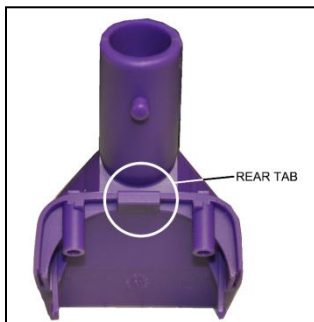

- Step 4** Tilt the head toward the back of the clipper and push to insert rear tab into clipper housing.
- Step 5** After inserting tab, tilt forward and install enclosed screws.
- Step 6** Make sure that the screw heads are completely touching the clipper attachment.

**Note:** *DO NOT OVER-TIGHTEN THE SCREWS! Doing so risks stripping the inside of the clipper.*

M.D.C. Romani, Inc./Clipper Vac® is not affiliated with, authorized by or endorsed in any way by Andis®.