




Vanity Installation Manual



Hammer

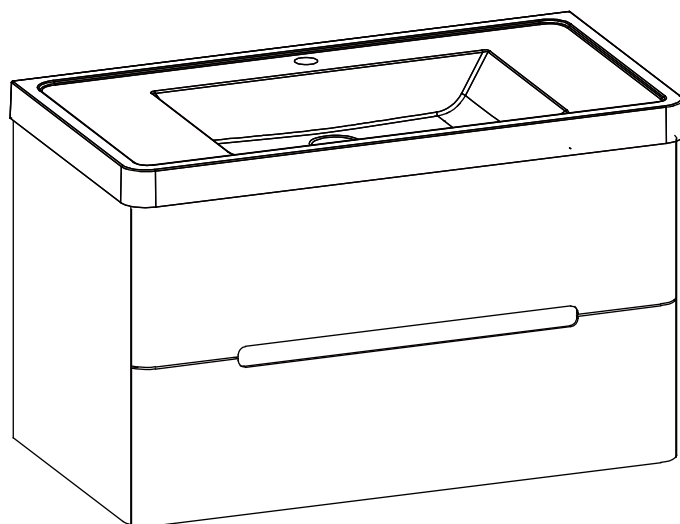


Pencil




Drill




Ruler








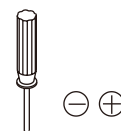Spirit level




Screwdriver



Silicone

A  X1	B  X1	C  X1	D  X6	E  X6
---	---	---	---	---


1

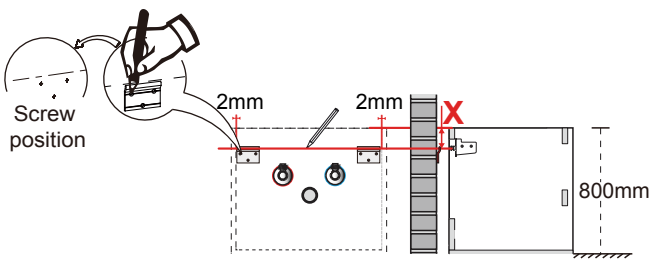




Distance from the hanging piece to the ground=800-X





2

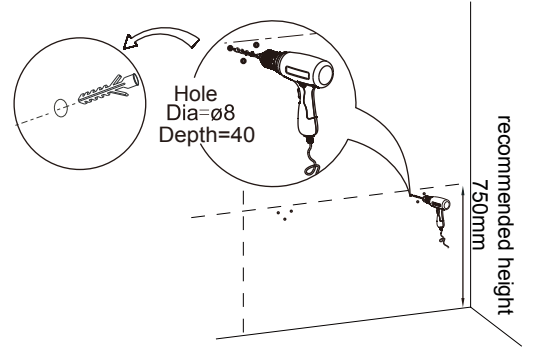


3

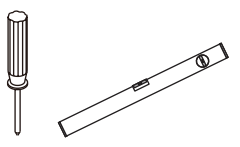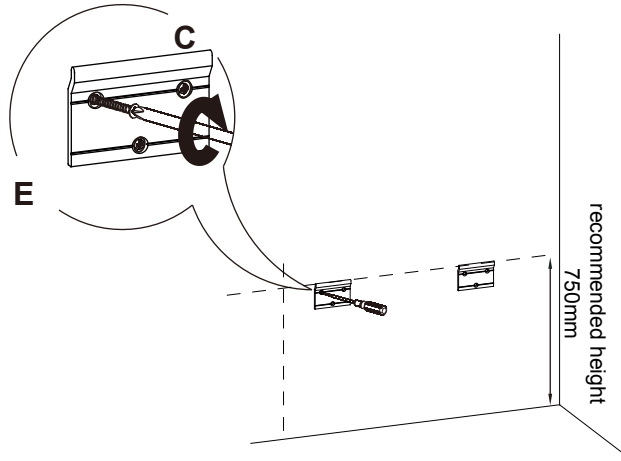

4

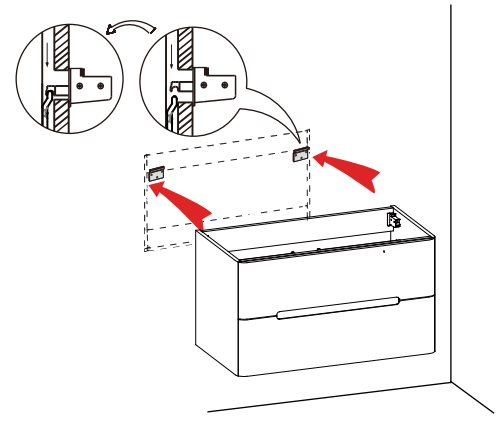

5

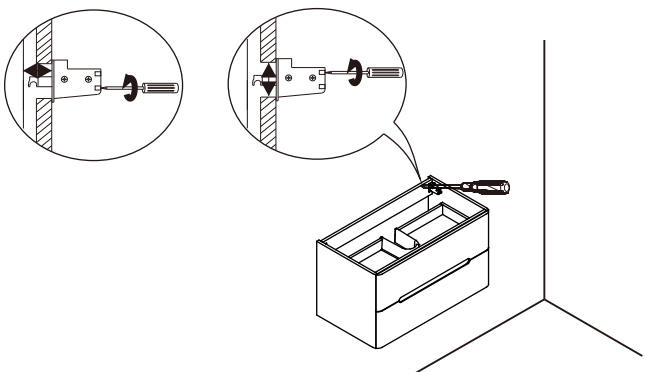

6

