




# Vanity Installation Manual



Hammer

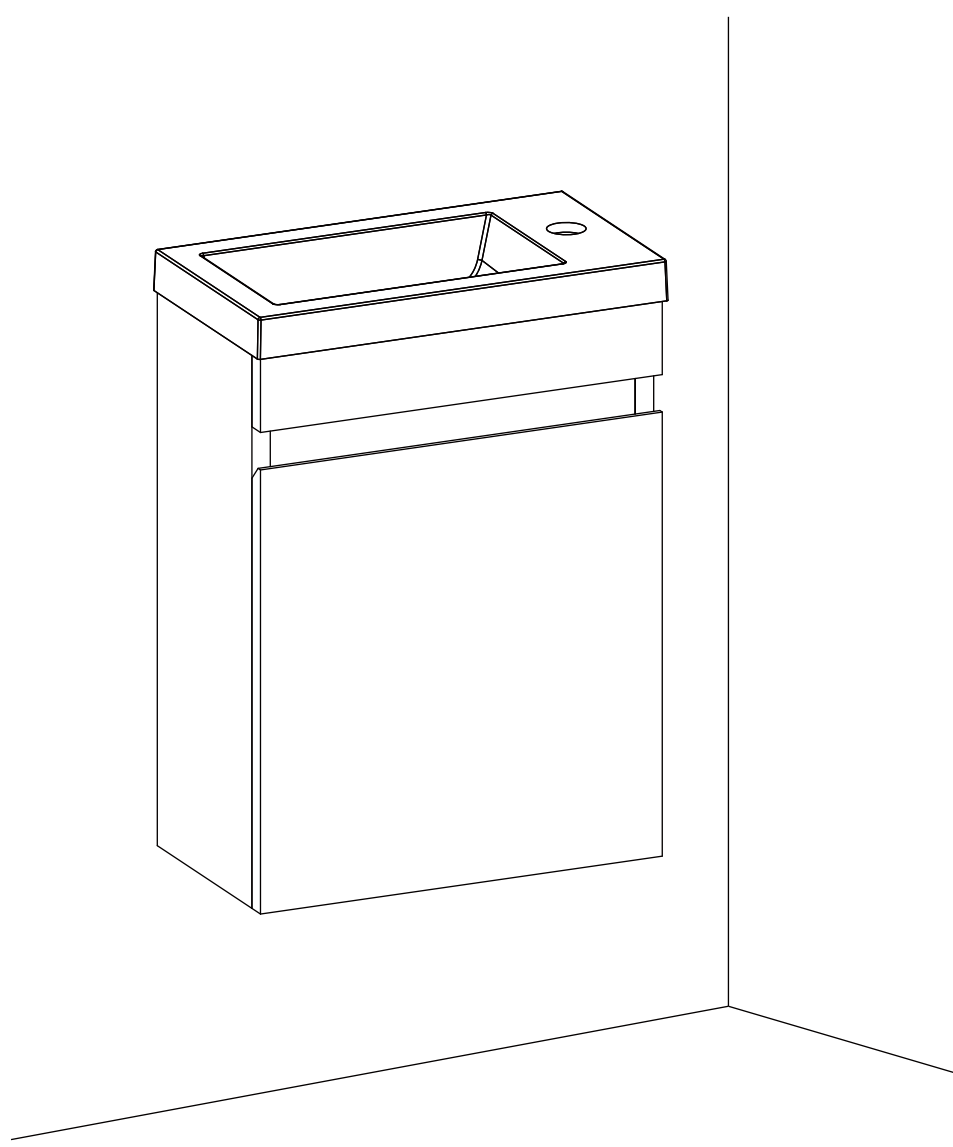


Pencil




Drill




Ruler




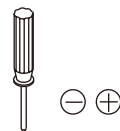



Spirit level




Screwdriver





Silicone

<b>A</b>  X1	<b>B</b>  X1	<b>C</b>  H1X4	<b>D</b>  H2X4	<b>E</b>  H3X2
---	---	---	---	---



1

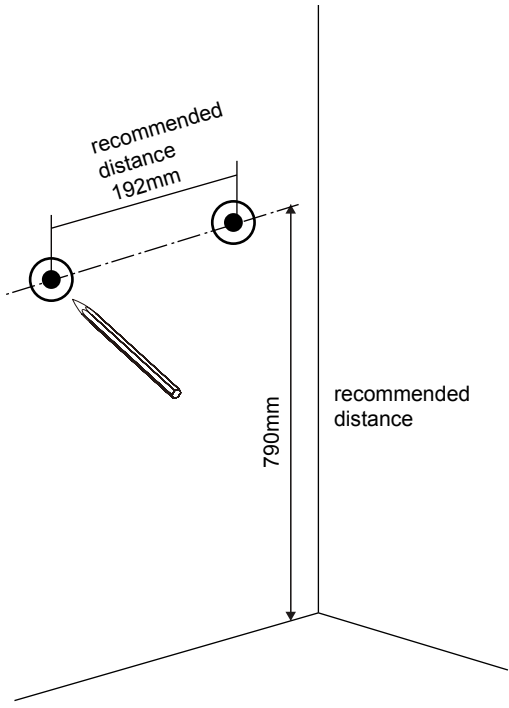

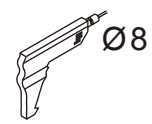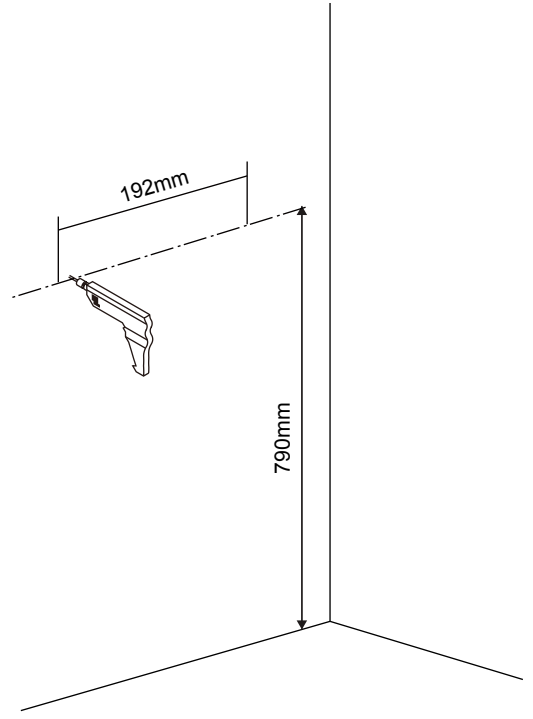


2

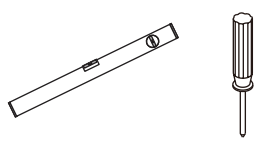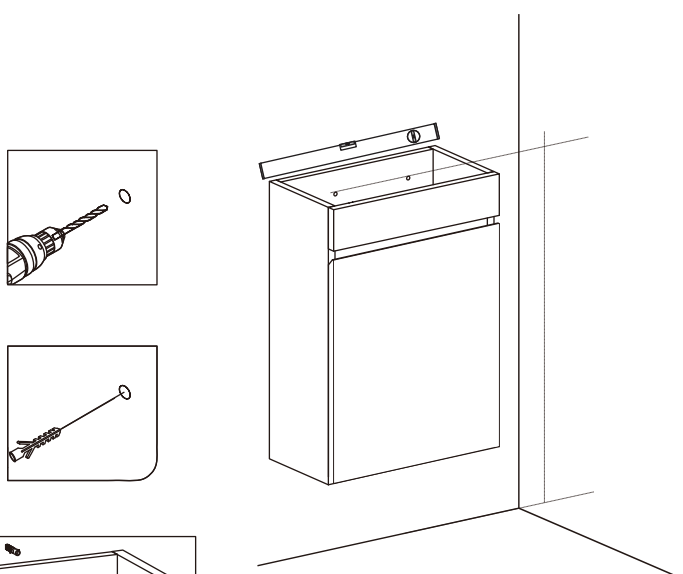

3



- C**  
  
 H1X4
- D**  
  
 H2X4
- E**  
  
 H3X2

4

