

# CBR 250 FE Install

## Step 1



Remove grab rail bolts (yellow arrows) remove side pod bolts (white arrows) And clips (green arrows) pop the side cover off (blue arrows)

Tools needed

12mm socket and ratchet

10mm socket

Flat head screwdriver

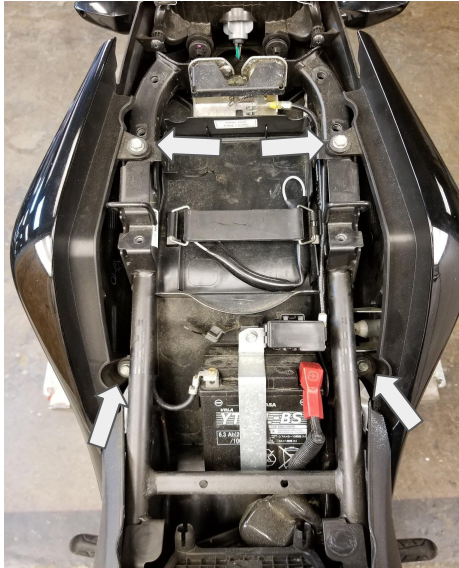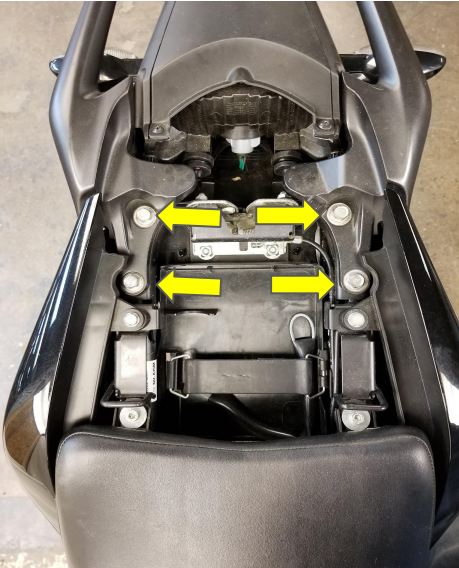

## Step 2

Remove stock tail section harness (red arrow)

Remove tail light cover screws and cover (yellow arrows)

Remove belly pan clips (blue arrows)



Remove tail section bolts (green arrows) you will be using these again later on the install

Tools needed

Phillips head screwdriver



Flat head screwdriver

12mm socket and ratchet

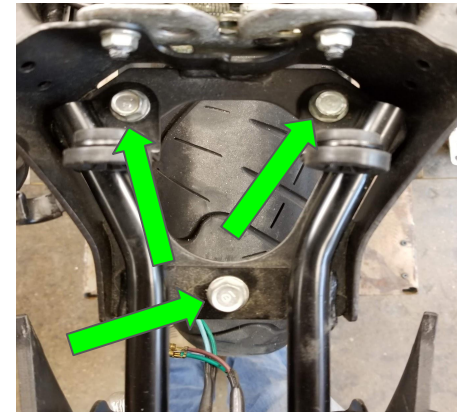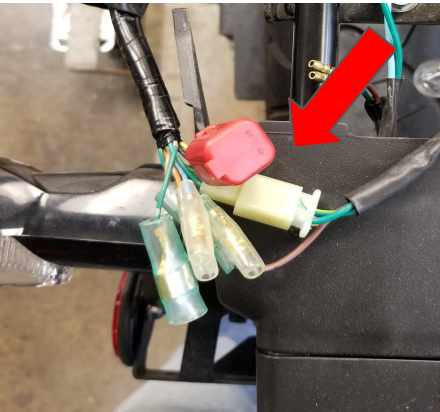


## Step 3

Remove the rubber tail light bumpers (red arrow) and install on the new tail light bracket (white arrow)  
The (green arrow) is the stock bolts that you are going to be using in the next step

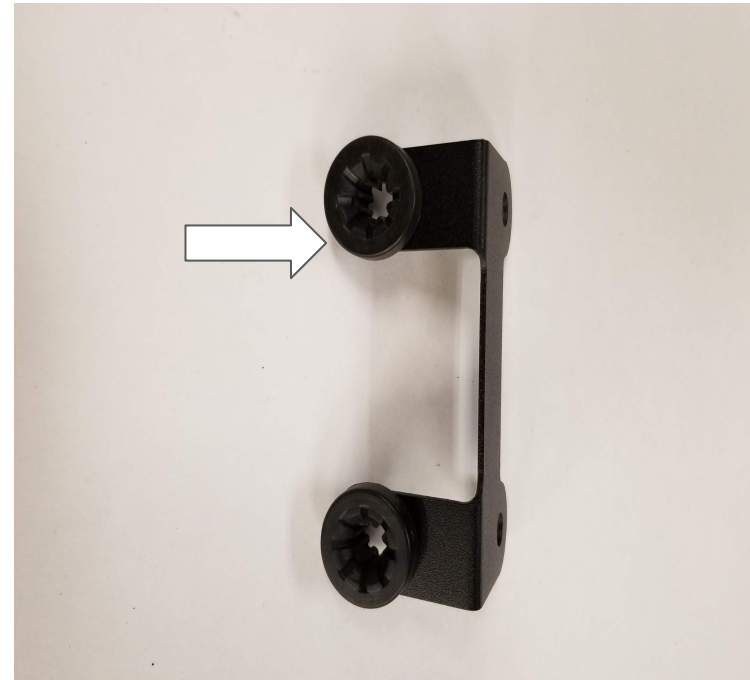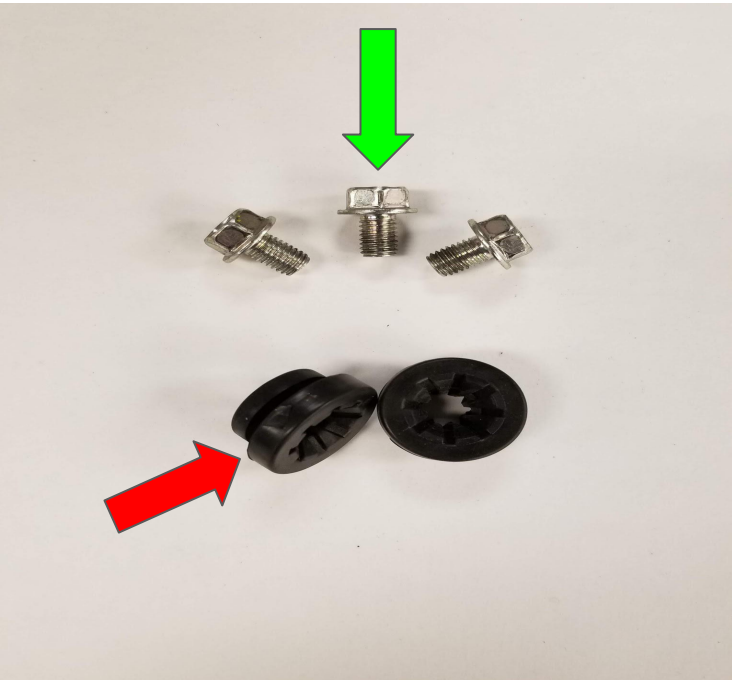

## Step 4

Install new NRC tag holder onto new turn signal bracket (yellow arrows) with provided hardware  
Install new turn signal assembly and tail light bracket (green arrows ) using the stock bolts you removed before. Reinstall tail light and body panels

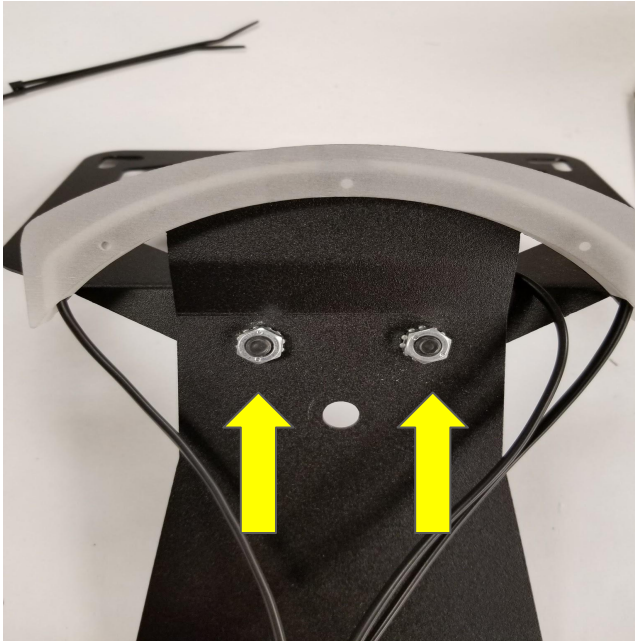

Tools needed  
10mm wrench  
4mm allen key  
12mm socket and ratchet

