

Railway Sleeper Pond Kit Build Instructions

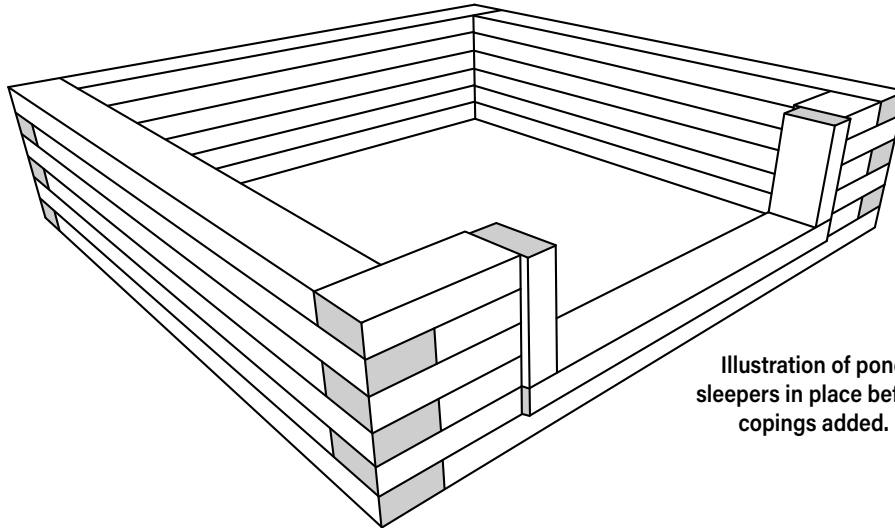


Illustration of pond sleepers in place before copings added.

STEP 1 - Lay out the first course of sleepers, see your pond map sheet.

STEP 2 - Lay the second course and set in to position, measure diagonals to ensure they are within a couple of cm to ensure square.

STEP 3 - Bolt together using bolts provided, using an impact driver.

Screw in bolts avoiding knots so they can countersink with the head of the bolt being flush so the next course can be layed flat on top.

STEP 4 - Continue each course screwing together, pay extra attention to the corners of the pond first, these are where you want it to look best.

Tip - use a spirit level to ensure you are installing the sleepers vertically, you don't want a wonky pond!

STEP 5 - If you have a window included in your kit, ensure you step the window piece out to match your glass thickness.

Loose stack (*don't bolt down*) the full window course to ensure a good fit and that the corners look good before bolting down.

STEP 6 - Once built you need to install your glass if you have a Pond Viewing Window, please see our video for the run through on this stage, if you have no window you can skip this stage.

STEP 7 - Install your underlay, this can be stapled, glued using sealant or clamped on, whichever suits you best. Just ensure no staples pull and face inwards! We use galvanised heavy duty staples.

STEP 8 - Install your liner, it will roll out on the length/longest side, once rolled out you will need to take off your shoes and get each corner at the top of the pond clamped on.

Once each corner is clamped at the top, then use your foot to push the liner into each bottom corner, you may need to re do the clamps at the top. Ensure there are no tight areas and that the liner can easily touch the walls on every side.

STEP 9 - Fill your pond, (*wait 24 hrs if you have a window, bottom drain or underwater returns*).


You fill your pond before putting the copings on, this allows you to pull the liner tight and get a great finish on the top of the pond.

STEP 10 - fit your coping planks, you need to cut these yourself, choose mitre or just cut at 90° to the correct lengths.

Tip - If a plank is warped at all, simply put more screws in to get it flush.

STEP 11 - Send Layzee Living a picture/video and review your experience!

STEP 12 - Enjoy your pond, please test you water to ensure it's safe for your beautiful fish, use dechlorination to detoxify the tap water.

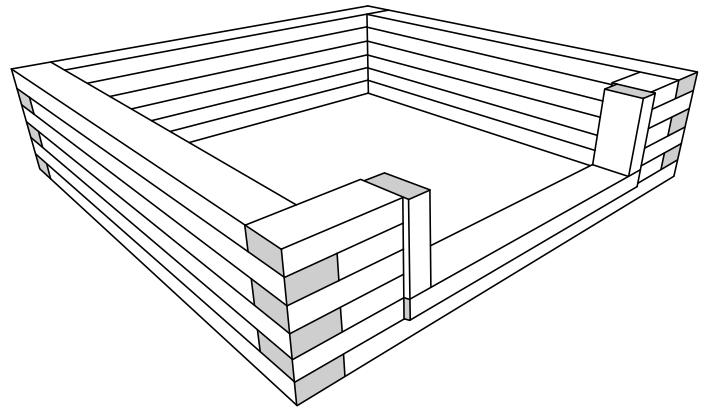

Layzee Living can supply everything you need to complete your pond!

- **Filters**
- **Bottom Drains**
- **Waterfalls**
- **Window Upgrades**
- **Pumps**
- **Pond Liner**
- **Pipes & Fittings**
- **Accessories**

For all your pond needs visit - www.layzeeliving.co.uk



0207 8673959

info@layzeeliving.co.uk