


Cable Management


Assembly and User Guide

For Stand Up Desk

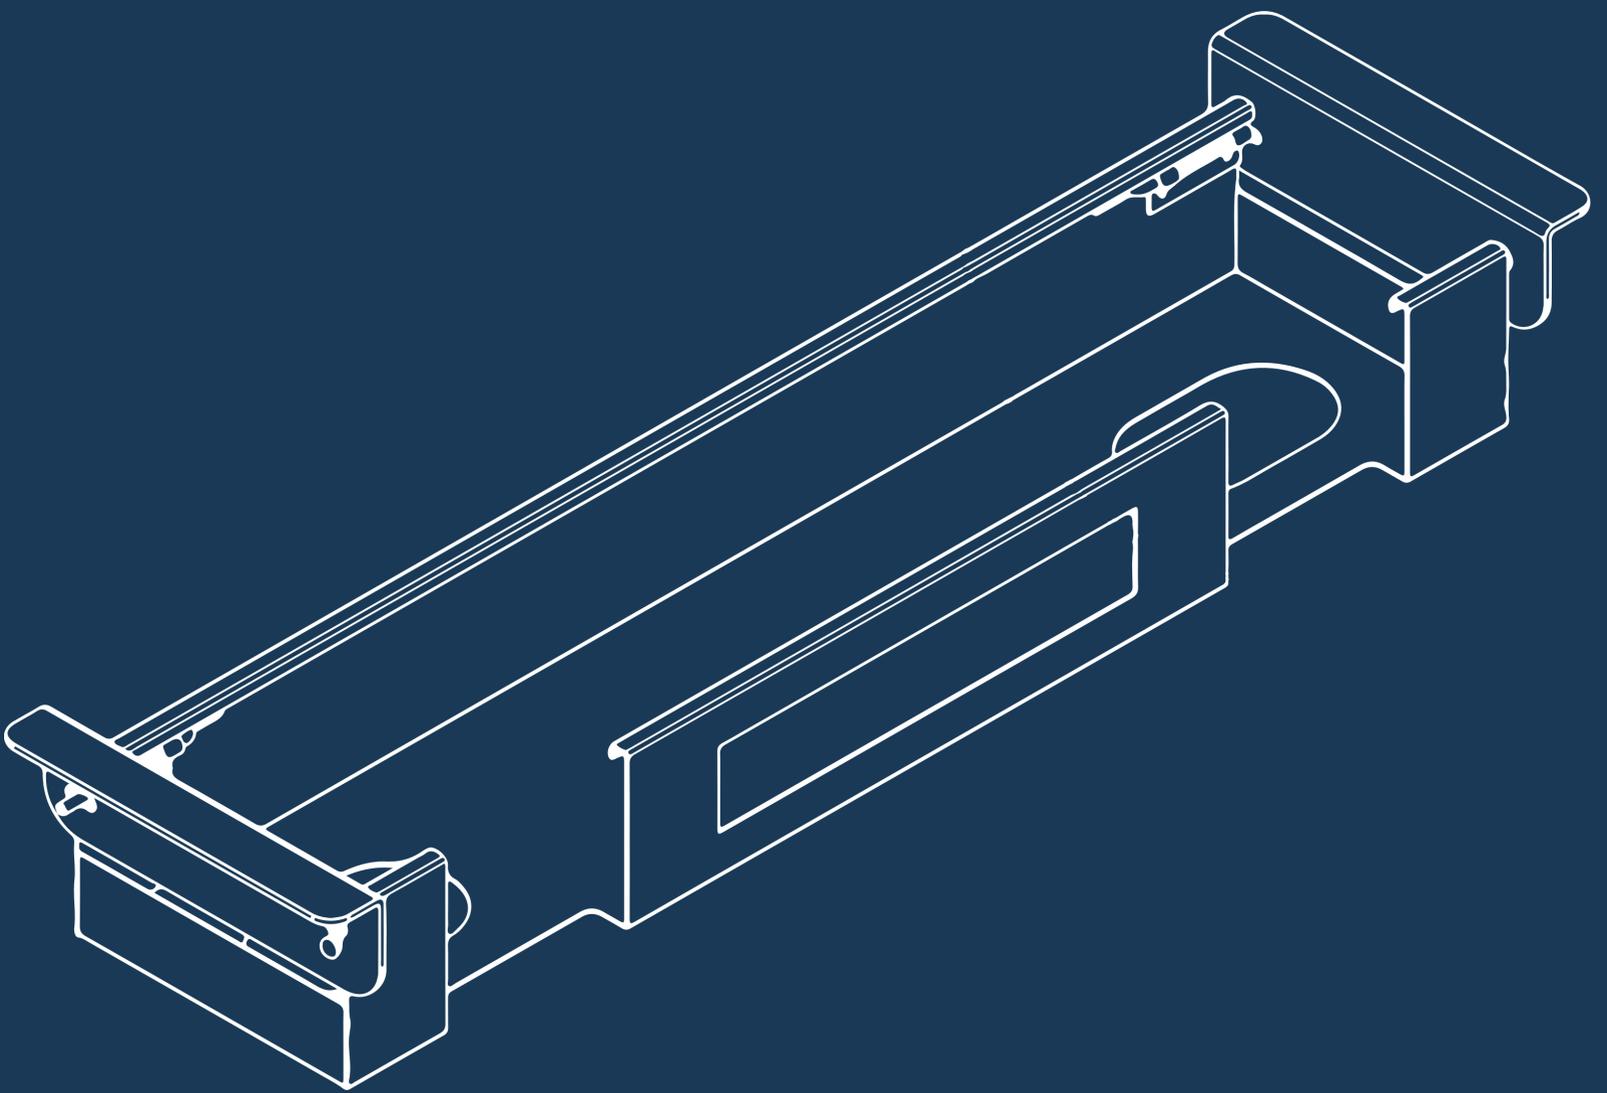


RECESS


In the Box

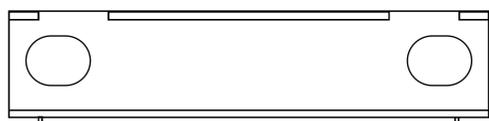

Cable Tray x 1

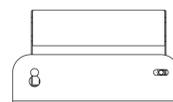

Mounting Brackets x 2



Powerboard x 1
(Optional)



Power Cord x 1
(Optional)



Medium Screws
x 5



Machine Screws
x 3 (these can be ignored)

NOT IN THE BOX


Bring a drill, it'll be handy



Power Drill x1

1

Attach the **Mounting Brackets** onto both sides of the tray. We'll use the tray as a guide for where to affix the mounting brackets on the top.

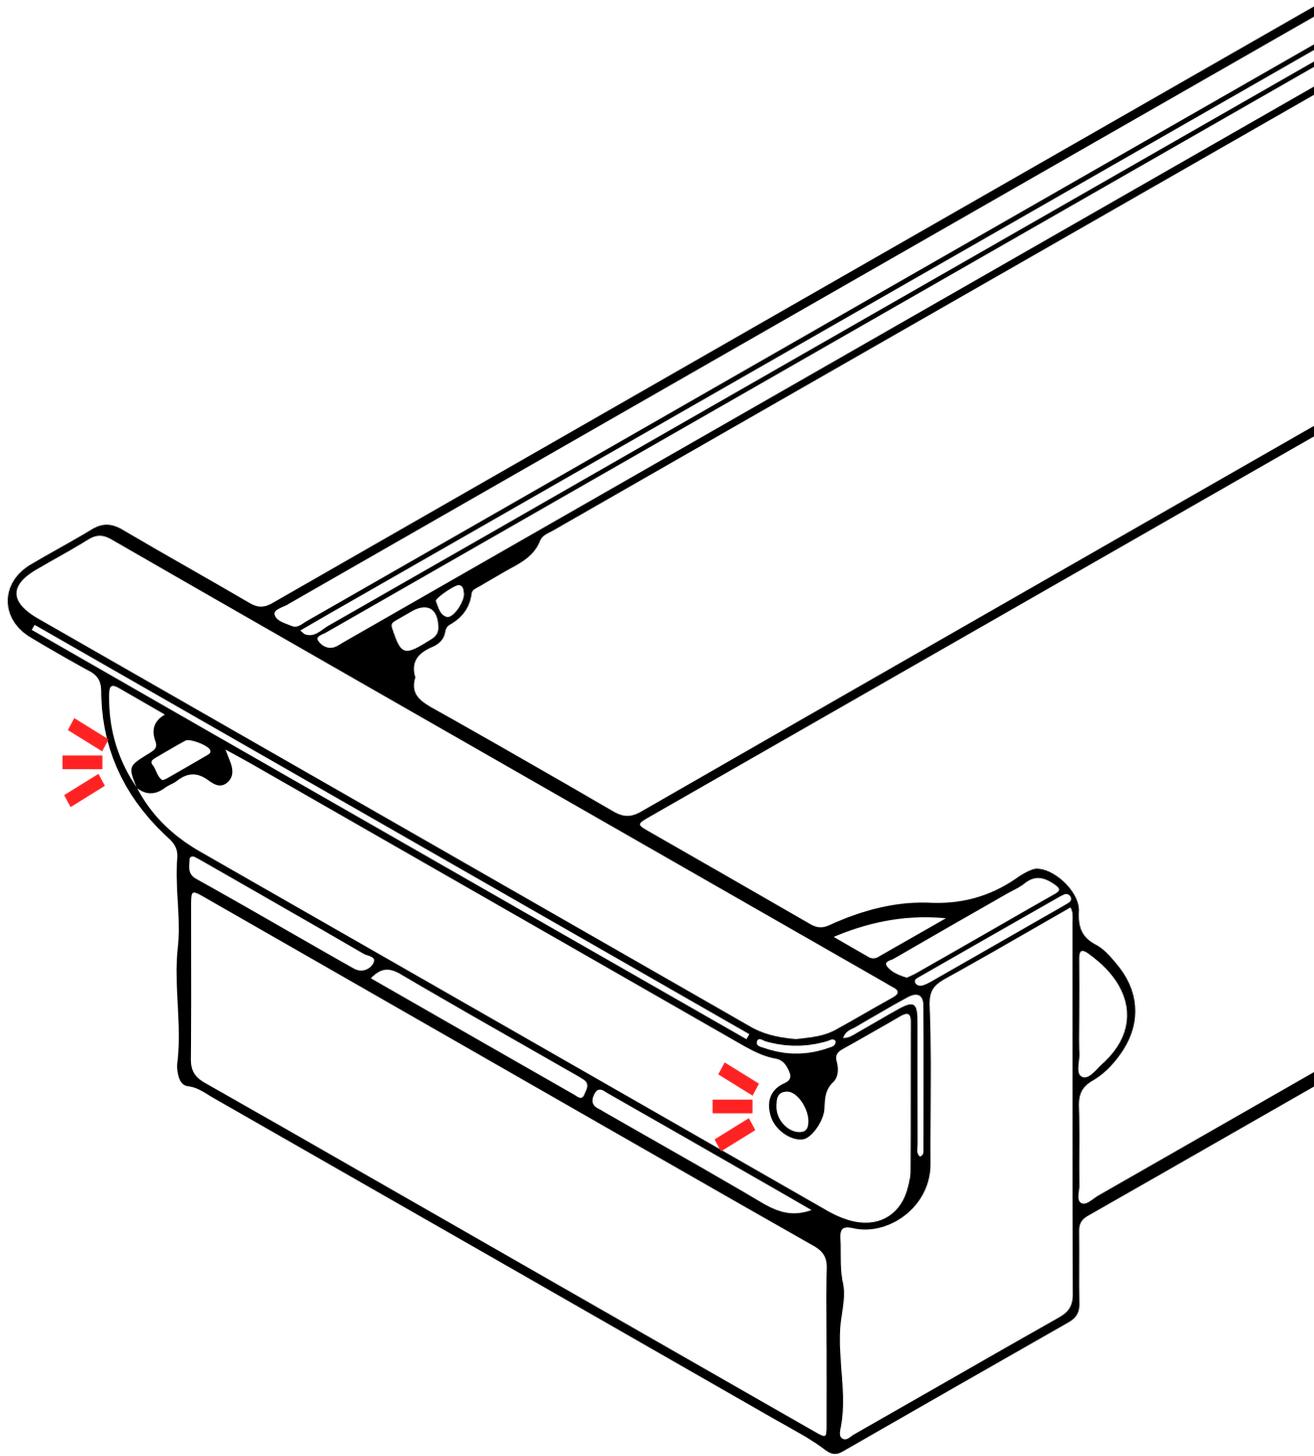

Hang both sides of the tray!



RECESS

2


Let's relocate / install the **Power Box** to make space for the **Cable Tray**. You may need a drill but not to worry, the screws won't damage or breach the desk.

Feel free to move the power box to any spot you like, but we'll give you some suggestions below:

(Note: Some of our desks have different pre drilled holes, feel free to use them or choose any spot that works for you, the screws won't breach the top of the desk...we promise.)


Underside view of Stand Up Desk

1. To the left of the cable grommet hole - inside the cable tray using the pre drilled holes

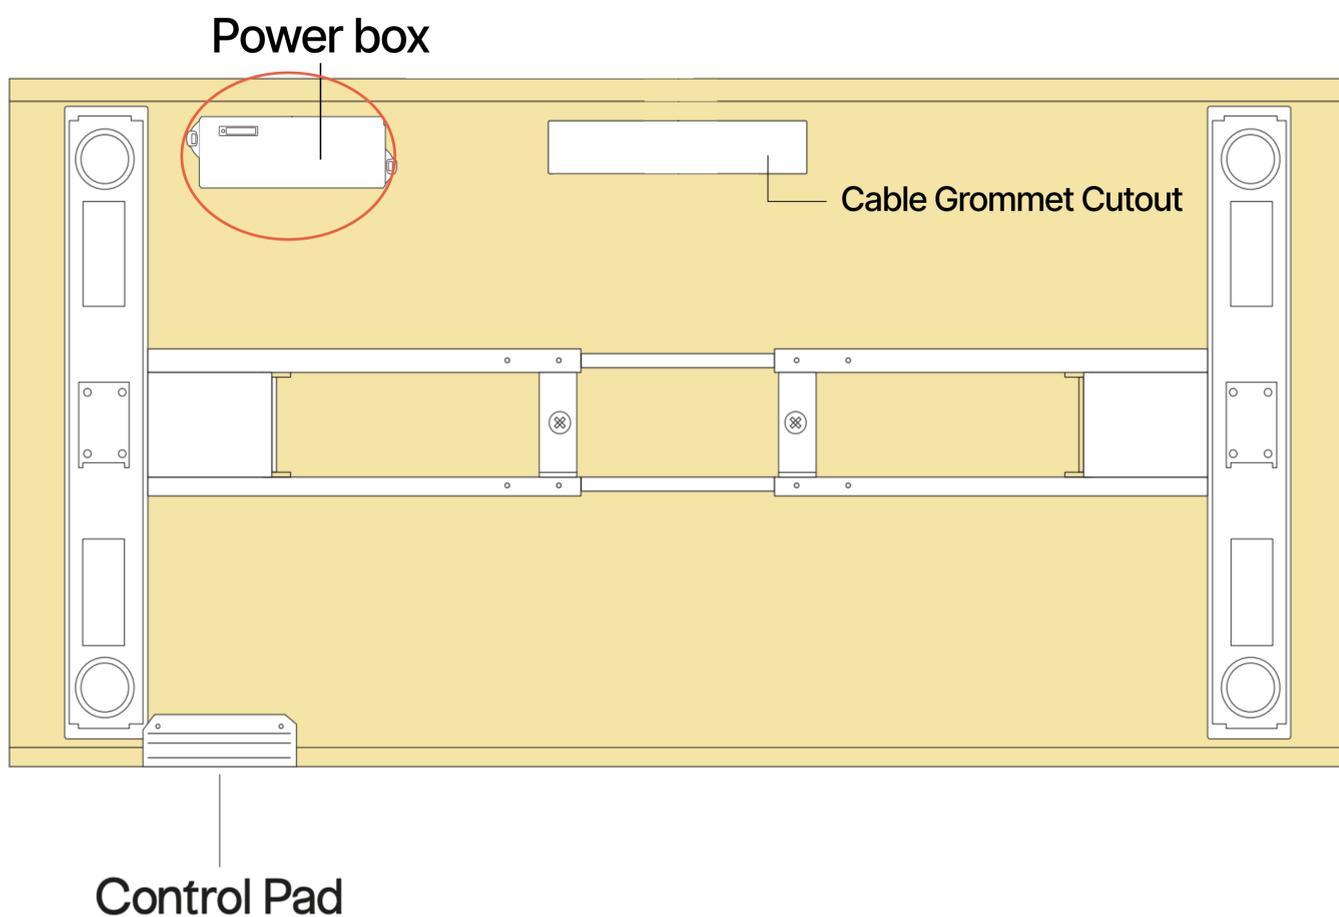

3

2. In the middle of the bracket - using the pre drilled holes

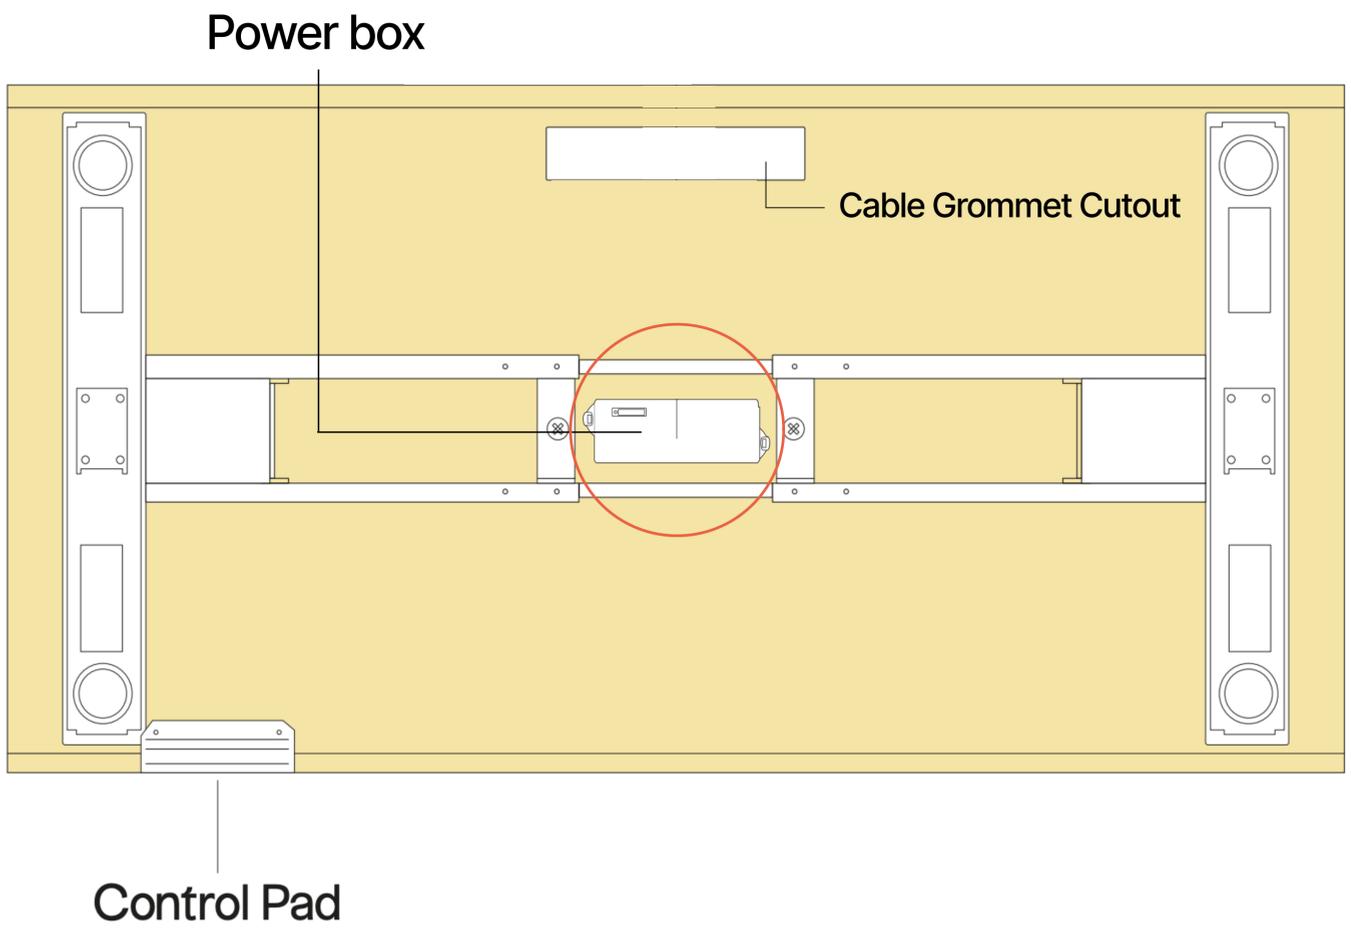

3. Whichever you like! You can safely drill into any part of the desk :)

(Note: For context - we've moved the pre drilled holes so some tables will have the drilled holes in different location.)




4

Flip your **Cable Tray** and **Mounting Brackets** over and place the tray on the desk top and over the cable grommet cutout.

Ensure that the rectangular cutout on the back face of the tray is in line with the cable grommet cutout and is closest to the back edge of the desk top.

Underside view of Stand Up Desk

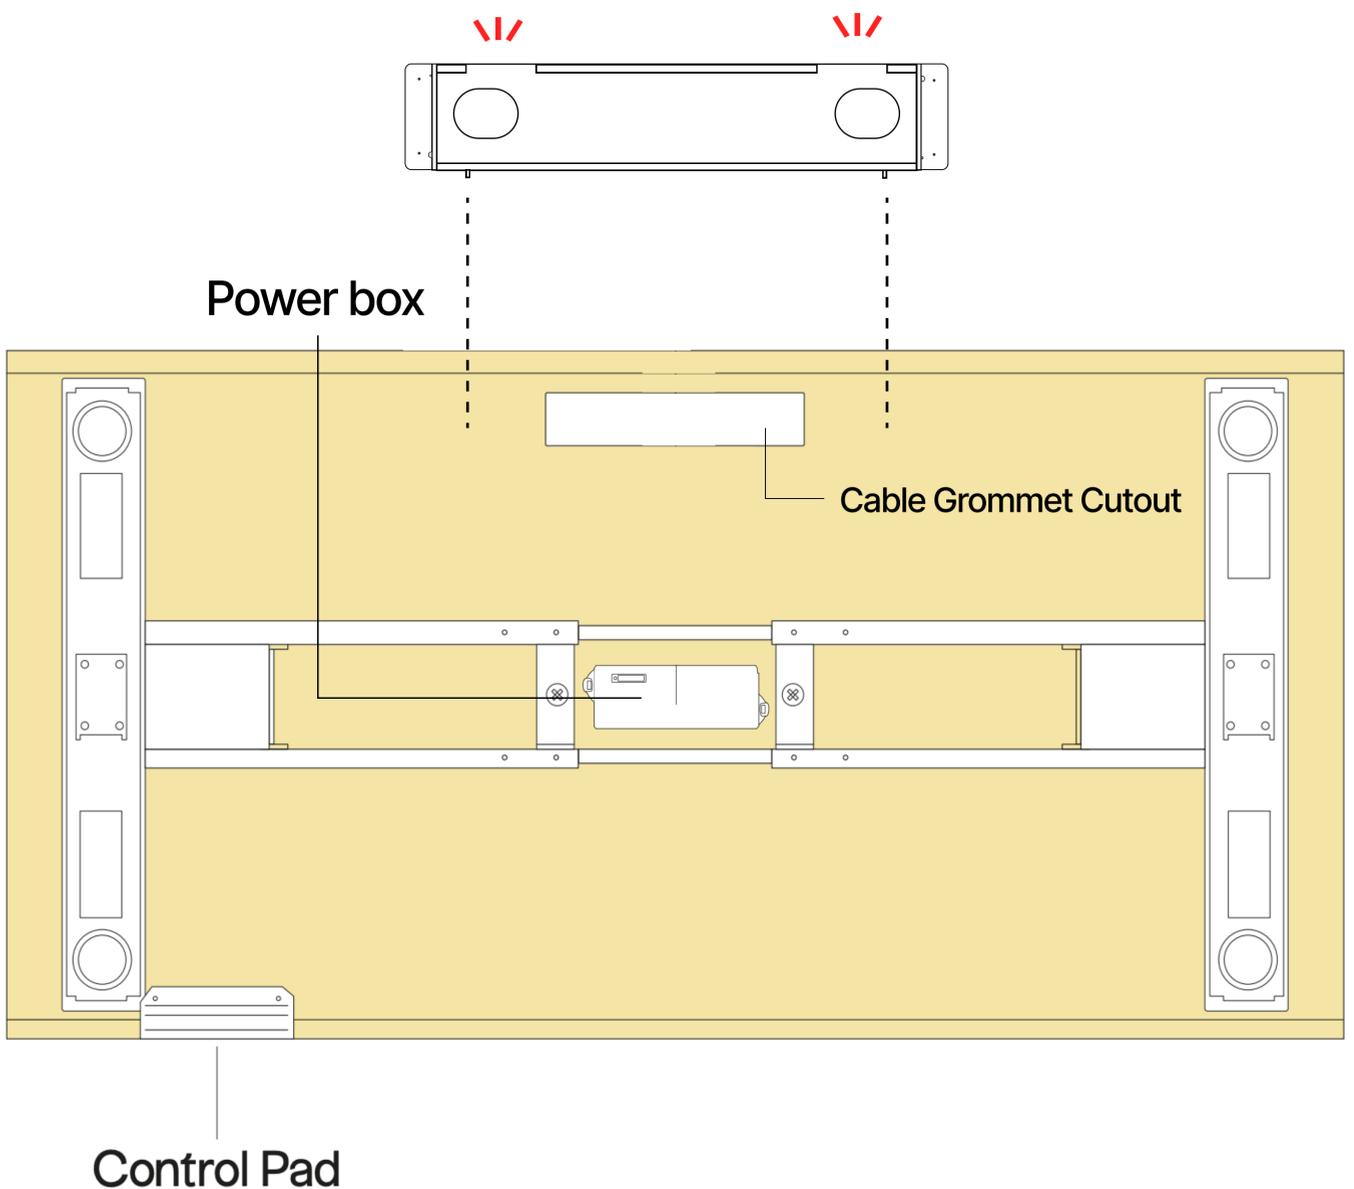


5

Drill the **Mounting Brackets** directly into your desk top. Start with one side first and use this as your guide for where you drill the other mounting bracket.



Medium Screws
x 4

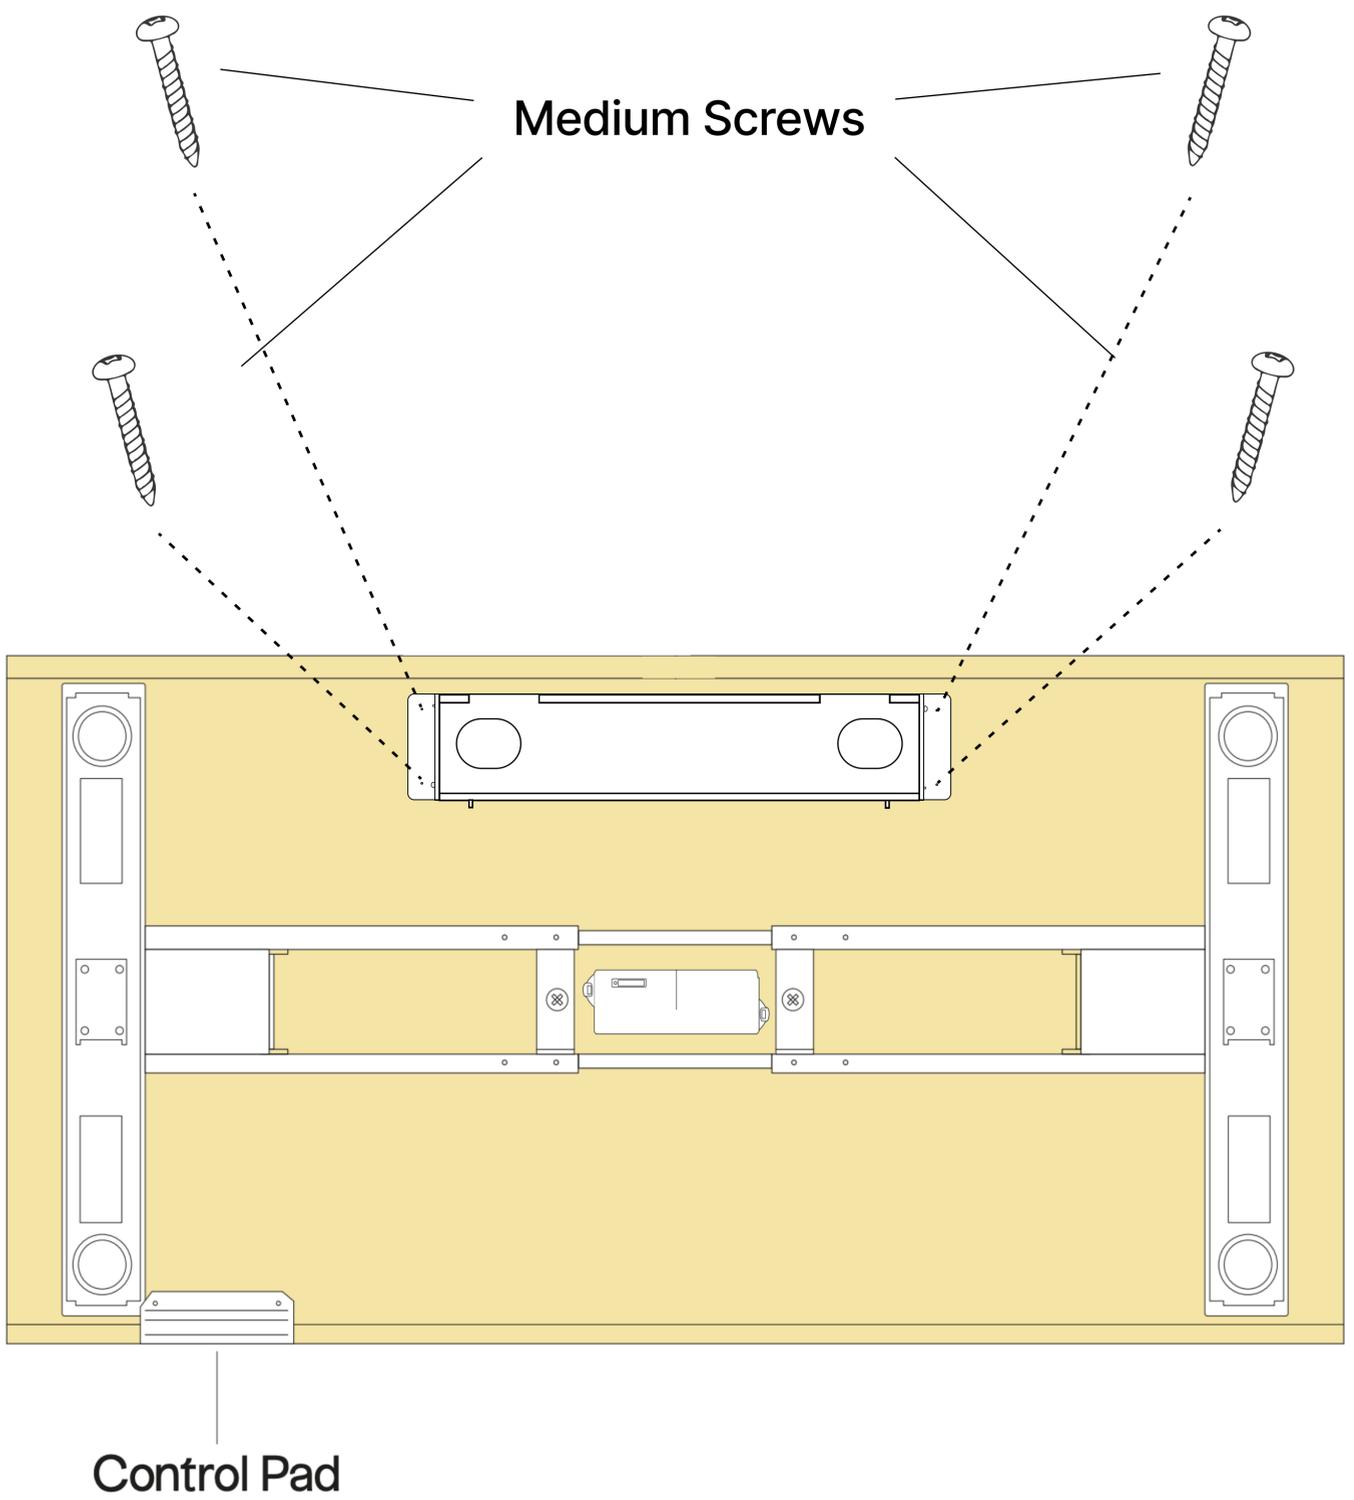



RECESS

6

The following steps are for customers that purchased the optional **Powerboard** and **Powercord**.

Now that the **Cable Tray** is drilled into the desk, it's time to put the power in.

Next, clip the **Powerboard** in from the **inside** of the tray, you will hear a click once it's in properly.

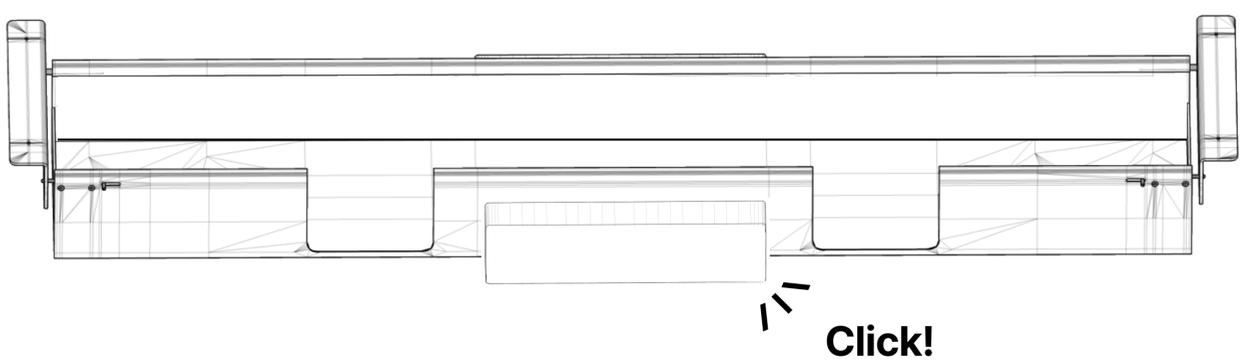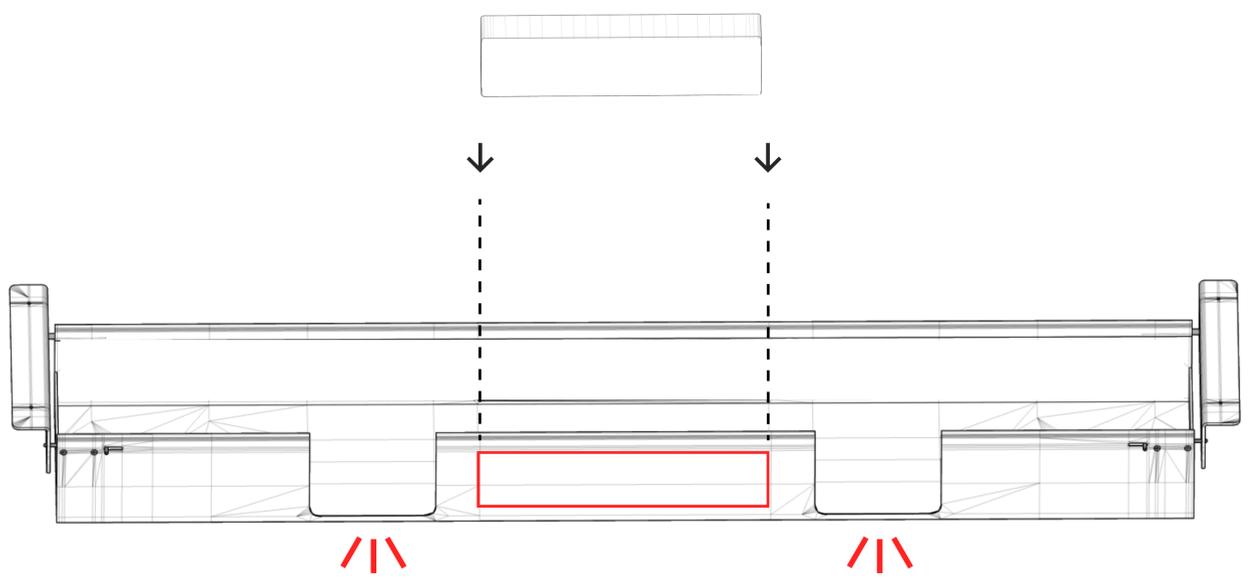


RECESS




7

Now that we have the **Powerboard** in, we just need to connect the **Powercord** into the back of the **Powerboard** from the outside and plug into your wall power outlet.

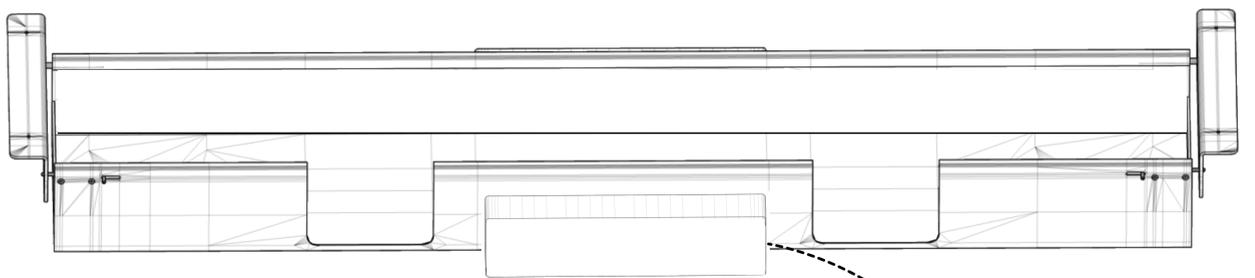

Back of powerboard

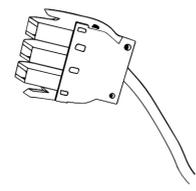

Powercord



All done!

Awesome job on putting together your cable management tray! Keeping your cables organised not only looks better but it also makes your workspace safer and more functional. Now that you have your new tray, you can enjoy a more efficient workspace without worrying about tripping hazards or equipment damage.

If you have any questions, feel free to reach out to our customer support team. Thanks for choosing our product and happy organising!

Now don't be shy. Show us how it looks!

@recess.au

#myrecessoffice

Contact:

Have a question, comment or suggestions?

hello@recess.com.au

RECESS

RECESS

We promise to only post the good stuff!
Follow us on Instagram and thank us later.

