





## TK-1000 TANDEM GATE HARDWARE INSTALLATION INSTRUCTIONS


# WARNING!

If this is the first time attempting a tandem gate installation please consult ALL-O-MATIC or someone with tandem gate installation experience. These instructions are guidelines only, every Tandem Gate installation is unique and has its own unique measurements. The TK-1000 Tandem Kit was designed to work with ALL-O-MATIC slide gate operators slowed down to about 50% speed. Please make sure to request a Slowed Tandem Gate Setup on all gate operators that will be used with the ALL-O-MATIC Tandem Gate Hardware Kit.

Note: TK-1000 works best with ALL-O-MATIC DC Slide Gate Operators (SL-100DC and SL-150DC) operators must be slowed down.

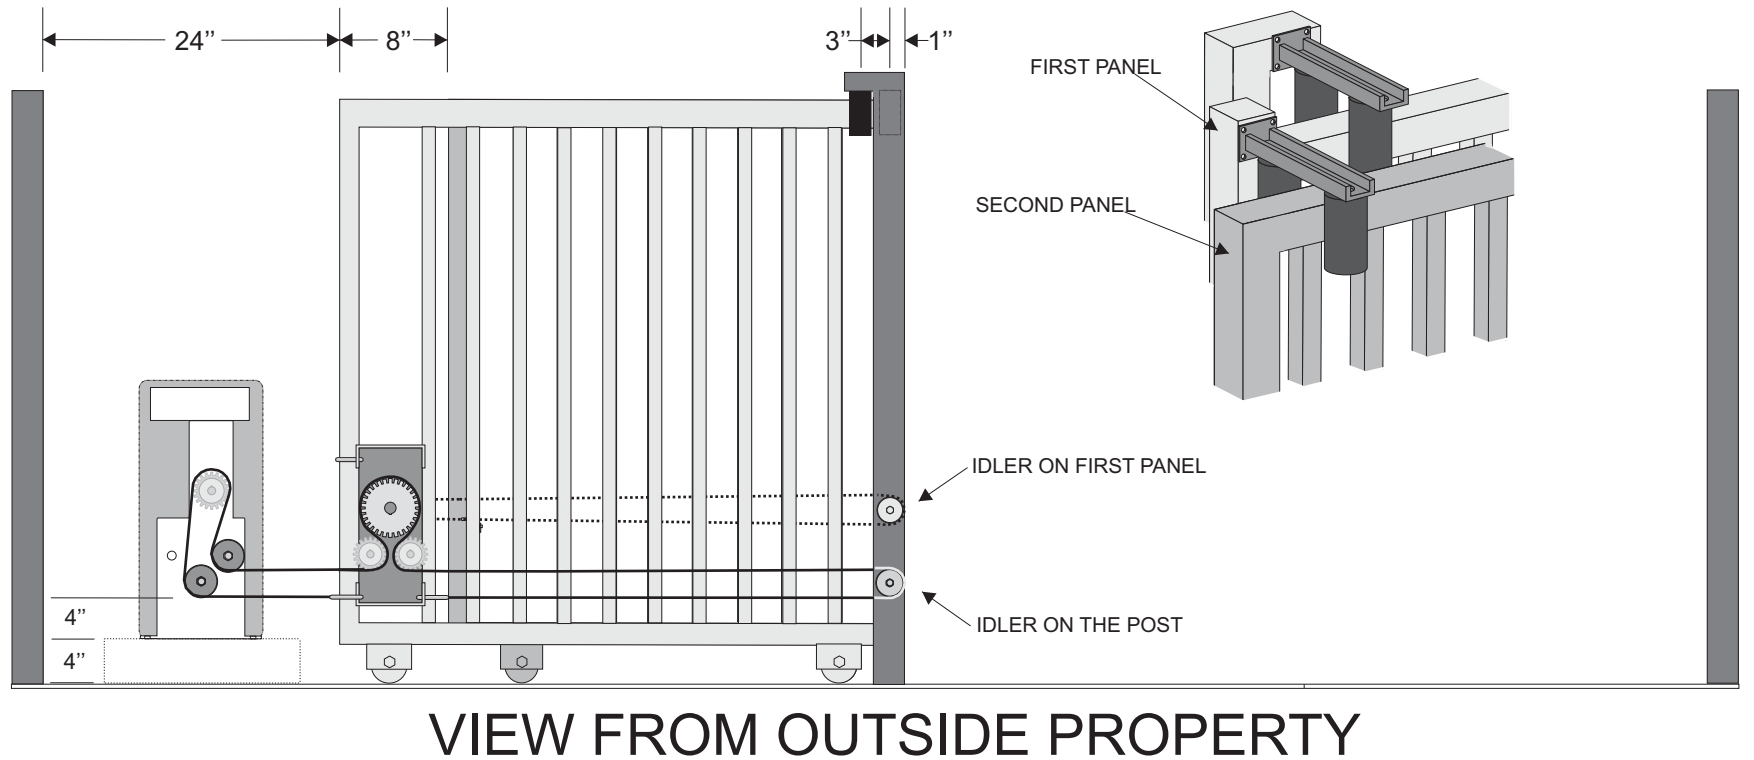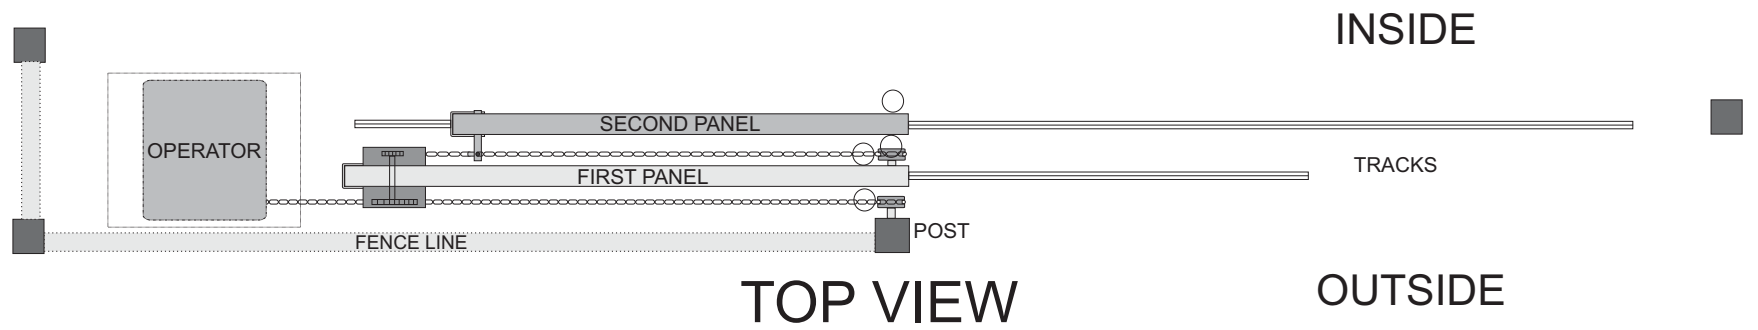

When installing chain, make sure the two gate panels are in the fully closed position. This is to assured proper gate operation once driven by the gate operator.

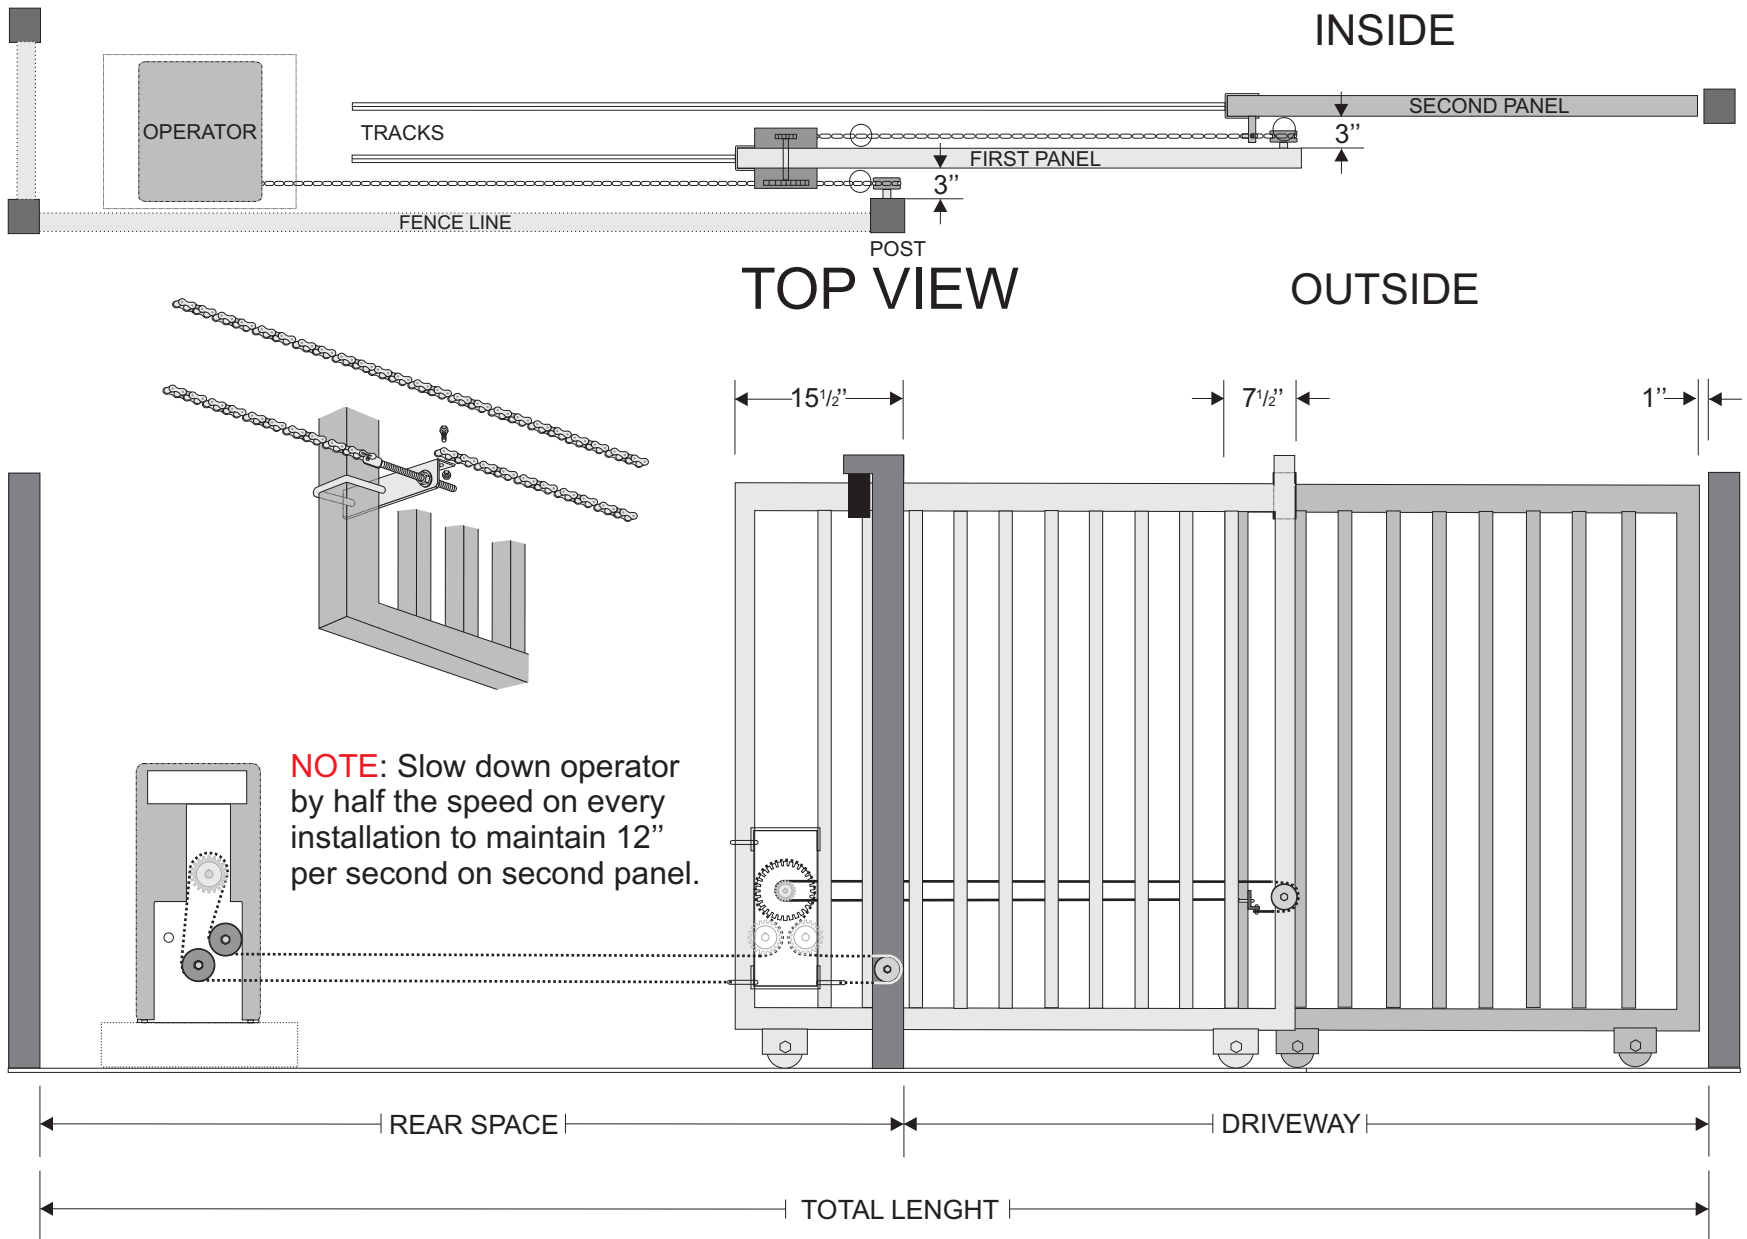

REAR SPACE = 1/2 OF DRIVEWAY + 39"

FIRST PANEL = 1/2 OF DRIVEWAY + 15"

DRIVEWAY = 2/3 OF TOTAL LENGTH - 26"

SECOND PANEL = 1/2 OF DRIVEWAY + 7"