




DC SOLUTIONS, INC

THE NEXT GENERATION OF GATE OPERATORS

150watt

HEATER INSTALLATION DIAGRAM

WARNING: TURN OFF ALL INCOMING AC POWER (120VAC) BACK AT THE CIRCUIT BREAKER BEFORE ATTEMPTING INSTALLATION. INSTALLATION TO BE DONE BY A QUALIFIED SERVICE PERSON ONLY.

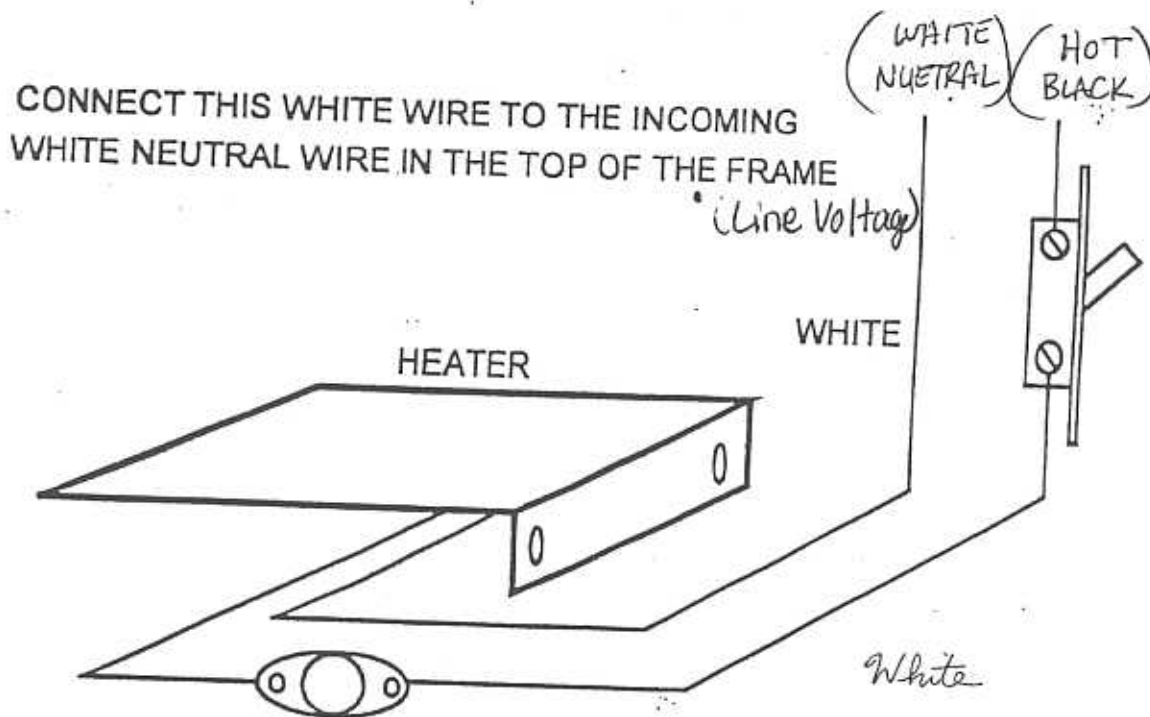

CONNECT THIS WHITE WIRE TO BOTTOM SCREW OF ON / OFF SWITCH

1. MOUNT THE HEATER TO THE BACK PLATE OF THE OPERATOR.
(TWO HOLES PROVIDED FOR THIS PURPOSE)
2. MOUNT THE THERMOSTAT TO THE SCREW THAT SECURES THE NYLON WIRE LOOP JUST TO THE RIGHT OF THE HEATER.
3. ROUTE THE WIRE WITHOUT THE THERMOSTAT THROUGH THE ELECTRICAL BOXES TO THE WHITE NEUTRAL WIRE IN THE TOP OF THE UNITS FRAME TUBE AND ATTACH.
4. AFTER MOUNTING THE THERMOSTAT, ROUTE THE LOOSE END OF THE WIRE TO THE BOTTOM SCREW OF THE ON/OFF SWITCH. THIS WILL ALLOW THE SWITCH TO BE USED TO TURN OFF THE HEATER. REMEMBER TO TURN OFF ALL AC POWER AT THE BREAKER BEFORE ATTEMPTING THIS INSTALLATION.