


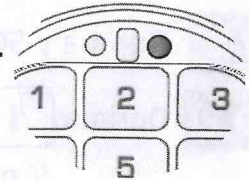


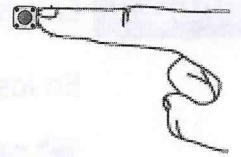
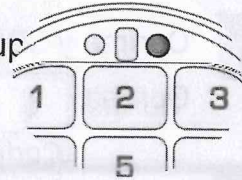
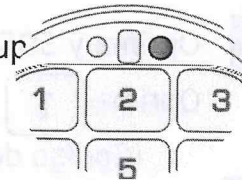


PROGRAMMING THE T-BOX TO THE RECEIVER**STEP 1** Press and HOLD the **ON** button until the red LED lights up.**STEP 2** Press **1 1 1 1 ON**
(Default code for channel 1)**STEP 3** On CLONIX or ECOSOL receivers, press the RADIO LEARN button.

On BFT Controllers with built-in receivers press:

 **OK**
 **OK**
 **-**
 **-**
 **OK**
 **OK**
**STEP 4** Press the **ON** button at the T-Box and wait 5 seconds.**CHANGING THE DEFAULT CODE****STEP 1** Press and HOLD the **ON** button until the red LED lights up.Press **1 1 1 1 OK**
(Default code for channel 1)**STEP 2** Press **X X X X OK**
(New code for channel 1)**STEP 3** Press **X X X X OK**
(New code for channel 1)**ADDING CODES TO A CHANNEL****STEP 1** Press and HOLD the **ON** button until the red LED lights up.Press **1 2 3 4 OK**
(Default programming passcode)**STEP 2** Press **X X X X OK**
(Existing code for channel 1)**STEP 3** Press **N N N N OK**
(New code for channel 1)**STEP 4** Press **N N N N OK**
(New code for channel 1)