

ReFramed[®]


ASSEMBLY INSTRUCTIONS

-


RF-101 ALUMINIUM







Now the fun begins. Follow this step-by-step process to assemble your new bed frame.

Step 1 of 4

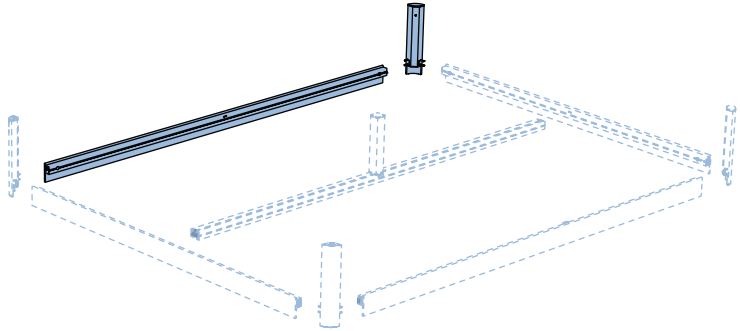


[4x]

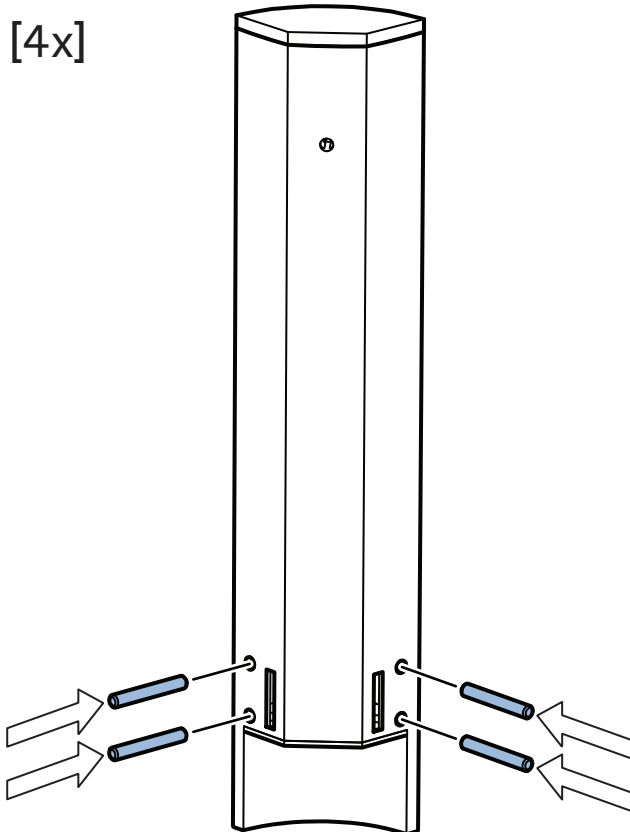


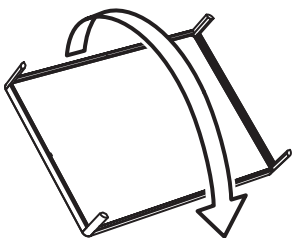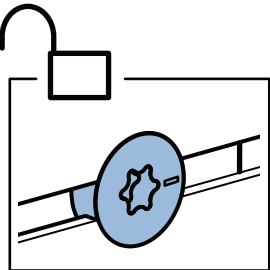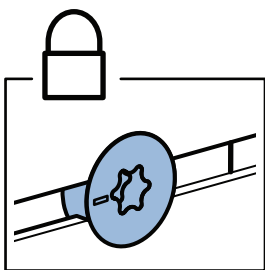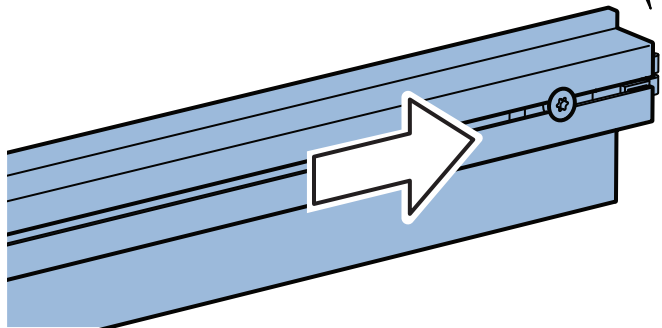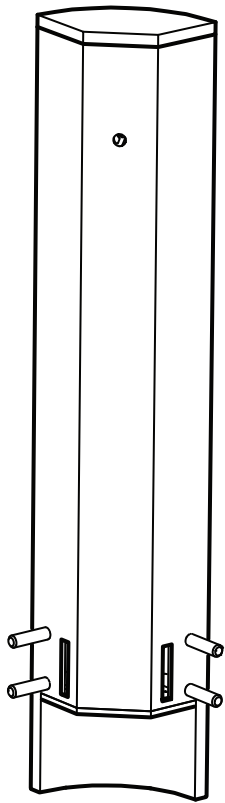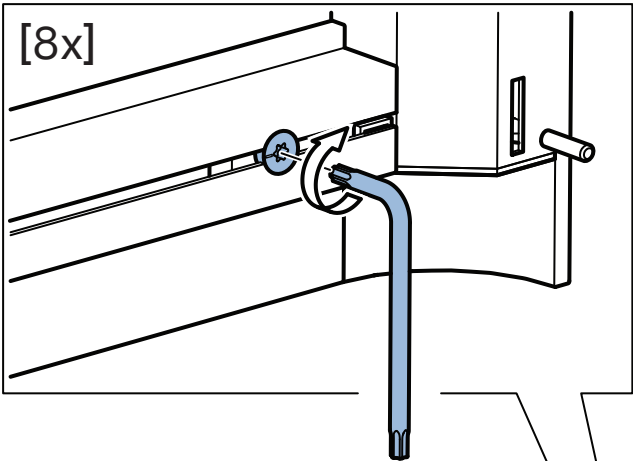

Step 2 of 4


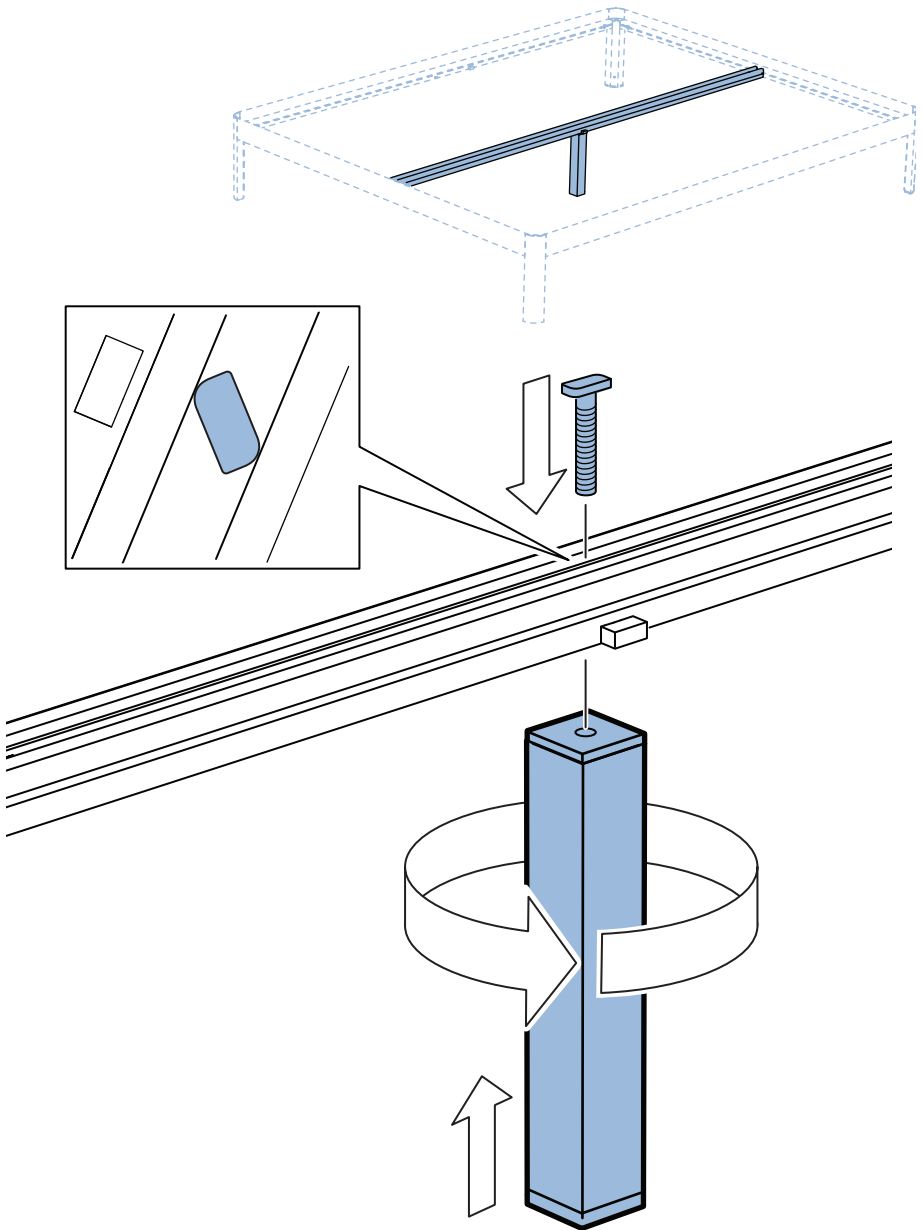



Step 3 of 4

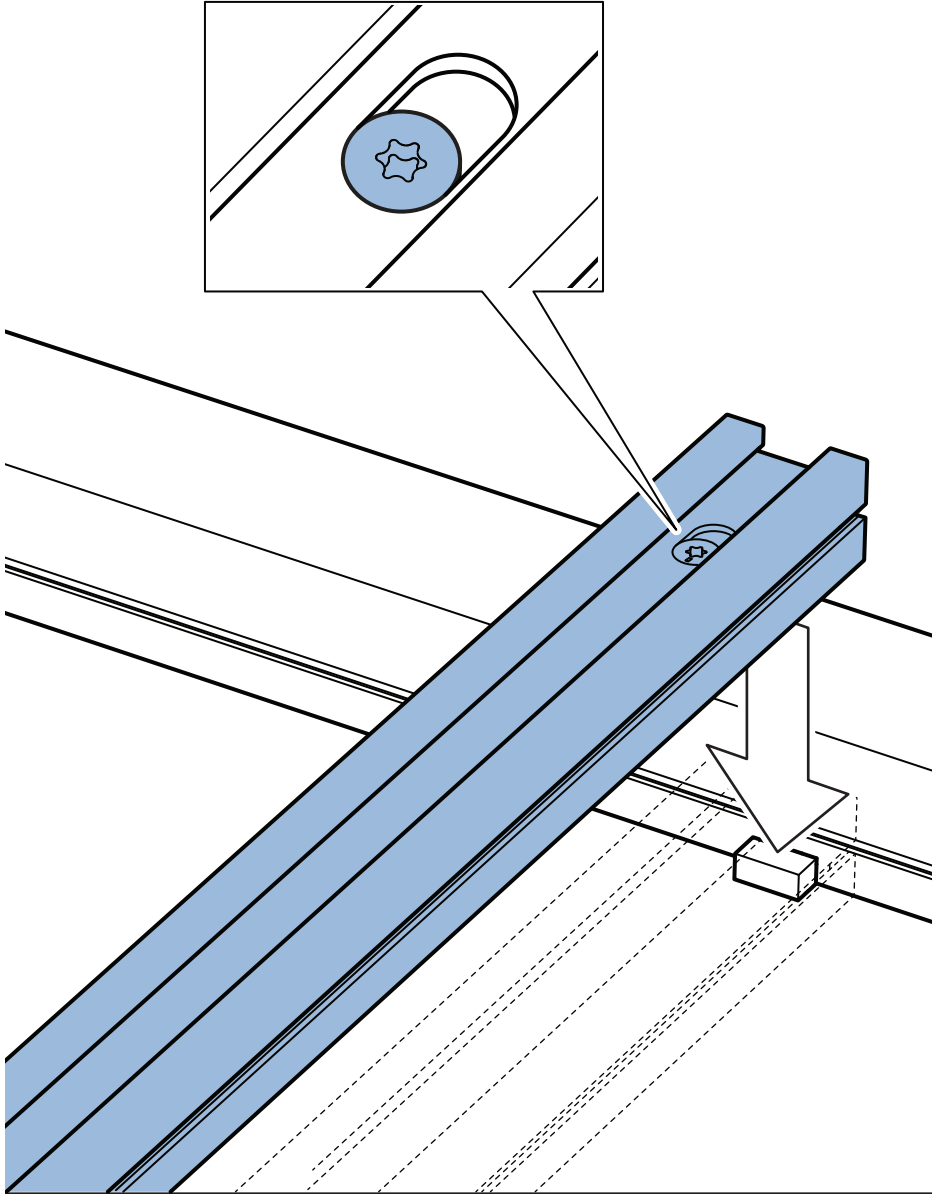

Step 4 of 4

[2x]

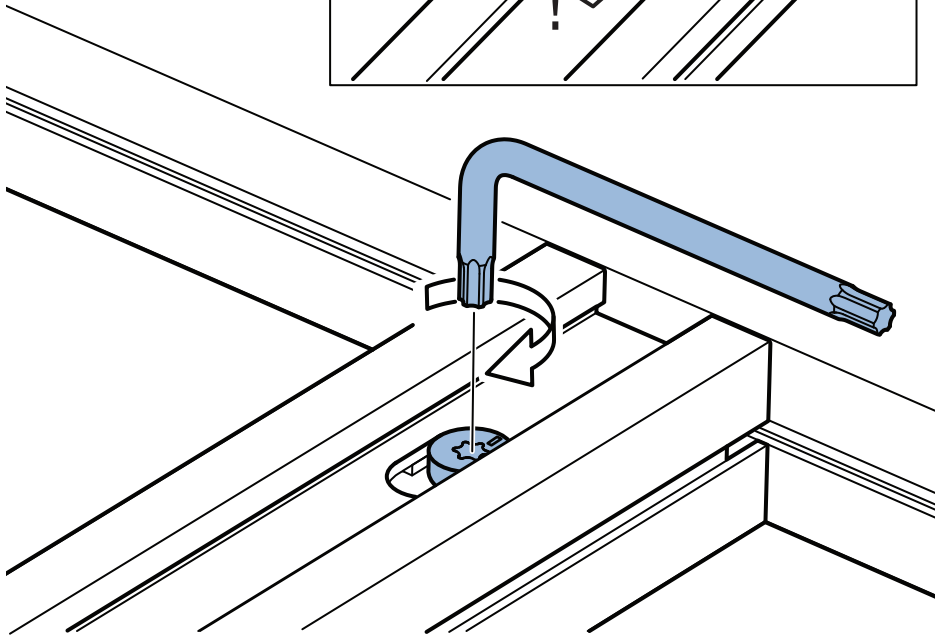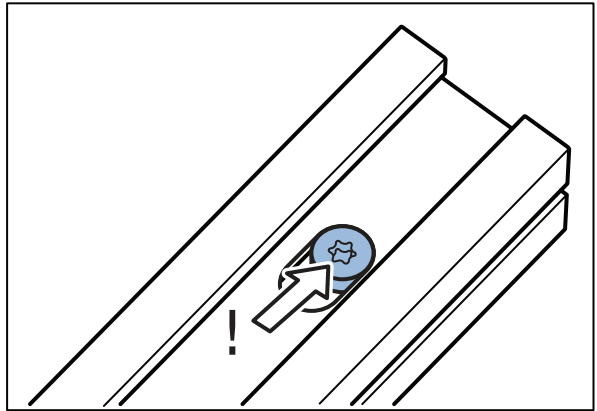

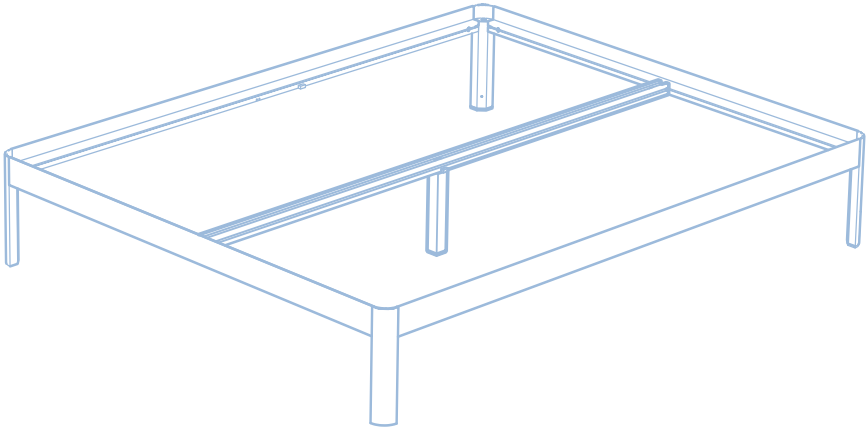

Congratulations! You did well.
We hope that you enjoy your
new aluminium bed frame.

MADE IN DENMARK

-

RF-101 ALUMINIUM

