

# C013-016-102/122/142 QUEEN / KING / CAL KING BED


## ADELA

### ASSEMBLY INSTRUCTIONS

#### TWO (2) PEOPLE AND PHILIP'S SCREW DRIVER REQUIRED

PLEASE UNPACK ALL PARTS AND CHECK THEM AGAINST PARTS LIST ON THIS INSTRUCTION SHEET BEFORE DISCARDING PACKING AND CARTON!!

- 1) Connect the side rail and headboard/footboard by bolt (F).
- 2) Assemble the side rail and headboard/footboard using the curved washer (A), flat washer (B), lock washer (C), and nut (D) tighten by wrench (E), as shown in Diagram A.
- 3) Assemble the support leg on the slat, as shown in Diagram B.
- 4) Mount the assembled support slats (done in step 3) onto the cleat of side rails with screws (G).  
Use a Phillips Head Screwdriver to tighten screws, as shown in Diagram C.

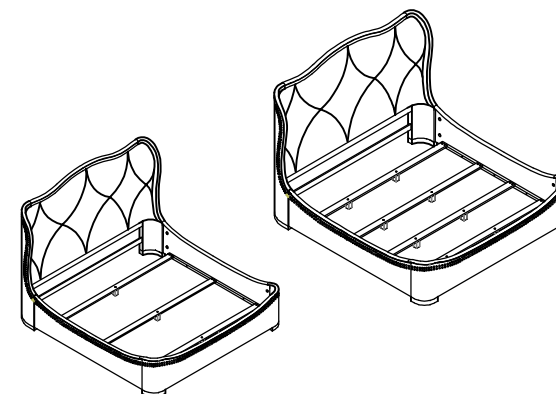

\*\*\* NOTE KEEP THIS SHEET!!! \*\*\*

In the unlikely event that you would need a replacement part for your table, please contact your local authorized Schnadig International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

Part Description	C013-016-102H/102F/102R Queen Bed		C013-016-122H/122F/102R King bed		C013-016-122H/122F/142R Cal King bed	
	Part No.	QTY	Part No.	QTY	Part No.	QTY
Headboard (1)	C013-016-102H	1	C013-016-122H	1	C013-016-122H	1
Footboard (2)	C013-016-102F	1	C013-016-122F	1	C013-016-122F	1
Side rail (3)	C013-016-102R	2	C013-016-102R	2	C013-016-142R	2
Slat (4)	C013-016-102F-3067	3	C013-016-122F-3067	4	C013-016-122F-3067	4
Support leg(5)	C013-016-102F-30305	3	C013-016-122F-30305	8	C013-016-122F-30305	8
RTA Hardware(6)	C013-016-102F-3001	1	C013-016-122F-3001	1	C013-016-122F-3001	1
RTA Hardware(7)	C013-016-102R-3001	1	C013-016-102R-3001	1	C013-016-142R-3001	1

RTA Hardware(7)			
NO.	Hardware List		Q'ty
A		Curved Washer(5/16"Dia)	8
B		Flat Washer(5/16"Dia)	8
C		Lock Washer	8
D		Nut	8
E		Wrench	1
F		Bolt	8

RTA Hardware(6)			
NO.	Hardware List	Q'ty(5-0 bed)	Q'ty(6-6/6-0 bed)
G		Screw(4.2x32)	12
			16

