

C113-422-041 OVAL MIRROR

VALENTINA


ASSEMBLY INSTRUCTIONS

PLEASE UNPACK ALL PARTS AND CHECK AGAINST PARTS LIST ON THIS INSTRUCTION SHEET BEFORE DISCARDING PACKING AND CARTON!!

- (1) Attache the "Z" Bracket to the wallboard with screws provided (A) as shown in Diagram A.
- (2) Hang the mirror on the wall with "Z" Bracket as shown in Diagram A.It can be hang vertically or horizontally.

*** NOTE KEEP THIS SHEET!!! ***

In the unlikely event that you would need a replacement part for your furniture, please contact your local authorized Schnadig International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

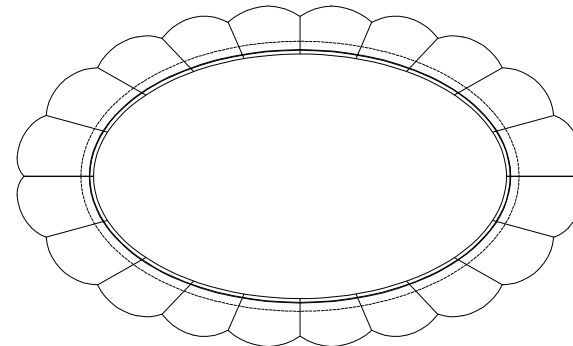

C113-422-041 OVAL MIRROR		
Part Description	Part No.	QTY
"Z" Bracket	C113-422-041-30429	3
RAT Hardware	C113-422-041-3001	1

RTA Hardware			
Hardware List			Q'ty
A		Screw(4.2X32MM)	4

Diagram A

