



CLA-016-407

CARACOLE CLASSIC

ASSEMBLY INSTRUCTIONS

PLEASE UNPACK ALL PARTS AND CHECK QUANTITY AGAINST PARTS LIST BEFORE DISCARDING PACKING CARTON!

- 1) Open the carton there is a metal base, inside the carton there is a glass top.
- 2) Place the rubber bumpers onto the frame top as shown in right illustration.
- 3) Place the glass top gently on the metal base in a balance position.

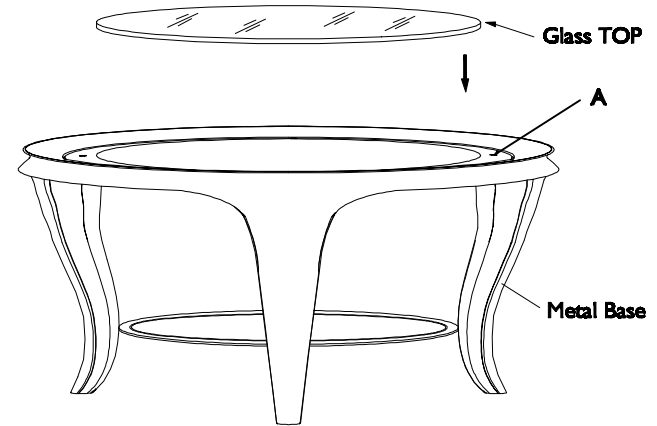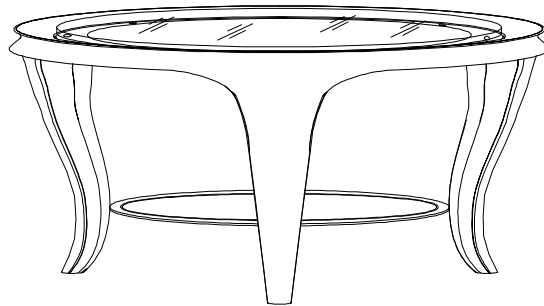

***** NOTE KEEP THIS SHEET *****

In the unlikely event that you would need a replacement part for your furniture, please contact your local authorized Schnadig International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

<u>CLA-016-407</u>		
HANDPICKED		
Part Description	Part No.	QTY
Glass Top	CLA-016-407-029	1
Adjustable Floor Glide	CLA-016-407-003	4
RTA Hardware	CLA-016-407-001	1

RTA Hardware			
Hardware List			QTY
A	○	Rubber Bumper	8