

CLA-018-101H/F/R DIAMOND JUBILEE QUEEN BED

CARACOLE CLASSIC

Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have loosened inside the carton during shipment and place on a non-abrasive surface.


IMPORTANT

These parts can be cumbersome and heavy to some people, therefore, the assistance of two or more people are recommended in order to prevent personal injury and ensure the furniture is not damaged during the assembly Process.

*** NOT KEEP THIS SHEET!!! ***

In the unlikely event that you would need a replacement part for your furniture, please contact your local authorized Schnadig International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

	CLA-018-101H/F/R	
	DIAMOND JUBILEE QUEEN BED	
Part Description	Part No.	QTY.
Headboard (1)	CLA-018-101H	1 pc.
Side Rails (2)	CLA-018-101R	2 pcs.
Footboard (3)	CLA-018-101F	1 pc.
Bed Slats (4)	CA050F01-SLAT	7 pcs.
Slat Support (5)	CA012F01-SLSP	1 pc.
Glide, for Foot (6)	CA012F01-GLDF	4 pcs.
Assembly Hardware (7)	CA012F01-AHS	1 set.

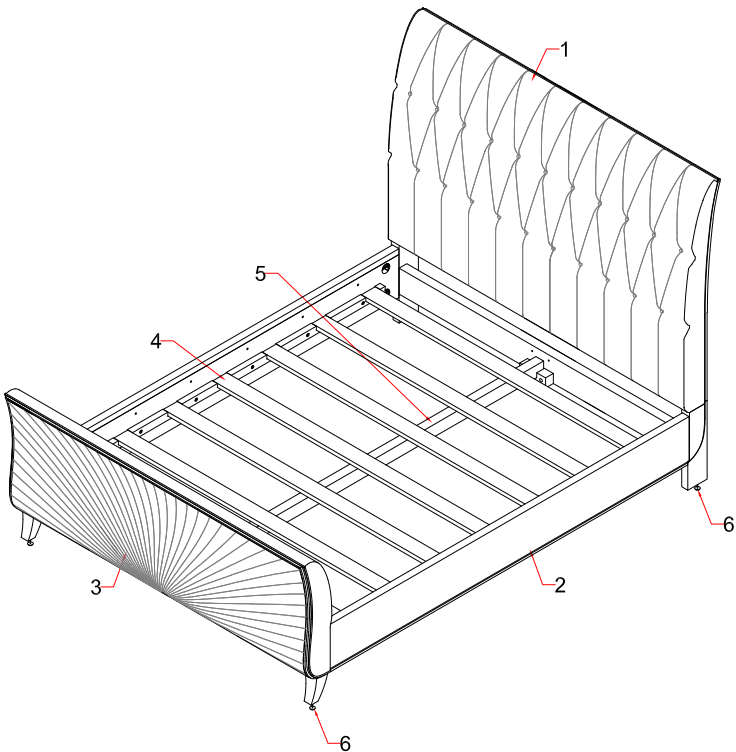

ASSEMBLY HARDWARE (7)			
No.	Drawing	Description	Qty.
A		Threaded Rod (M8x100mm)	8 pcs.
B		Curved Washer (Ø9x15x8.5mm)	8 pcs.
C		Lock Washer (Ø9xØ14x2mm)	8 pcs.
D		Hexagonal Nut (M8xD14xL15mm)	8 pcs.
E		Spanner Wrench (D14.5x69mm)	1 pc.
F		Allen Wrench (D4x110mm)	1 pc.

BED MATTRESS DIAGRAM

BEDDING SPECIFICATIONS:

Dimension of the true mattress opening: 62" w x 81 $\frac{5}{8}$ " l

Bed slats : $\frac{3}{4}$ " H x 3 $\frac{1}{8}$ " W x 61 $\frac{3}{4}$ " L. (7 pcs)

Side rail width: 9 $\frac{5}{8}$ "

Height from the floor to bottom of the side rail: 5"


Height from the floor to top of slat : 10" (for low setting) or 12 $\frac{7}{8}$ " (for high setting)

Height from the top of slats to top of side rail : 4 $\frac{5}{8}$ " (for low setting) or 1 $\frac{3}{4}$ " (for high setting)


Height from the top of side rail to bottom of headboard pad : $\frac{7}{8}$ "

Be sure to adhere to these BEDDING SPECIFICATIONS in order to avoid the possibility of falling or entrapment. THESE SPECIFICATIONS MUST BE STRICTLY ADHERED TO!

LOW SETTING

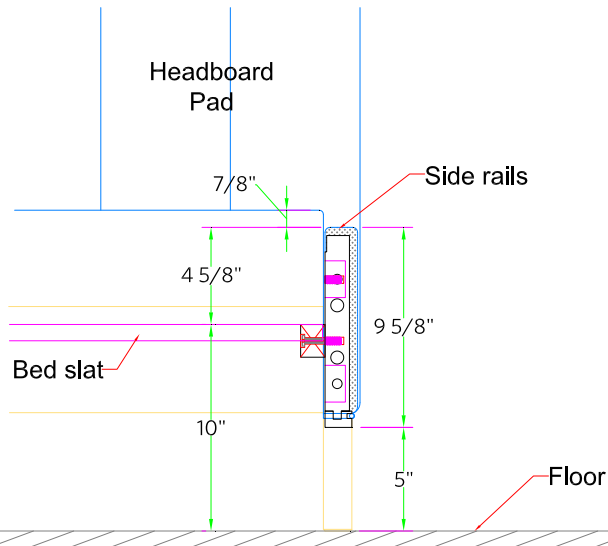


HIGH SETTING

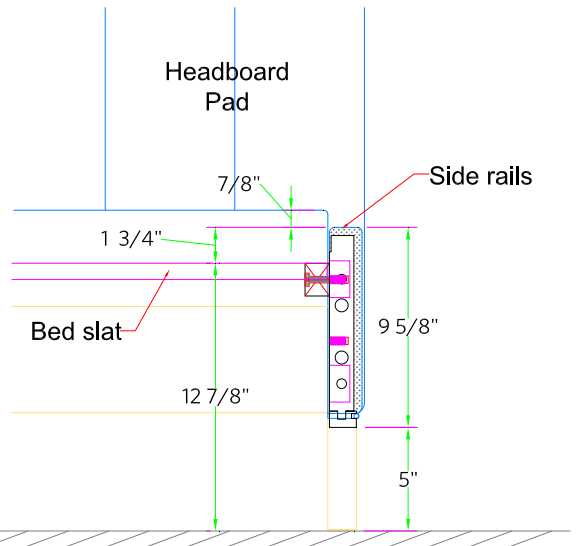


ASSEMBLY INSTRUCTIONS

1. Place the headboard (1) upright in the position you wish the bed to be in when fully assembled. Secure the threaded rod (A) to the fixed nut in the headboard (1) by simply turning it manually. Raise the side rail (2) up and place the rod (A) to align with the bore holes on the end of the side rails (2). Put the side rails (2) up against the headboard (1) so the threaded rods go through the bore holes. Insert curved washer (B) and lock washer (C), place hex nuts (D) on threaded rod (A) and tighten hex nuts (D) with wrench (E). See FIGURE 1.
2. Repeat the above procedure with the other side rail (2) to attach it to the headboard (1), and then repeat to connect side rails (2) to the footboard (3).


FIGURE 1

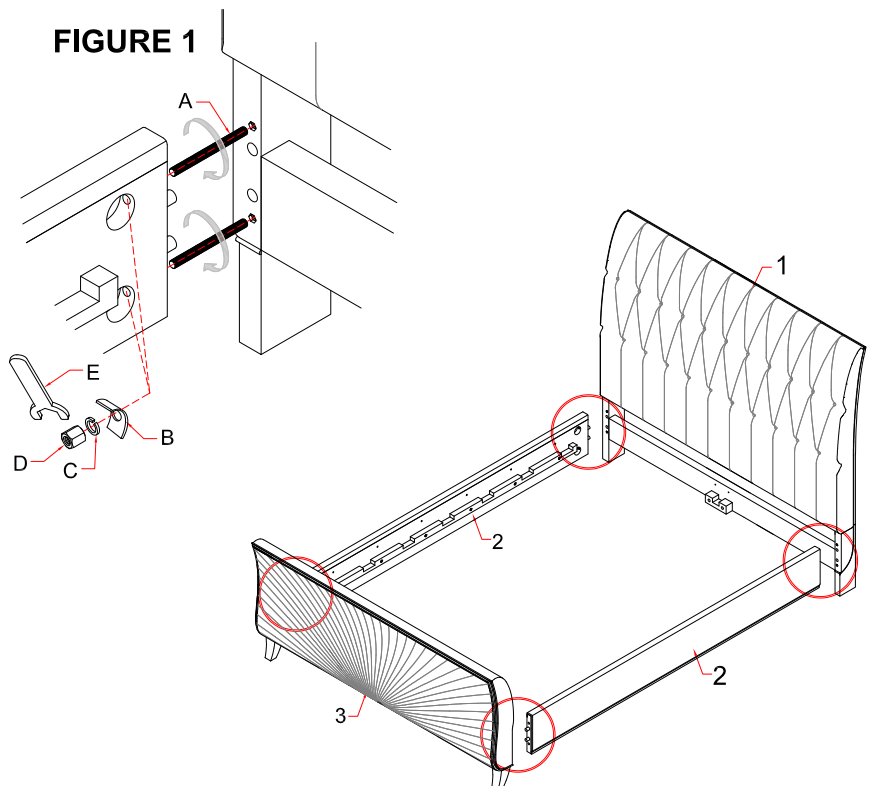

3. On inside of both Headboard (1) and Footboard (3) are pre-installed wooden brackets for the support slat (5). Set the support slat (5) on the wood bracket, as illustrated in FIGURE 2.

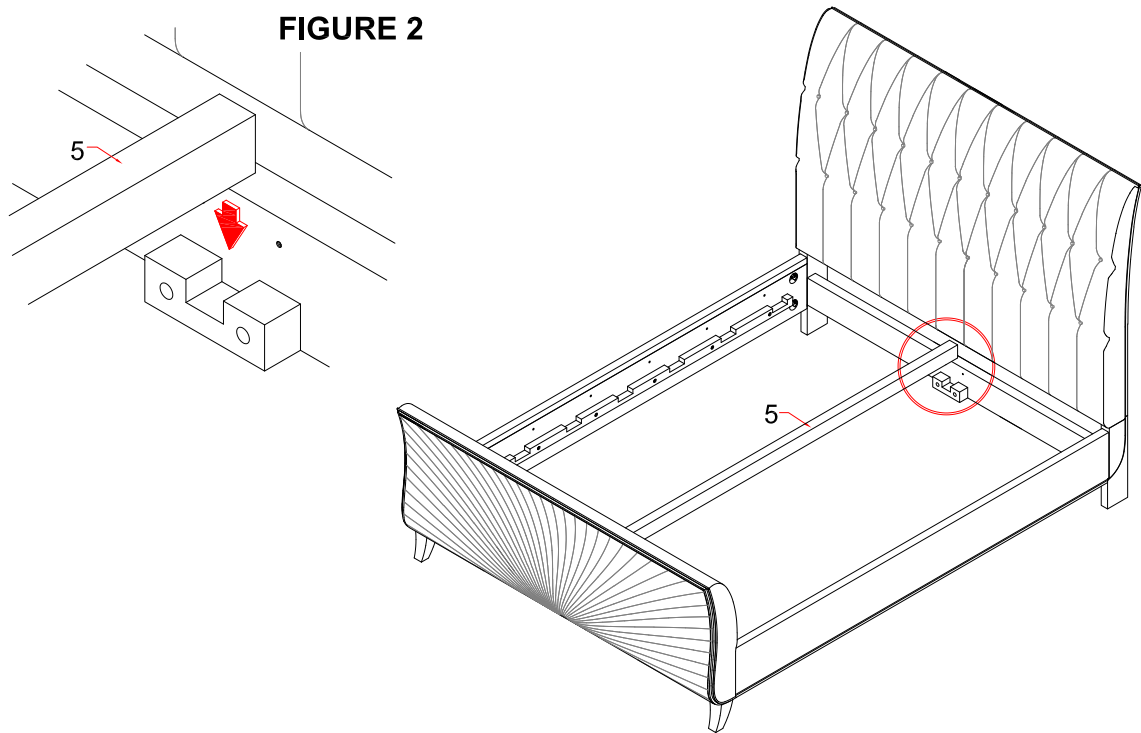

4. On inside surface of both side rails (2) are cavities designed to hold the individual bed slats (4). Set individual bed slats (4) on both sides of the side rails (2), as illustrated in FIGURE 3.

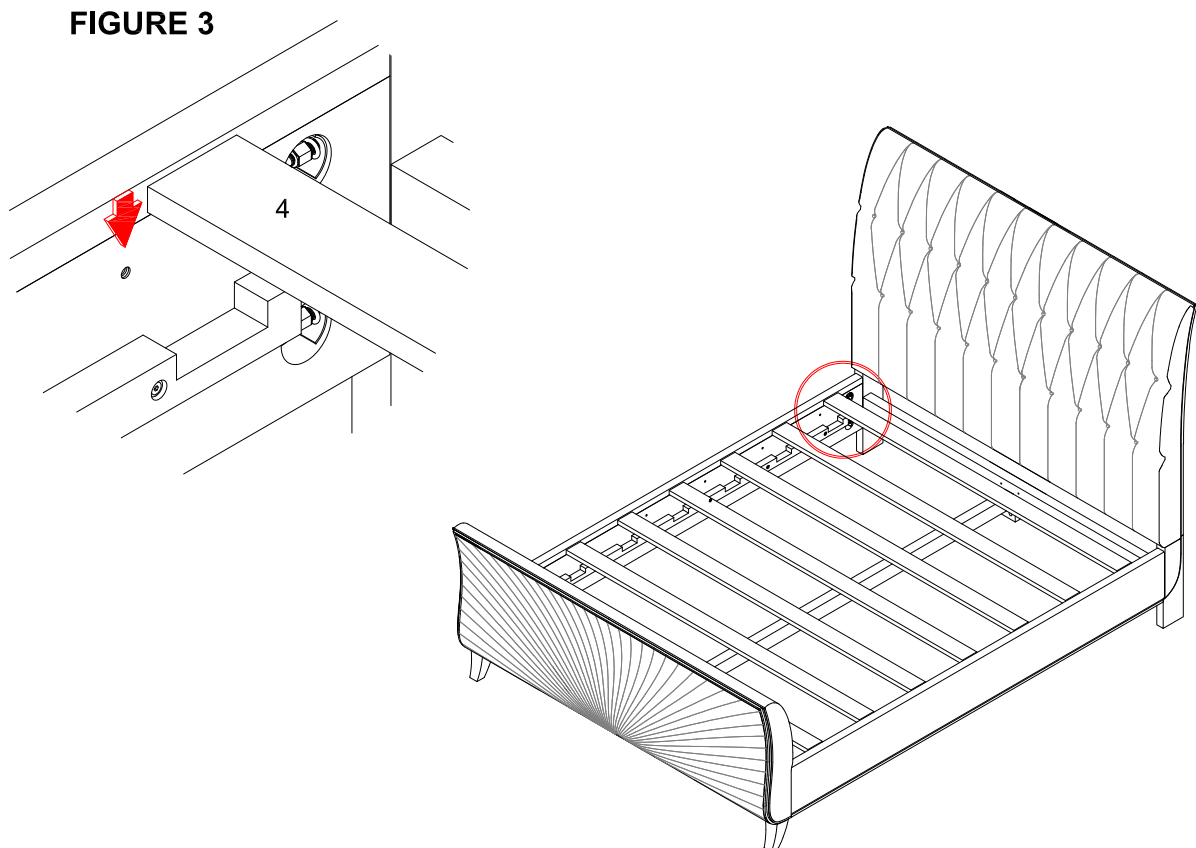

SET UP THE HEIGHT OF THE MATTRESS

NOTE: Before starting this step, securely remove all slats and support slat from the assembled bed.

- For the default setting, the Slat support rail will be attached to the lower setting on the side rail. If you want to attach the Slat support rail to the higher setting, please unscrew all bolts and move the Slat support rail to the top setting on side rail. Re-install the bolts and Slat support rail to secure to the side rail. See illustration in FIGURE 4A - 4B.
- For the default setting, the Wood brackets will be attached to the lower setting at front of Headboard and back of Footboard. If you want to attach the Wood bracket to the higher setting, please unscrew and move the Wood bracket to the top setting on Headboard and Footboard. Re-install the screws and Wood bracket to secure to the Headboard and Footboard. See illustration in FIGURE 5A - 5B.

FIGURE 4A

FIGURE 4B

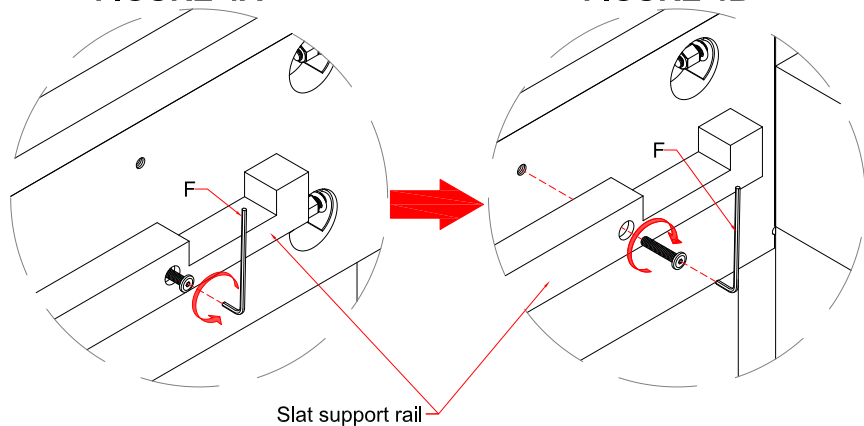


Fig. 4A

Fig. 5A

FIGURE 5A

FIGURE 5B

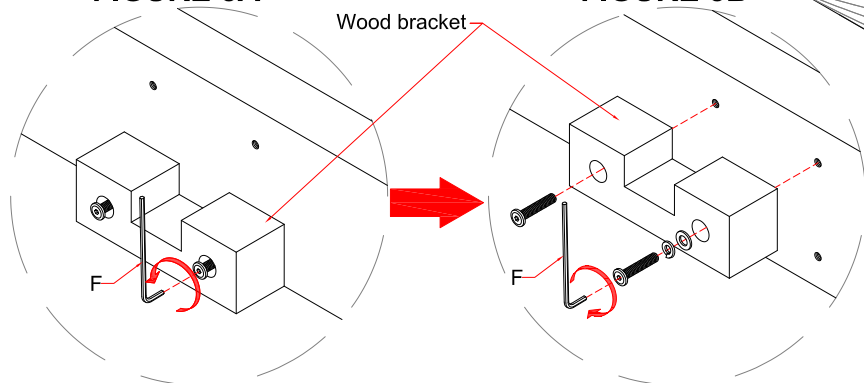


Fig. 4B

Fig. 5B

CARE INSTRUCTIONS

1. Dust often using a clean, soft, dry and lint-free cloth.
2. Blot spills immediately and wipe with a clean, damp, cloth.
3. We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.

IMPORTANT SAFETY INSTRUCTIONS

1. Please read all instructions carefully before assembling.
2. For your safety, assembly by two or more adults is strongly recommended.
3. Keep instructions for future use.
4. Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.