

M022-417-214 MODERNE SIDEBOARD

MODERN STREAMLINE


1 of 1

ASSEMBLY INSTRUCTIONS

PLEASE UNPACK ALL PARTS AND CHECK AGAINST PARTS LIST ON THIS INSTRUCTION SHEET BEFORE DISCARDING PACKING AND CARTON!!

- 1) Turn the top case face down on a smooth, soft surface.
- 2) Assemble the case and legs using the bot (A), flat washer (B), lock washer (C) by allen key (D), as shown in Diagram A.

Tip Kit

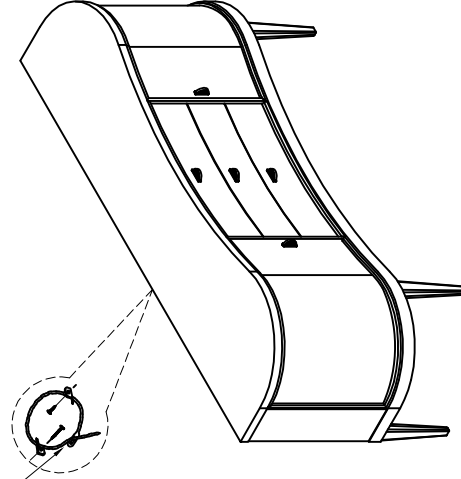

*** NOTE KEEP THIS SHEET!!! ***

In the unlikely event that you would need a replacement part for your furniture, please contact your local authorized Schmadig International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

| Part Description | Part No. | QTY |
|---------------------|--------------------|------|
| Legs | M022-417-214-2015 | 4 |
| Adjustable Shelf | M022-417-214-2021 | 2 |
| Metal Base-1 | M022-417-214-20291 | 2 |
| Metal Base -2 | M022-417-214-20292 | 2 |
| Drawer Glide 12" | M022-417-214-2025 | 3set |
| Adjustable levelers | M023-417-061-3003 | 4 |
| Tip Kit | M022-417-214-2001 | 1 |
| Drawer Pull | M023-417-063-3020 | 5 |
| RTA Hardware | M023-417-214-2001 | 1 |

| RTA Hardware | | |
|---------------|------------------------|-----|
| Hardware List | | Qty |
| A | ⚔ Bolt 5/16(in)x25(mm) | 16 |
| B | ⊖ Flat Washer 5/16 | 16 |
| C | ⚔ Lock Washer 5/16 | 16 |
| D | ⚔ Allen Key 5mm | 1 |