M103-419-101-121-H/F/R QUEEN/KING/CAL KING BED MORDEN EDGE

ASSEMBLY INSTRUCTIONS

TWO(2)PEOPLE AND PHILIP'S SCREWDRIVER REQUIRED

UNPACK ALL PARTS AND CHECK AGAINST PARTS LIST ON THIS INSTRUCTION SHEET BEFORE DISCARDING PACKING AND CARTON!!

- 1) Connect the side rial and headboard/footboard by bolt (F).
- 2) Assemble the side rail and headboard/footboard using the curved washer (A), flat washer (B), lock washer (C), and nut (D) by wrench (E), as shown in Diagram A.
- 3) Assemble the support leg on the slat, as shown in Diagram B.
- 4) Mount the assembled support slats (done in step 3) onto the cleat of side rails with screws (G). Use a Phillips Head Screwdriver to tighten screws, as shown in Diagram C.

*** NOTE KEEP THIS SHEET!!! ***


In the unlikely event that you would need a replacement part for your furniture, please contact your local authorized Schnadig International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

	M103-419-101H/F/R		M103-419-121H/F/R		M103-419-141H/F/R	
	Queen Bed		King bed		Cal King bed	
Part Description	Part No.	QTY	Part No.	QTY	Part No.	QTY
Headboard (1)	M103-419-101-H	1	M103-419-121-H	1	M103-419-121-H	1
Footboard (2)	M103-419-101-F	1	M103-419-121-F	1	M103-419-121-F	1
Side rail (3)	M103-419-101-R	2	M103-419-101-R	2	M103-419-141-R	2
Slat (4)	M103-419-101-F-3017	13	M103-419-121-F-3017	13	M103-419-121-F-3017	13
Support leg(5)	M103-419-101-F-3018	6	M103-419-121-F-3018	12	M103-419-121-F-3018	12
RTA Hardware(6)	M103-419-101-F-3001	1	M103-419-101-F-3001	1	M103-419-101-F-3001	1
RTA Hardware(7)	M103-419-101-F-3001	1	M103-419-101-F-3001	1	M103-419-121-F-30011	1


RTA Hardware(6)					
NO.	Hardware List		Q'ty		
Α		Curved Washer	8		
В	0	Flat Washer	8		
O	0	Lock Washer	8		
D	(9)	Nut	8		
Е	M	Wrench	1		
F	1	Bolt	8		


RTA Hardware(7)									
NO.	Hardware List		Q'ty(Queen bed)	Q'ty(Cal/King bed)					
G	()********	Screw(#8x25)	26	26					

Created on 2019-06-08

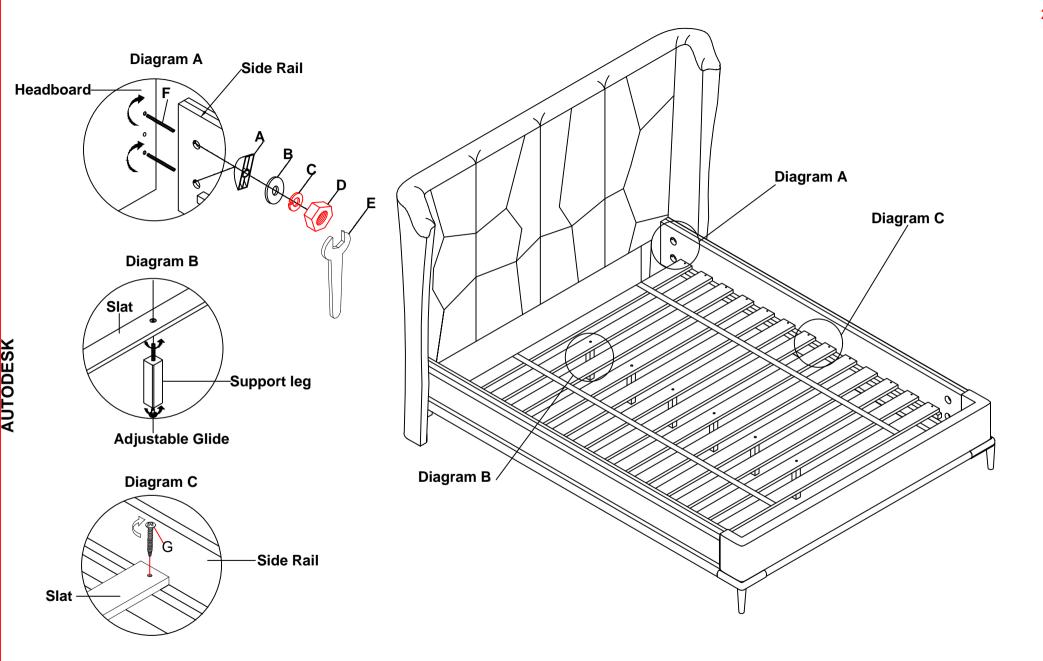

62"

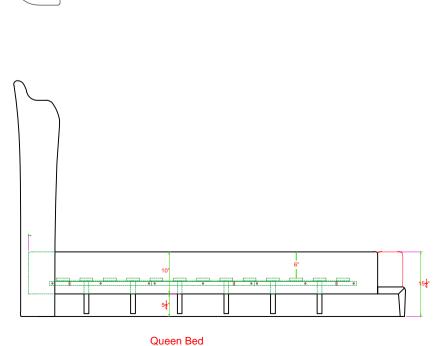

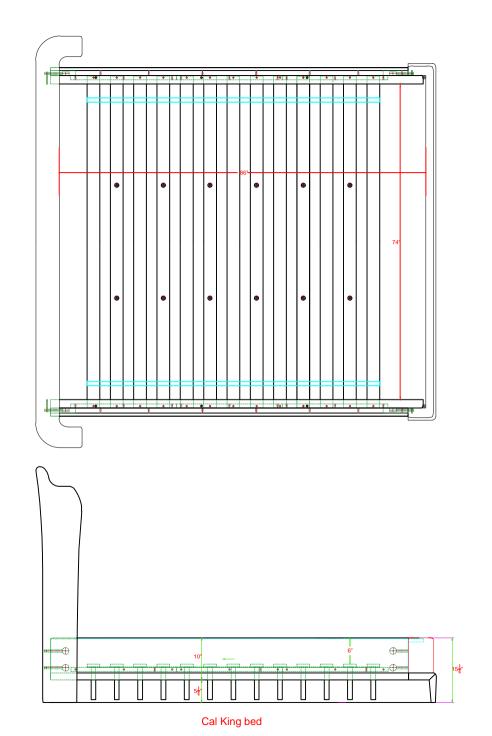

3of 3