




THE CONTEMPO SIDE
SIG-416-471

ASSEMBLY INSTRUCTIONS

PLEASE UNPACK ALL PARTS CAREFULLY AND CHECK QUANTITY AGAINST PARTS LIST BEFORE DISCARDING PACKING CARTON!

- 1) Open the inside carton carefully as if contains the fragile semi-precious white crystal stone top.
- 2) Place the metal base in the required display location.
- 3) Insert the rubber bumpers into the top metal rim as shown in step 1.
- 4) Carefully place the white crystal stone top into the top frame.
- 5) Adjust the bottom floor glides if the floor is not level.

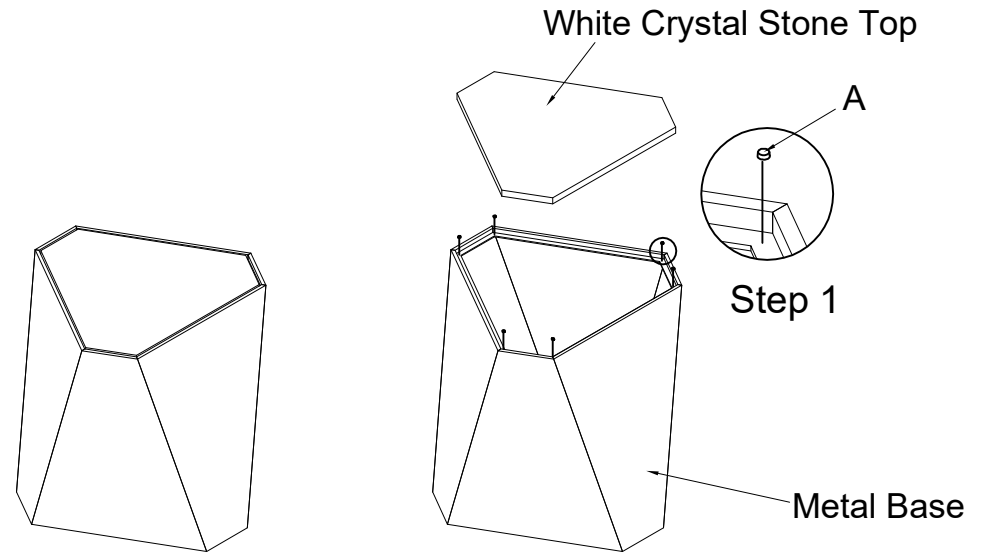

*** NOTE KEEP THIS SHEET ***

In the unlikely event that you would need a replacement part for your furniture, please contact your local authorized Schnadig International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

THE CONTEMPO SIDE		
SIG-416-471		
Part Description	Part No.	QTY
White Crystal Stone Top	SIG-416-471-0171	1
Adjustable Floor Glide	SIG-416-471-003	3
RTA Hardware	SIG-416-471-001	1

RTA Hardware			
Hardware List			QTY
A	○	Rubber Bumper	6