



AC VENT COVER INSTALLATION

STEP 1 BEND THE DIFFUSER TAB

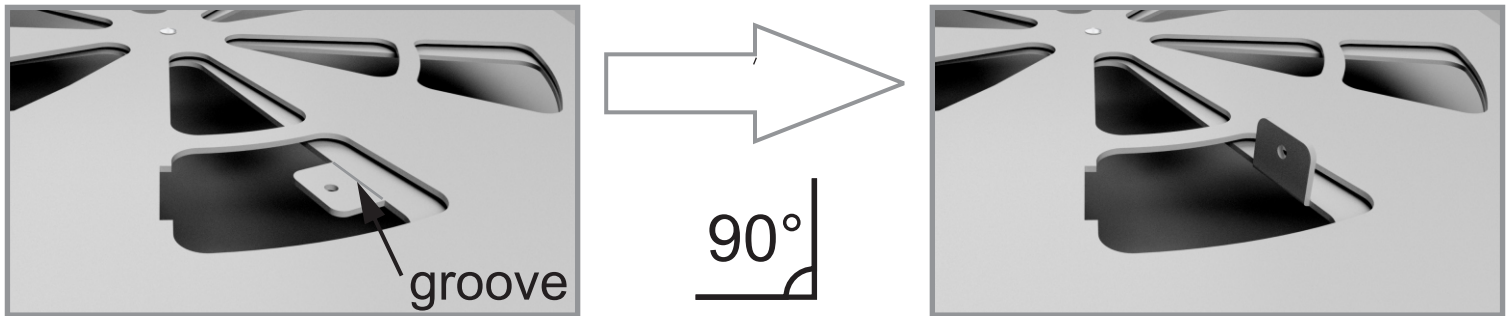

GENTLY HAND BEND THE DIFFUSER TAB ALONG THE GROOVE
NO MORE THAN 90° ANGLE

STEP 2 ATTACH TO CEILING

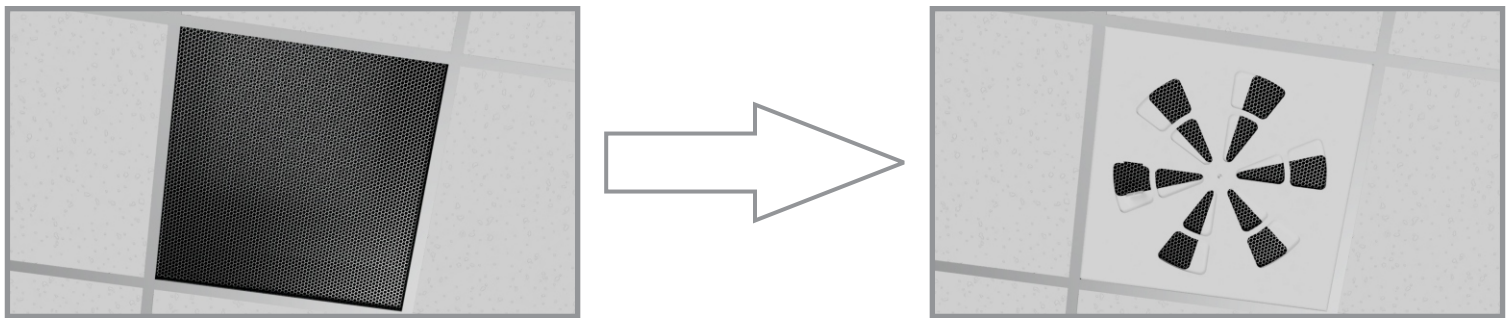

ATTACH TO UNDERSIDE OF THE CEILING TILE FRAME

STEP 3 ADJUST AIRFLOW

PUSH DIFFUSER CLOCKWISE TO CLOSE
AND COUNTERCLOCKWISE TO OPEN VENTS



PLEASE FOLLOW INSTRUCTIONS WHEN INSTALLING THIS PRODUCT.
USE CAUTION WHEN ATTACHING VENT COVERS TO CEILING.
ONLY USE THIS PRODUCT ON VENTS THAT ARE FLUSH TO CEILING.
KEEP OUT OF REACH OF CHILDREN. DO NOT MODIFY OR USE VENT COVERS
IN ANY OTHER WAY THAN ITS INTENDED USE.



ALWAYS USE A **STABLE**
LADDER TO REACH VENTS!

AUTUMN 

MADE IN USA

autumndirect.com