


# SPI-77500- CarPlay/Android Auto Camera interface

## DIP switch setup:

Models with stock 5.8" - (1, 2 & 5 ON and the rest OFF)

### For 5.8" Inch Screens

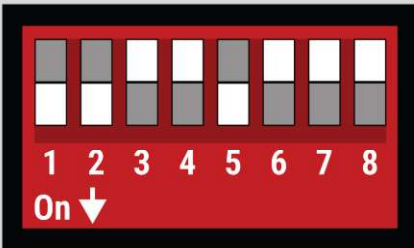


**Smart Link System**

	1	2	3	4	5	6	7	8
Off			✓	✓		✓	✓	✓
On	✓	✓			✓			

Models with stock 7" screen - (1, 2 & 4 ON and the rest OFF)

### For 7" Inch Screens

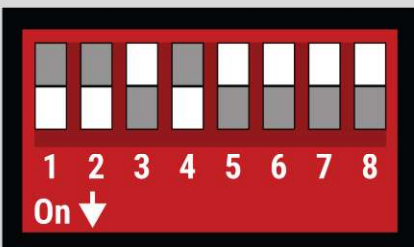


**Smart Link System**

	1	2	3	4	5	6	7	8
Off			✓		✓	✓	✓	✓
On	✓	✓		✓				

Models with stock 8" screen - (1, 2, 5 & 6 ON and the rest OFF)

### For 8" Inch Screens

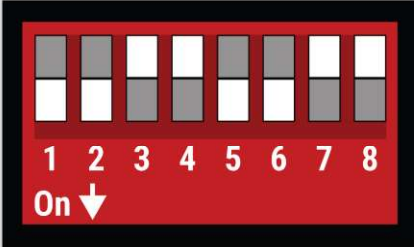

**Smart Link System**

	1	2	3	4	5	6	7	8
Off			✓	✓			✓	✓
On	✓	✓			✓	✓		


*Not compatible with 9.2" screen models.*

## Read these notes

1. A power wire may need to be pulled from the taillight to the interface to get the backup camera to work.
2. The sound is via AUX or AMI. In case MEDIA-IN is not active, an AMI-AUX cable must be connected for sound. You can order this as an option: MMI-97840 (sold separately). You only need to plug in the AMI cable to activate the AUX function.

3. Operation via screen; steering wheel buttons do not work (except volume).
4. Please disconnect the Bluetooth connection between the phone and car stereo when using Apple CarPlay.

## Volkswagen carplay connection

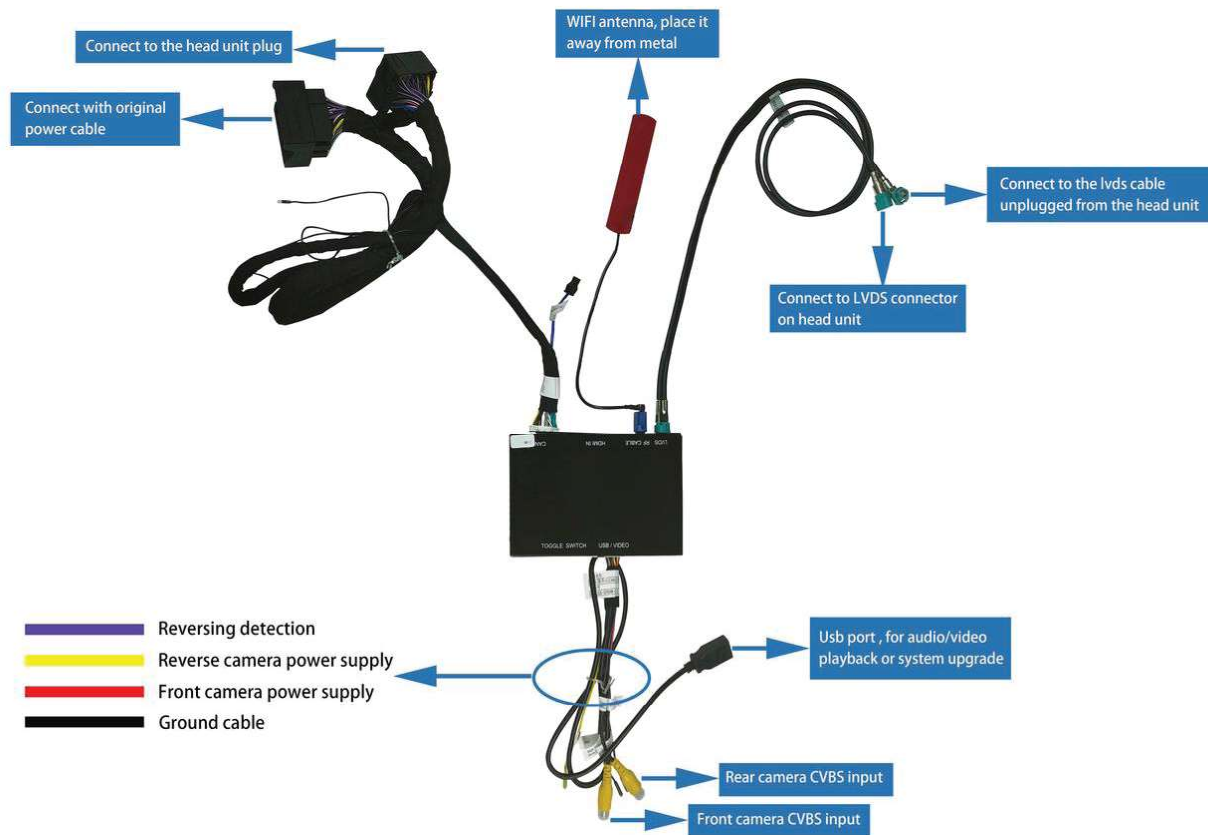

### Installation Guide:

Normally the glove box has three bolts at the top, two bolts at the bottom and one bolt in the centre. In some cases, you have to release the clip-holder of the big cable-tree and make space for the interface and to take out the multimedia interface. Push the door holders up or down to get them out of the frame.

You will need some BECKER radio release keys to remove the 5F unit from the glove box. We do sell these separately also if needed but these are normally provided with the radio handbook in the car.

The LVDS connection on the MIB 5F din unit will be teal or pink/purple. It is not the yellow one.


The kit come with a VW microphone. You can either retain the stock VW microphone or add the new one supplied with the kit (if you didn't have a stock microphone). Follow the blue wires with the quick release plug. Keep it as it is if you have the factory microphone. If you are adding the new one, then unplug it and plug in the new microphone cable and fit the new microphone in at the roof mounted light switch where the factory microphones are usually fitted.

# Operation Instruction:

- How to switch from Original to Add-on interface




Order: OEM - Add on - OEM

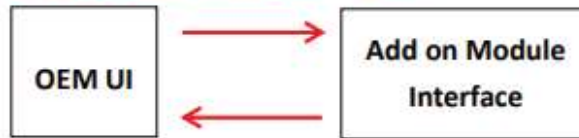

It will switch to add on module UI automatically when a phone/USB stick connected.

How to delivering audio to OEM radio

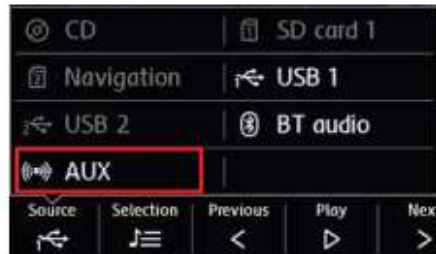

**NOTE!** Make sure switch to "AUX" mode on original car stereo for audio transmission before using the CarPlay integration.

## Apple CarPlay



Touch to control all functions of Apple CarPlay

**NOTE!** Please **disconnect** the Bluetooth connection between the phone and car stereo when using Apple CarPlay.



## Android Auto



**NOTE!**

Make sure smartphone connect to original car stereo Bluetooth (**Only tick CALL AUDIO, uncheck MEDIA AUDIO**) for phone call audio delivering when using Android Auto.



Touch to control all functions of Android Auto

