


Installation Instructions for Replacement Vinyl Roof

Step 1 - 1st spline in roller - slide vinyl in carefully, one person at each end to prevent sagging, be very careful that vinyl does not catch as it is slid in.



Step 2a - space vinyl evenly on roller

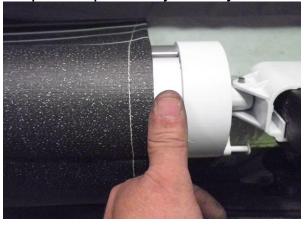

Step 2b - space vinyl evenly on roller



Step 3 - blunt angle tool used to gently press vinyl into second groove - we use 40x40x1.6mm angle that has been smoothed and rounded



11-15 Oasis Court, Clontarf, QLD 4019 Phone: 07 3284 3284 Fax: 07 3284 5969 E-mail: enquiries@aussietraveller.com.au MELBOURNE

235A Barry Road, Campbellfield VIC 3061 Ph: 03 9357 6565 Fx: 03 9357 6515 E-mail: info@aussietraveller.com.au

Step 4 - using blunt tool to GENTLY press vinyl into second groove



Step 6a - trim end of second spline to aid with insertion



Step 7a - sharp pointed tool to drag spline into second groove



Step 5 - spray silicone to aid insertion of second spline




Step 6b - close up of trimmed second spline



Step 7b - dig point of tool into spline NOT ALL THE WAY THROUGH



Step 7c - Grasp tool firmly with palm resting against vinyl

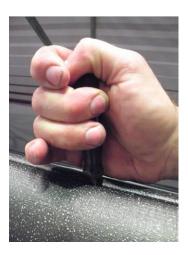


Step 8 - drill one eight hole right 3mm outside of vinyl at each end - DO NOT DRILL VINYL



Step 7d - using a smooth motion, drag spline down length of second groove



Step 9a - Put 6G screw into hole at each end

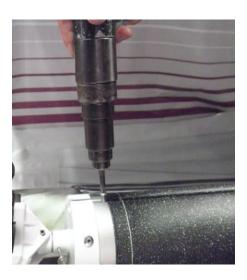

Step 9b - screw should look like this - it stops the vinyl from moving along the roller tube - trim excess spline after screws firmly attached

