

Please remove baseboard, and make sure the bottom of closet frame are leaning against the wall


STEP 05
FIXING THE CABINET ON THE WALL

Rev.01




REF.: MCL001





 IT IS REQUIRED TO FIX THE CABINETS ON THE WALL RISK OF FALL!

ASSEMBLY INSTRUCTIONS
CLOSET

DRILL THE WALL USING A DRILLER IN ORDER TO INSERT THE PLUG

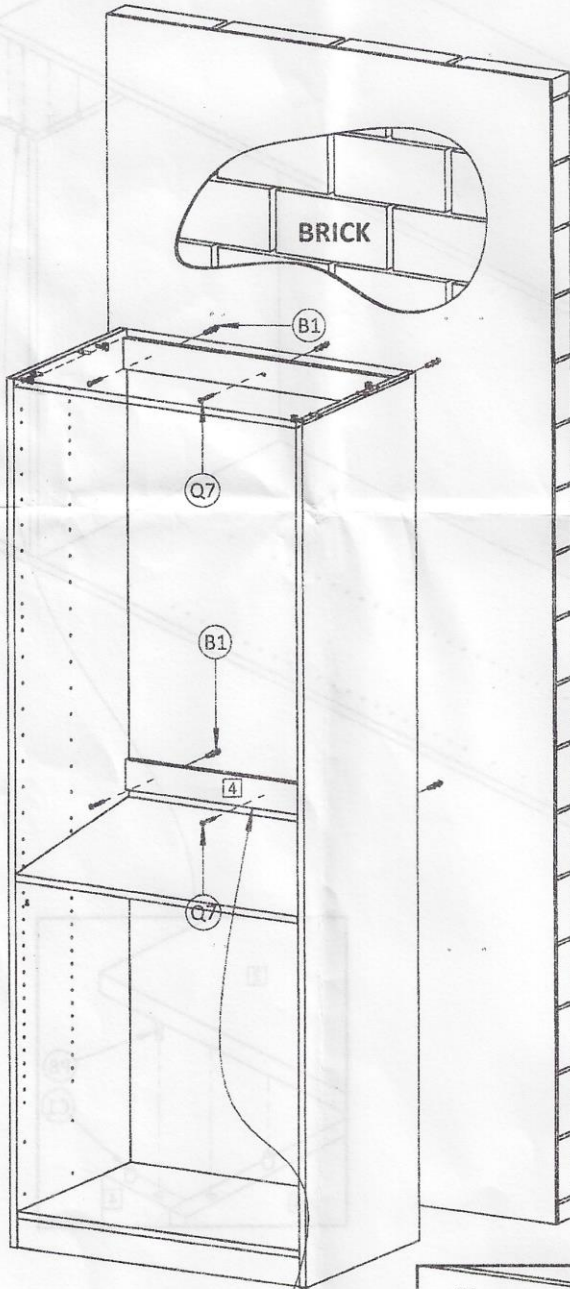

SCREW IN THE CENTER OF THE FRAME

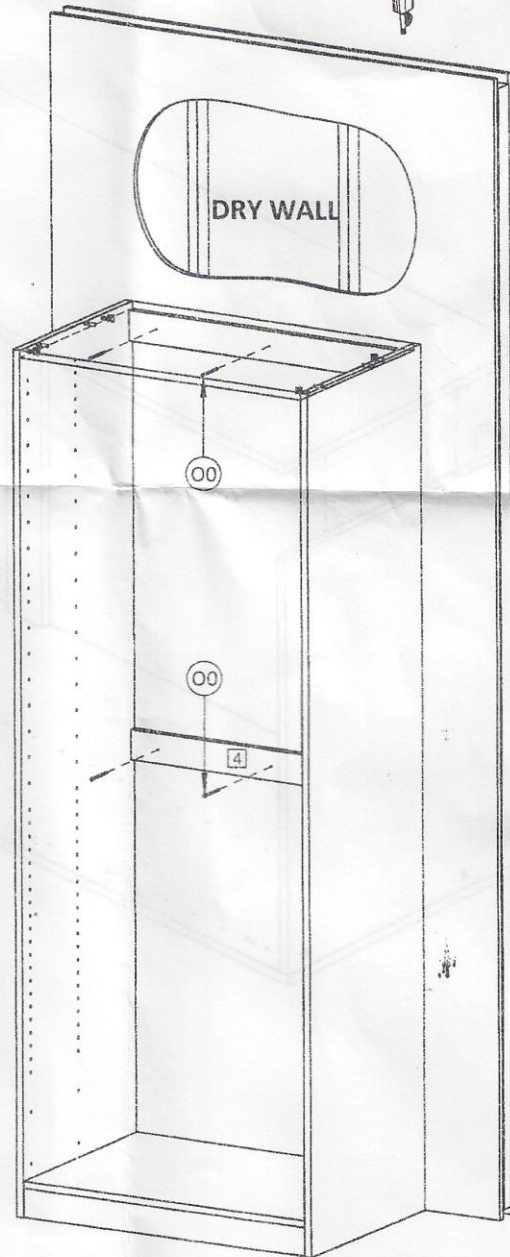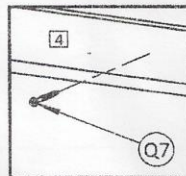

THE CABINET MUST ALWAYS BE SUPPORTED ON THE GROUND