TOP VEHICLE TECH.

KWPOR7 PORSCHE CAYENNE 2011-2016 INSTALLATION MANUAL

V1.0421




This dash image is a visual representation for display purposes only.

The information provided in this document is subject to change without notice due to changes and/or improvements to the product/s.

ABOUT THIS PRODUCT

The *KWPOR7* installation kit allows for the retention of the vehicle's steering wheel controls and maintains the original aesthetic of the interior when installing a new car stereo. The *KWPOR7* gives you everything you need for a complete install in one box. The components of this kit are compatible for the Porsche Cayenne (2011-2016) with non-amplified PCM 3.1 stereos. The wiring harness and Infodapter interface will retain the steering wheel controls and factory phone buttons, vehicle settings and Aux and USB retention. It also aids in generating parking sensor graphics for the new stereo and provides an input for both an OEM and aftermarket reverse camera (if applicable). Supplied with a Quadlock connector.

NB: this installation kit is for non-amplified systems. Warning tones & parking sensor audio will still be active through the rear/front speakers.

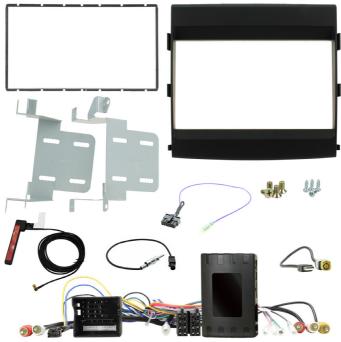

CONTENTS

- 1x Fascia plate (with accessories)
- 1x Instruction manual
- 1x Steering wheel control harness and Infodapter interface (with USB retention lead)
- 1x Antenna adapter
- 1x DAB antenna adapter
- 1x Stereo patch lead

CUSTOMER SUPPORT

Installations should be carried out by, or under the guidance of an experienced installer. If you do encounter any problems during the installation of this product, then please contact our dedicated customer service team at: Phone: **01420 470 605** E-Mail: **help@topvehicletech.com**

FITTING GUIDE

STEREO REMOVAL

1. Remove both the left and right air vents by using a flat blade. You need to release 6x clips from the inside of the vents: 2x left, 2x right, 1x top, 1x bottom. These clips are holding the vents firmly into place. Once out, disconnect the wiring.

2. Before removing the head unit, it is best to put gear shifter in either 'Drive' or '4th' gear to allow for room when removing radio.

3. Remove the 4x screws that secure the main stereo and remove whilst disconnecting the wiring.

DAB ANTENNA INSTALLATION

1. Open the passenger side door and proceed to pull away the door trim from the pillar.

2. Using a set of panel removal tools, begin to pry away the pillar casing.

3. The glovebox will need to be opened/removed to route the antennas wiring.

4. The DAB antenna not only has a self adhesive backing, but also features a black earth sheet. When placing the DAB antenna, the earth sheet **MUST** be placed onto the metal part of the pillar. The antenna itself must be located roughly 15cm from the top of the windscreen.

Note: this antenna must not be placed atop any kind of heating elements, this will interfere with the antenna's signal.

5. Once happy with the placement, take the 3m of wiring extension and feed it down through to the stereo's opening. With the wiring adjusted to the appropriate length, feel free to re-install the glovebox.

FASCIA PLATE SET-UP

1. Attach the brackets to the new stereo using the screws within the kit. With the brackets attached, offer the whole unit to the back of the fascia to get the correct alignment.

2. Once done, secure the stereo to the fascia panel using the 4x self tapping screws found within the kit.

3. When happy with the alignment, and the "*Stereo Installation*" process is complete, screw the stereo into the dashboard using the pre-existing screws. Then re-install the vents either side, re-connecting the wiring in the process.

FITTING GUIDE

BEFORE INSTALLATION - DIPSWITCHES

On this particular interface are a set of dipswitches. These dipswitches have the following properties:

1: OFF - Kenwood.

ON - Pioneer.

2: OFF - NTSC reversing camera (default). ON - PAL reversing camera.

3: Change from OFF to ON to 'reset' screen setting to factory default.

Note: during this procedure, the screen background will change to red and no settings adjustments can be made. 4: Not Used.

STEREO INSTALLATION

1. Take the steering wheel control interface in hand and connect both the 12-way stereo patch lead and the 14-way steering wheel harness connectors to the corresponding sides.

2. Connect the bullet connector from the stereo patch lead to the 'steering wheel remote input' on the back of the new stereo.

3. Connect the 4-way connector on the camera extension harness to the interface.

4. Connect the yellow RCA connector to from the camera extension to the reverse camera input of the stereo.

To retain factory OEM reverse camera: attach the yellow female RCA from on the camera extension harness to the male yellow RCA on the main wiring harness.

To add an aftermarket reverse camera: attach the yellow female RCA from on the camera extension harness to the male yellow RCA of the aftermarket reverse camera.

5. Connect the USB retention lead between the vehicles OEM connection and the USB connection from the stereo.

6. Connect the Red/White RCA connectors labelled 'AUX' to the back of the new stereo.

7. Connect the DAB antenna's SMB connector to the back of the new stereo.


8. Attach the antenna adapter to the vehicles pre-existing connection and the back of new stereo.

9. Attach the additional wiring on the harness to the back of the stereo: **Pink** - Speed Pulse **Purple** - Reverse Gear **Green** - Park Brake **Blue** - Amp Remote **Grey** - Mute

10. When all the above wires (and any additional accessories) have been connected, finally make the connections between the stereo and the vehicles pre-existing power/stalk connectors.

STEERING WHEEL CONTROL FUNCTIONALITY

Please note: configuration layout may differ dependent on vehicle model.

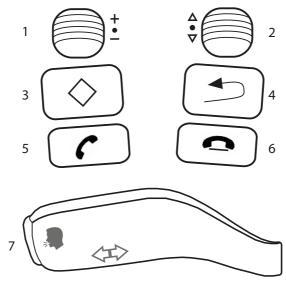

STEERING WHEEL CONTROLS

- 1. Volume +/- (Scroll) Mute (Short Press) Enter Infodapter Menu (Long Press)
- 3. Programmable Function (on both Short & Long Press)*
- 7. Source (Short Press) Voice Assist (Long Press)

STEERING WHEEL CONTROLS - IN INFODAPTER

1. Menu + / Menu -Select Menu Item (Short Press) Exit Infodapter Menu (Long Press)

- 2. Instrument Cluster Navigation
- 4. Instrument Cluster Navigation
- 5. Pick Up
- 6. Hang Up

2 - 7. Functions as above.

STEERING WHEEL CONTROLS - IN PARKING MODE (when camera is active)

1. Camera / Parking Graphics Toggle (Long Press)

***PROGRAMMABLE BUTTON**

The diamond button on the steering wheel can be programmed to perform specific radio functions whilst in the Infodapter menus on both a long and short press. Function options include: Source, Track +, Track +, DSC + and DSC -. To assign a function, enter the Infodapter menu and go to the 'Preferences' sub-menu. Select the desired button function against the 'Diamond Short Press' and 'Diamond Long Press' options.

NOTE: If you wish to use the diamond button as described above, ensure that the button is set to any radio function in the vehicle's **OEM** instrument cluster menu. If you do not wish to use the button for this purpose, ensure that both short and long press options are set to 'None' in the Infodapter 'Preferences' sub-menu.

INFODAPTER FUNCTIONALITY

As well as steering wheel control functionality, this interface allows the retention of key vehicle features and functions via a bespoke 'Infodapter'. Accessing the Infodapter, you are able to navigate through the following options and settings:

INFODAPTER SETTINGS

Within 'Infodapter Settings' you are able to alter a the look and feel of the Infodapters menu/display:

Screen Size/Position

- Horizontal Size
- Horizontal Position
- Vertical Size
- Vertical Position

Picture Settings

- Brightness
- Contrast
 Saturation
- Saturation

Preferences

- Camera Connected Choose the style of camera connected to the vehicle (if applicable).
- *Camera Active (**OEM/Reverse**) Choose whether the image appears on the display when triggered by the Porsche system, or only when reverse gear is active.
- *RVC Grid Lines (Yes/No) Rear view camera guidelines.
- **Reverse Priority (*Park Assist/Camera*) Choose whether the display shows the parking graphics or reverse camera image on screen. *Note this can also be changed instantly via the steering wheel controls.*
- **Camera Delay (0 to 20) Increase camera delay to reduce 'rolling' effect on screen when switching.
- Diamond Short Press Select '*short press*' function for steering wheel control
- Diamond Long Press Select 'long press' function for steering wheel control
- Park Brake Source Set 'Park Brake' output to activate when park brake is on (*Brake*), when speed is less than 3km/h (*Speed*) or to remain on at all times (*Always On*).
- Restore Factory Settings select 'Yes' to return all Infodapter settings to factory defaults.

*Only available when using OEM camera **Only available when using OEM or Aftermarket camera

LANGUAGE & VERSION

Within the 'Language' menu, you are able to select between a wide array of dialects. This is default to English upon installation.


Within 'Version', you are able to view the current firmware that is being utilised by the Infodapter.

OEM PARKING SENSOR GRAPHICS

The Infodapter interface will automatically generate a replication of the OEM front/rear parking sensor graphics based on the vehicle's data. These graphics have been designed to replicate the Porsche's original data to retain the OEM feel of the system.


SWITCHING BETWEEN CAMERA & GRAPHIC DISPLAY MODES

To toggle between the reversing camera and the parking graphics while one is active on screen, hold down the Volume button (1) whilst the camera or graphics are active. This setting can be changed by the '*Reverse Priority*' setting in the '*Preferences*' sub-menu.

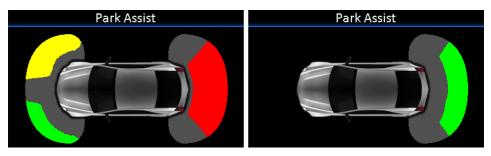

www.topvehicletech.com

WIRING DIAGRAM

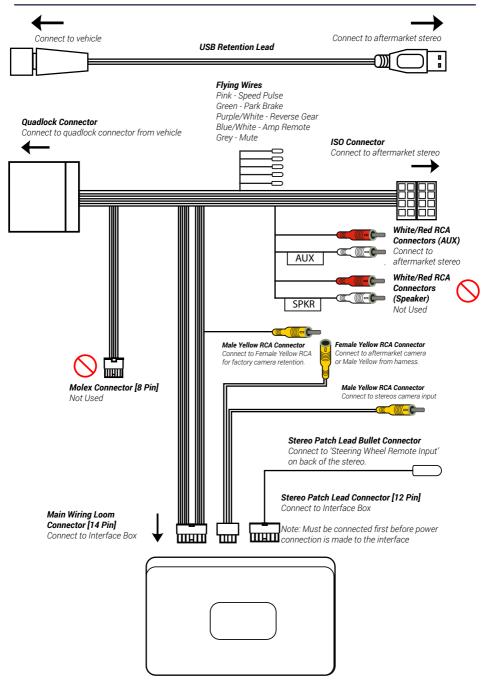



TECHNICAL ASSISTANCE

If at any point you experience any problems and need any assistance before, during or after the installation process, please contact us via :

Phone: 01420 470 605 E-Mail: help@topvehicletech.com

Mon - Fri 9am - 5.30pm GMT

If you would like to download a digital copy of this manual, or any other product, then please visit the *www.topvehicletech.com* website.

This manual is considered correct at the time of printing but is subject to change. For the latest manuals & updates, refer to our website.

Copyright 2021 by TopVehicleTech.

All rights reserved. No part of this publication may be reproduced, distributed or transmitted in any form or by any means, including photocopying, recording, copying or other electronic or mechanical methods, without the prior written permission of the author.