



# X-ACT CONTOUR

## FLOOR LINERS

### CARE AND USE INSTRUCTIONS – PN:53101

---

Thank you for selecting X-act Contour™ Front Floor Liners from Husky Liners Inc. Your new front floor liners are custom molded to fit your specific vehicle's floor board. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.



LEFT OR DRIVER




RIGHT OR PASSENGER



**HUSKY FLOOR LINER RETAINING CLIP INSTALLATION INSTRUCTIONS**

***YOUR NEW LINER SET INCLUDES OUR NEW FLOOR LINER RETAINING CLIP SYSTEM. THIS RETAINING CLIP GIVES THE EXTRA SECURITY WHILE KEEPING SPILLS AND DEBRIS TRAPPED INSIDE THE LINERS. TO INSTALL THE HUSKY® LINER RETAINING CLIPS, SIMPLY FOLLOW THE INSTRUCTIONS BELOW:***

- 1) Pre fit your new Xact Contour floor liner in your vehicle (Image 1).
- 2) Insert the screw-in carpet retention screw into the bottom of the Xact Contour liner (Image 2).
- 3) Press down on the liner to pre-mark the carpet screw into the carpet (Image 3).
- 4) Screw the carpet screw into the carpet with a flat blade screwdriver (Image 4).
- 5) Press the Xact Contour liner over the top of the carpet screw post (Image 3).

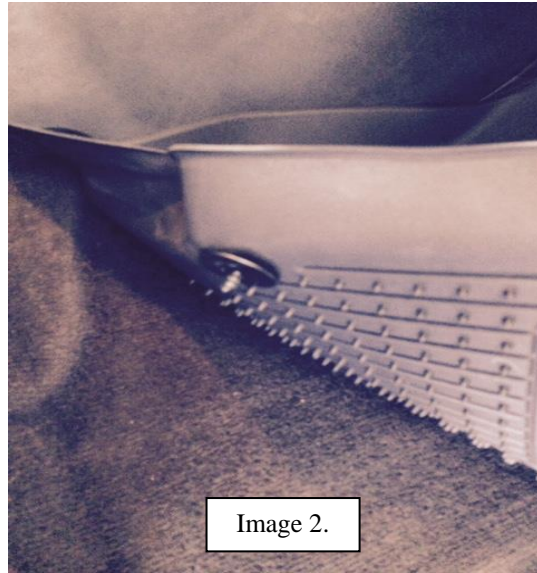

IF YOU HAVE ANY QUESTIONS REGARDING THE INSTALLATION OF YOUR HUSKY® LINER RETAINING CLIPS, JUST GIVE US A CALL MONDAY THROUGH FRIDAY FROM 8:00 AM – 5:00 PM CENTRAL TIME AT 800-344-8759 OR E-MAIL US AT: [contactus@huskyliners.com](mailto:contactus@huskyliners.com).