


ARTEC INDUSTRIES - JL4000 CAD/FAD SHIELD INSTALLATION

1: Remove Factory FAD skid using 10mm wrench/socket to remove 4 OE bolts holding factory skid

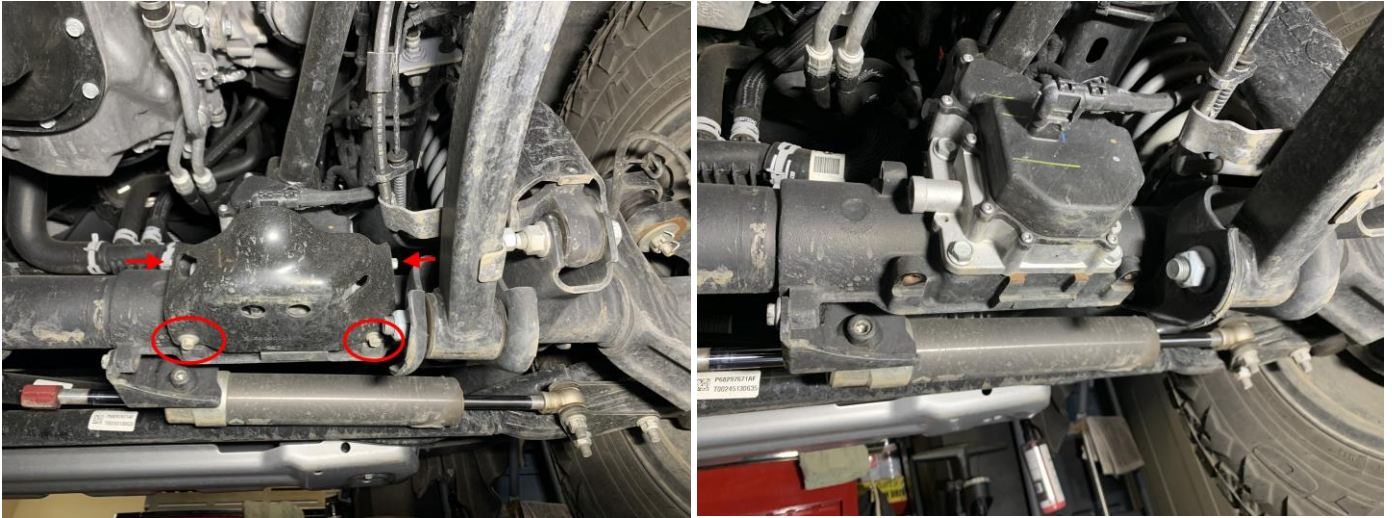

NOTE: 2021+ Models have updated harness support which can obstruct CAD SHIELD from being installed properly. Release locking tab on harness and remove harness from CAD Module allowing the SKID to install correctly. Brake line support bracket may also need to be manipulated slightly to give additional clearance:



2: Install Artec CAD SHIELD using 10mm wrench and two OE M8 flange bolts on both sides of CAD/FAD Model; continue by using 5MM HEX tool and two 8mm countersunk bolts provided in kit hardware. Tighten all hardware starting with HEX head bolts first:



3: Once CAD SHIELD is all torqued down, reconnect harness at this time.



FINISHED!

