
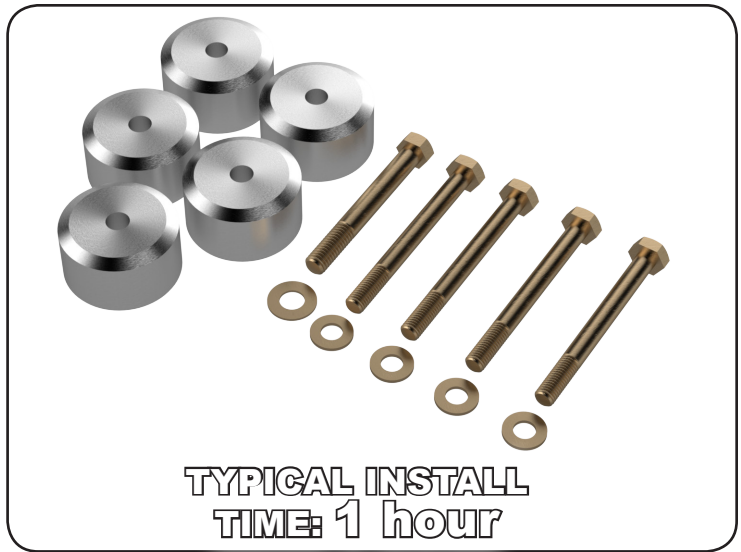


# ARTEC INDUSTRIES TJ/LJ HD BODY MOUNT SPACERS

Thank you for your purchase of our TJ/LJ HD body mount spacers. If you have any questions that are not answered in these instructions, please feel free to contact us directly at sales@artecindustries.com or 855-278-3299 and we will be happy to help you.

## Bill of Materials TJ2025

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TJ2025-1	Aluminum Body Lift Spacer 1.25"	5
2	HW0090	7/16"-14 x 4" Long Hex Head Cap Screw Grade 8 Yellow Zinc	1
3	HW0059	3/8" Flat Washer Type 1 Yellow Zinc	5
4	HW0091	7/16"-14 x 3.75" Long Hex Head Cap Screw Grade 8 Yellow Zinc	4

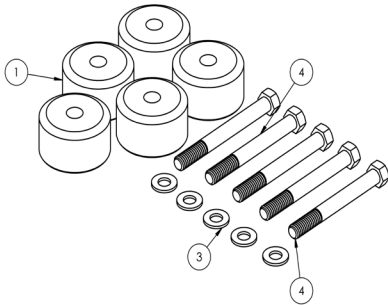

## REQUIRED TOOLS

- Floor Jack or Screw Jacks
- 5/8" Socket

**STEP 1.** Unpack contents of shipment. Make sure that all of the parts required are included with your kit. If any items are missing, and packaging is damaged, report it to the shipping company driver, KEEP ALL ORIGINAL PACKAGING & contact us.

**STEP 2.** You have probably just finished installing your HD Lifted Body Mount Brackets. Now your ready to install your spacers on the remaining body mounts. Since your bolts are already removed you simply just need to place the spacers on top of the body mount bushings. There are two different length bolts in this kit. The single longer bolt is used on the grill body mount the remaining bolts are to be used on the rear body mount.



**STEP 3.** Install the bolts in their noted location. Finish with a final torque of 35 FT/LBS. If you have not already torqued the side body mounts do so and torque to 50 FT/LBS.

**NOTE: THIS KIT INVOLVES VEHICLE MODIFICATION AND MECHANICAL SKILLS. IF YOU ARE NOT CONFIDENT IN YOUR SKILLS, CONTACT A PROFESSIONAL INSTALLER.**