


Wiring information - E30 M20/M42 into E21


Mounts and other parts available for this swap at www.classicdaily.net

E21 C101 PIN	E30 C101 PIN	FUNCTION
1	5	oil pressure light
3	13	fuel pump
5	1	alternator charge
6	6	DME Switch Power
8	7	Coil/O2 Power
10	18	Starter
13	4	Coolant temp
15	9 (will need adapter)	Tach
no connection	12	Check engine light ground

E30 C101 Late (also look at connector for pin numbers) Not all C101s have pin 9 for tach. If yours does not you will need to connect to the c103 pin 1 (flat connector near DME)

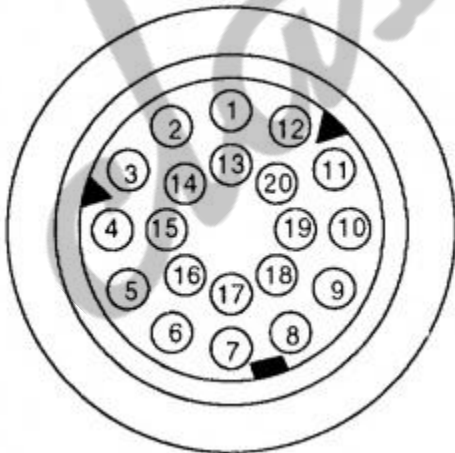

E21 C101 (fuse box connector)

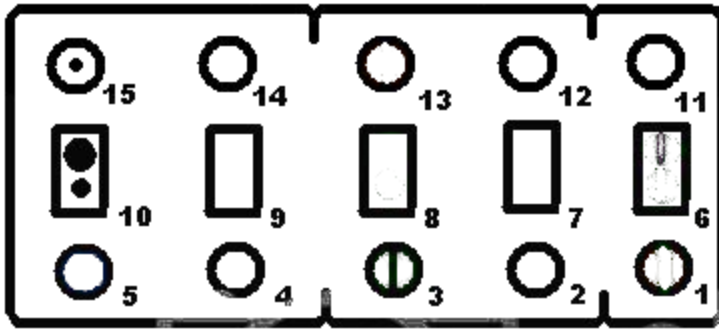

Notes:

- If after wiring this your car does not shut off when you turn the key off you need to add a diode in line with the alternator charge wire. Have the stripe towards the engine wiring.
- If installing a 6 cylinder in your E21 you will need a tach adapter or aftermarket tach. Check our site for different options here.

ClassicalCar.com