
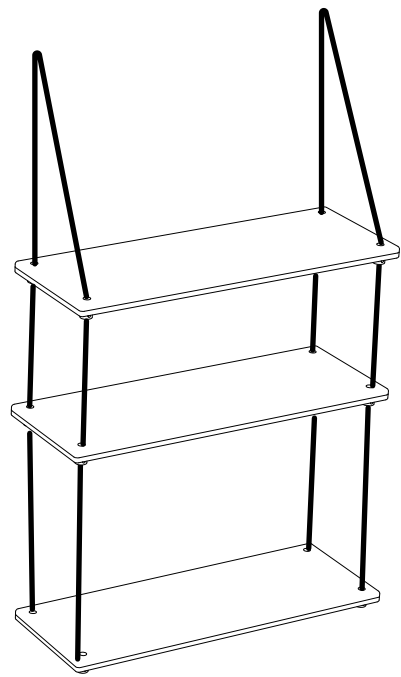


SNURO

Assembling Guide | Snuro Single (A) & Snuro Triple (B)

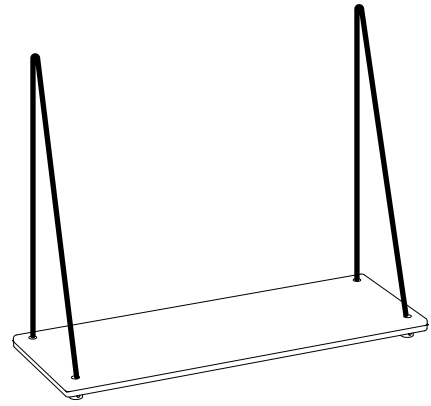

1x

3x

4x

12x

2x

1m each

2x







2.50m each

Simple assembling !





You only need a M6 threaded fitting to fix the connectors of your Snuro Shelving.


1 | Rope threads into the drill holes of the shelf

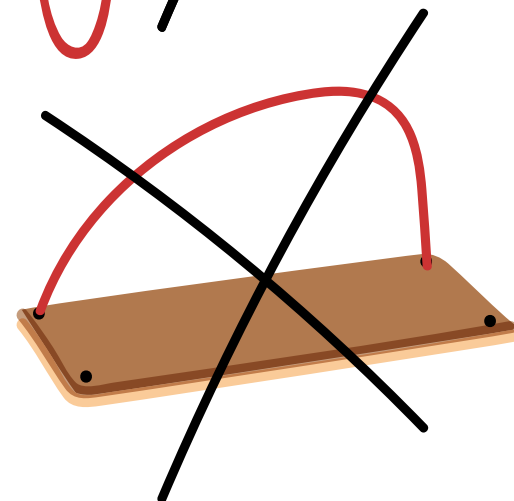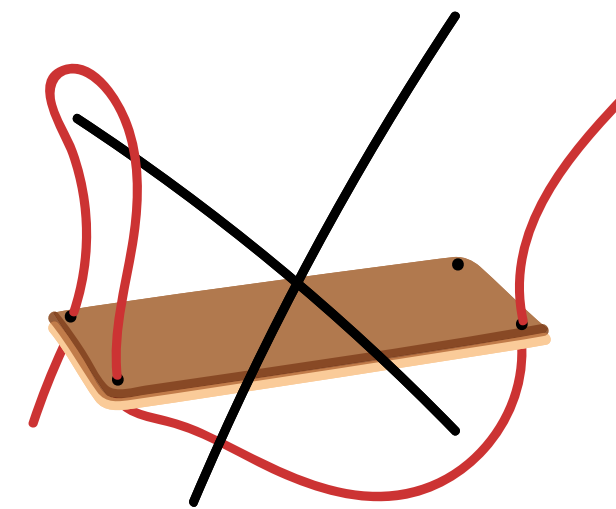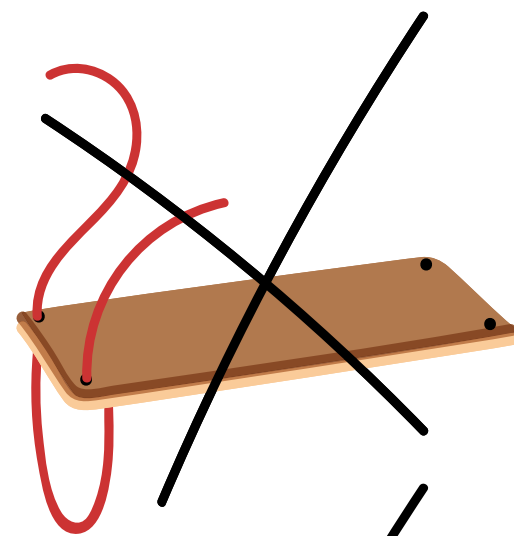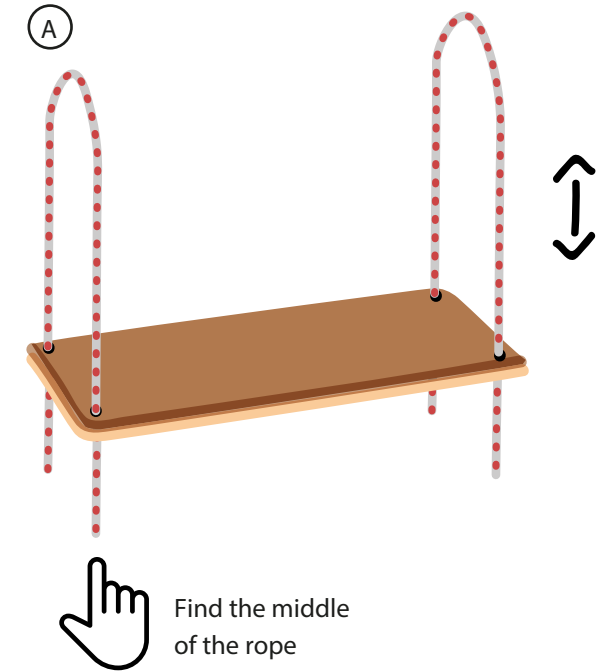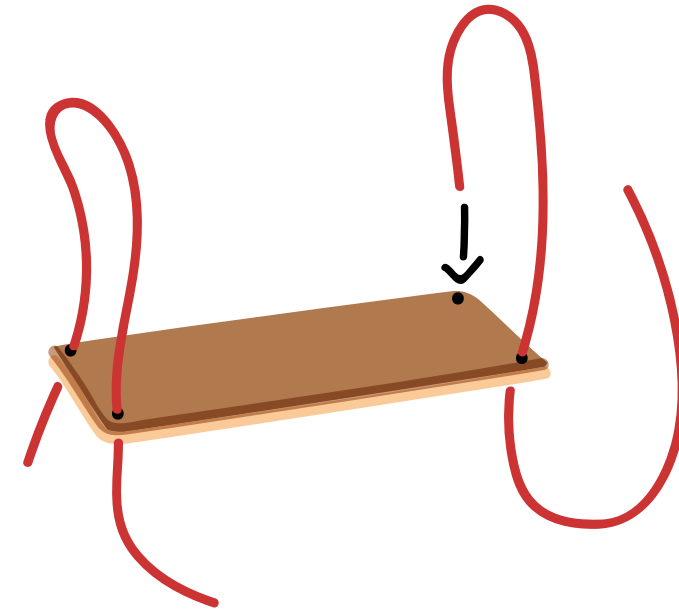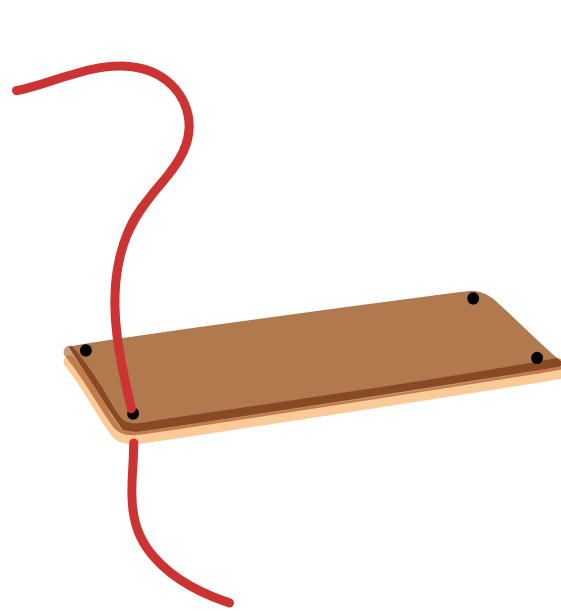


2 | Slide in the metal connectors

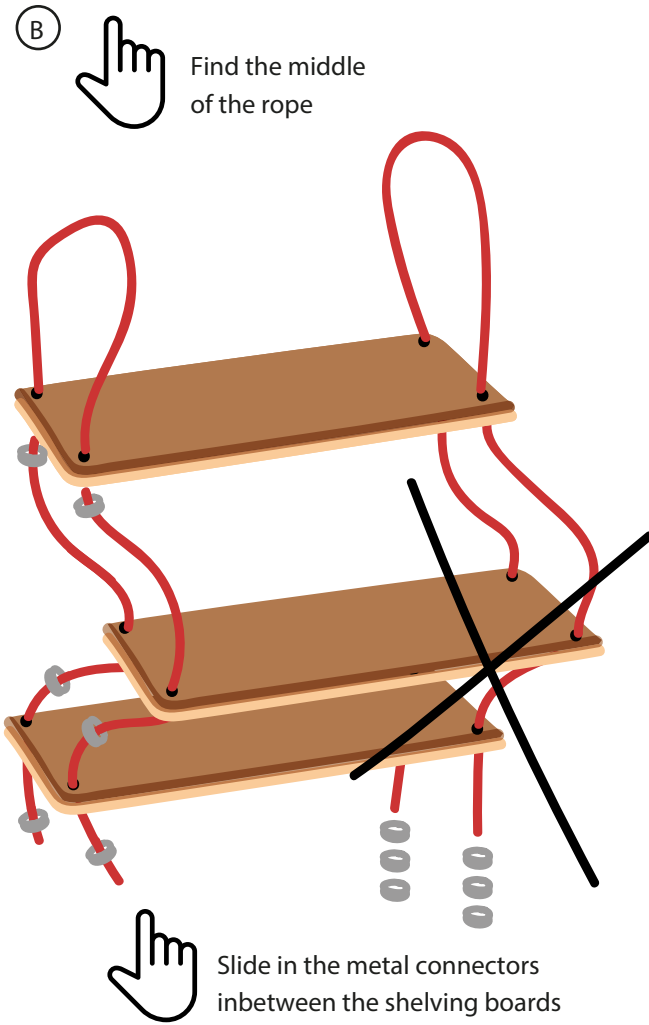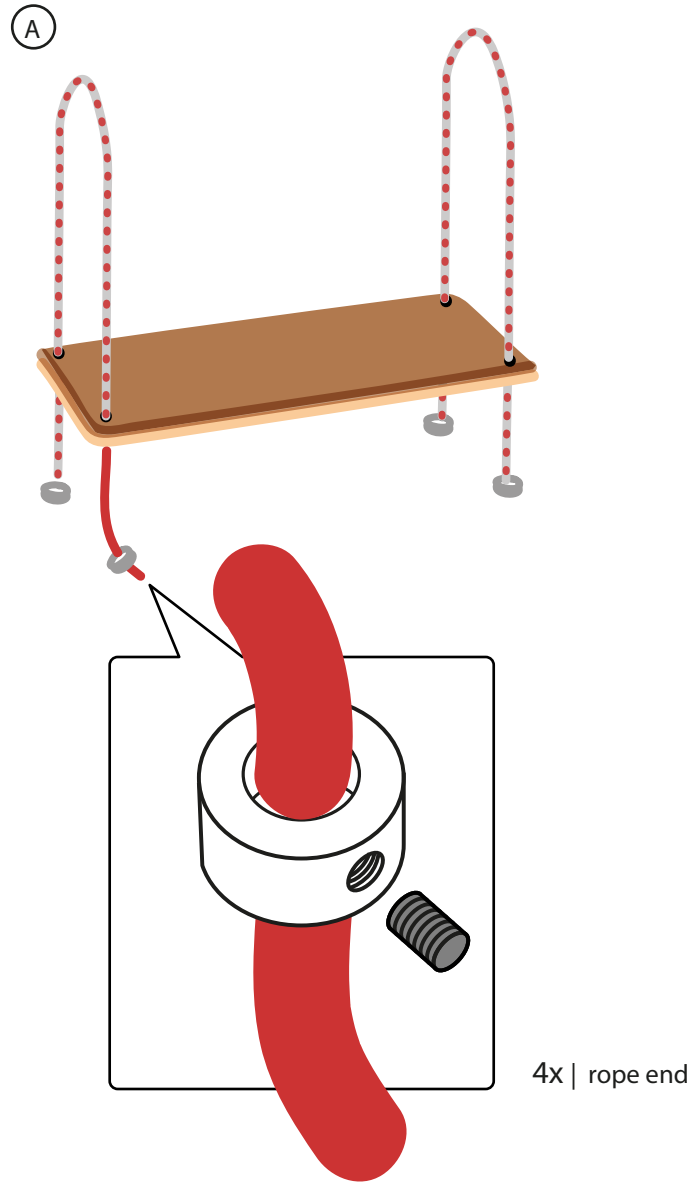




3 | Define the right position of the metal connectors

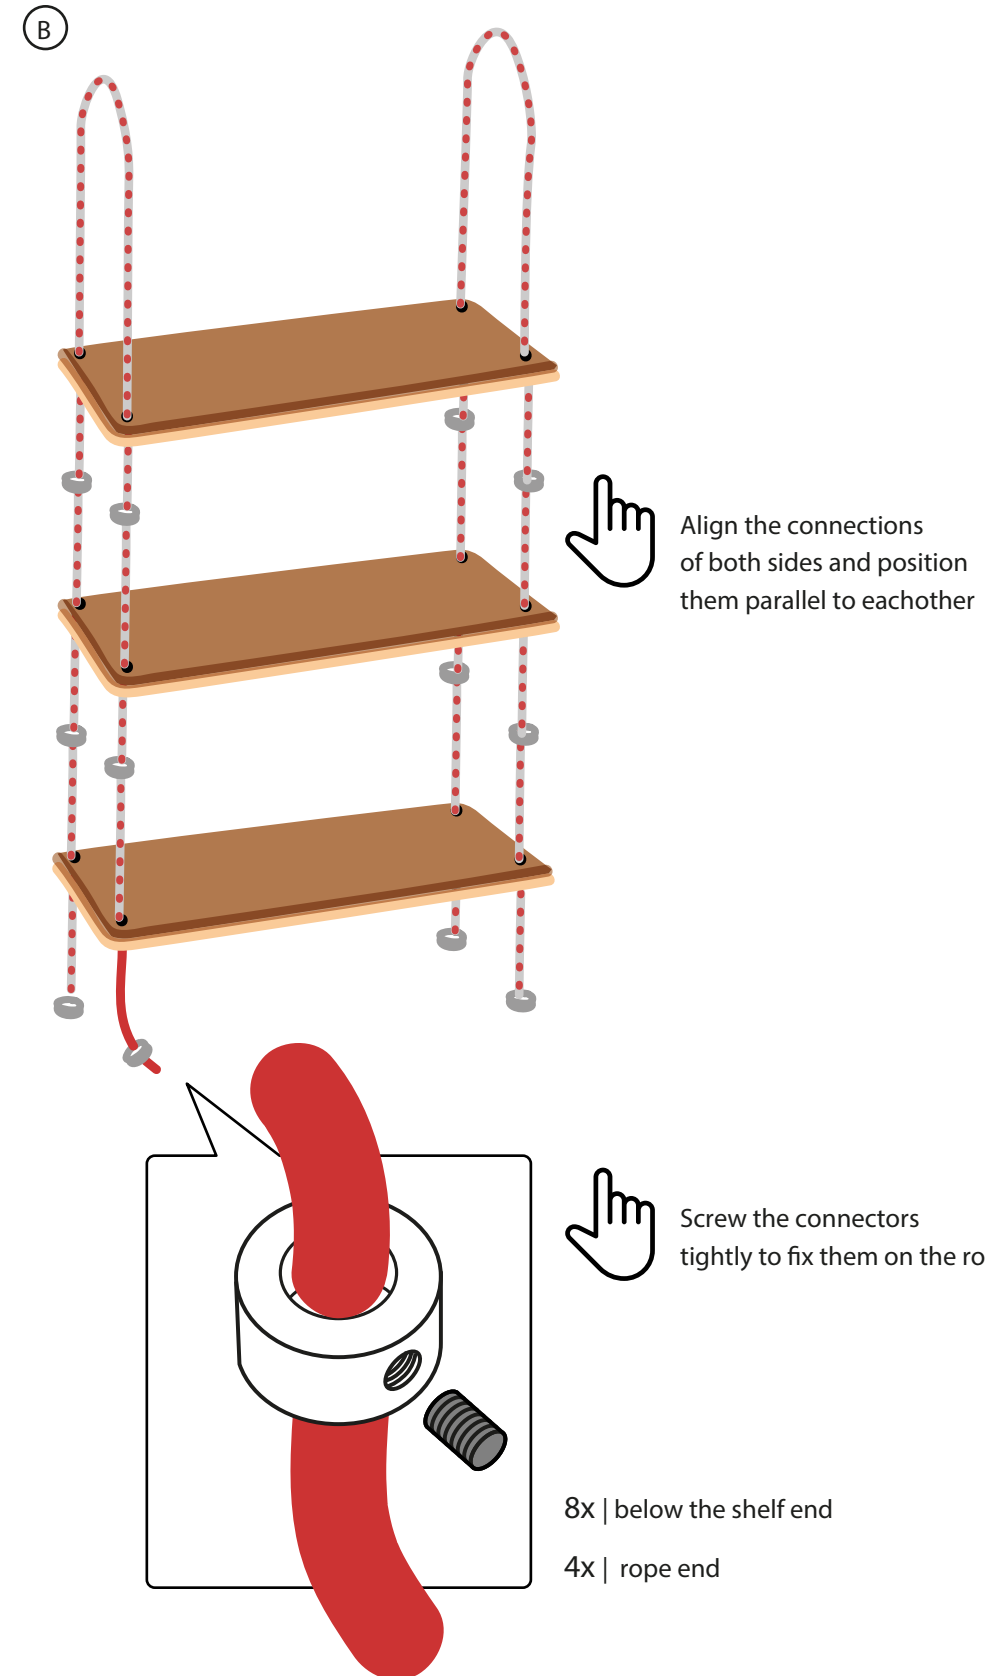

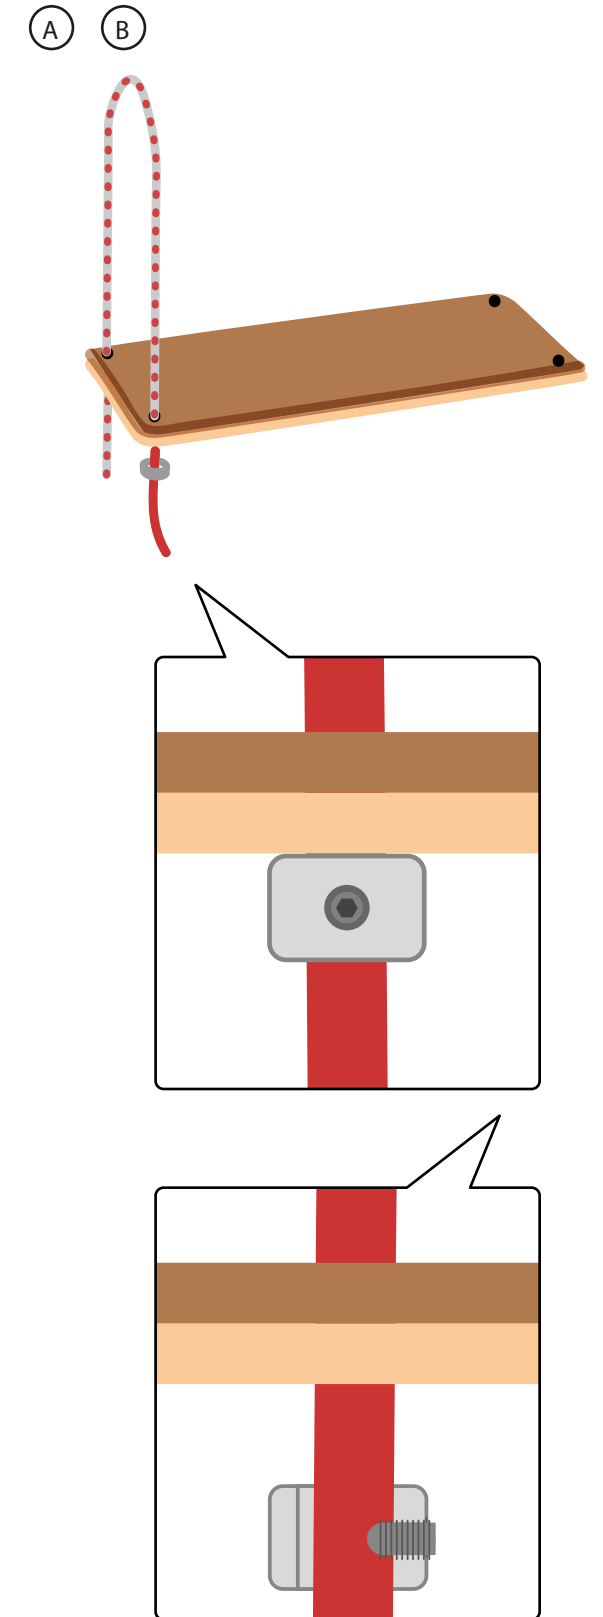

4 | Fasten the metal connectors

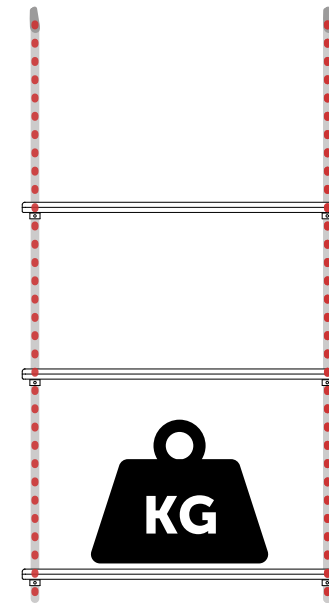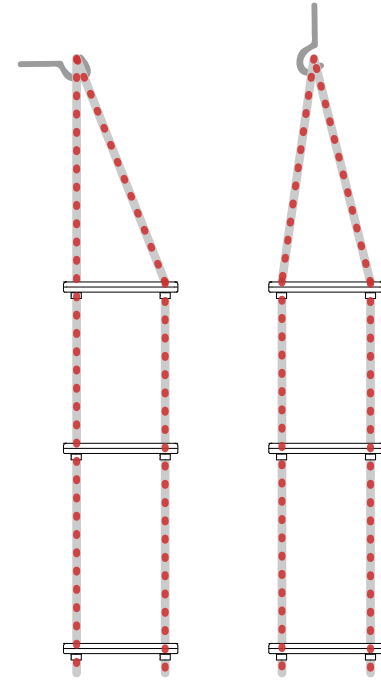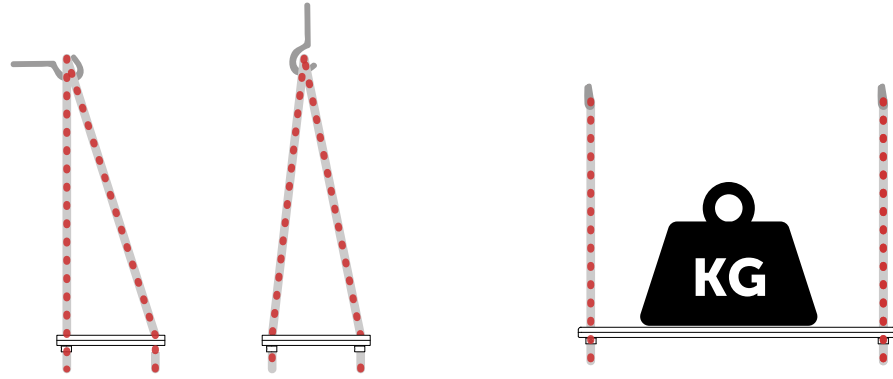


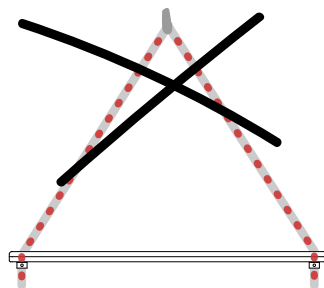
5 | Hang up the shelving on a wall or ceiling




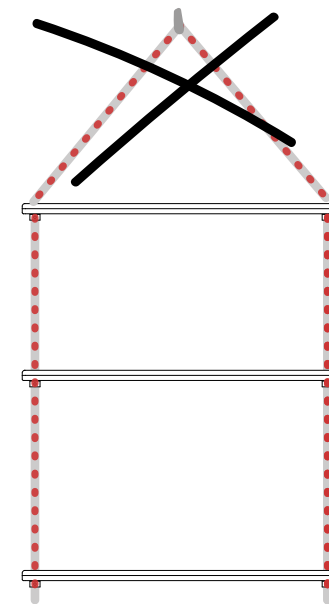
 Depending on where you desire to hang up your Snuro make sure you get the correct and strong enough wall- mounting pieces.

We advise white metal hooks
2x 

 We advice to do not overload the shelving (more than 2,5kg per shelf).



 Do not fix the shelving with only one wall-mounting piece.



6 | Be creative and either place planters, jars or cups into the cut-outs

