









# G721-C


## Parts Diagram

2007 - 2013 Chevy 1500

With 4.8L & 5.3L Engine

Max : Wheelbase

| Item | QTY | Part NO.      | Descriptions         | Length  |
|------|-----|---------------|----------------------|---|
| 1    | 1   | MPI - 20      | Right Side Tail Pipe | 62  |
| 2    | 1   | MPI - 24      | Left Side Tail Pipe  | 40  |
| 3    | 1   | MPI - 22      | Left Side Axle Pipe  | 48  |
| 4    | 2   | MPI - 0 - 60  | Head Pipes           | 60  |
| 5    | 1   | MPI - PC2     | Pulse Chamber        | -   |
| 6    | 1   | MPI - SC300   | 3" Clamp - std.      | -   |
| 7    | 5   | MPI - SC225   | 2 1/4" Clamp - std.  | -   |
| 8    | 2   | MPI - BCSS225 | 2 1/4" Band Clamp    | -   |
| 9    | 1   | Hanger - 17   | RR Muffler           |        |
| 10   | 1   | Hanger - 18   | RR Tail Pipe         |        |
| 11   | 1   | Hanger - 20   | LR Tail Pipe         |       |
| 12   | 1   | Hanger-19     | LR Muffler           |      |
| 13   | 1   | Hanger-16     | Head Pipe            |      |
| 14   | 2   | -             | Mufflers             | 14"   |
| 15   | 2   | 2435          | Tips                 | 12"   |
| 16   | 2   | MPI-Wire tie  | Wire tie             | 9"  |
| 17   | 1   | MPI - 3/8-1.5 | Bolt - H02           | 1 1/2"  |
| 18   | 1   | MPI-HD-003    | Rubber Block         |  #20 |

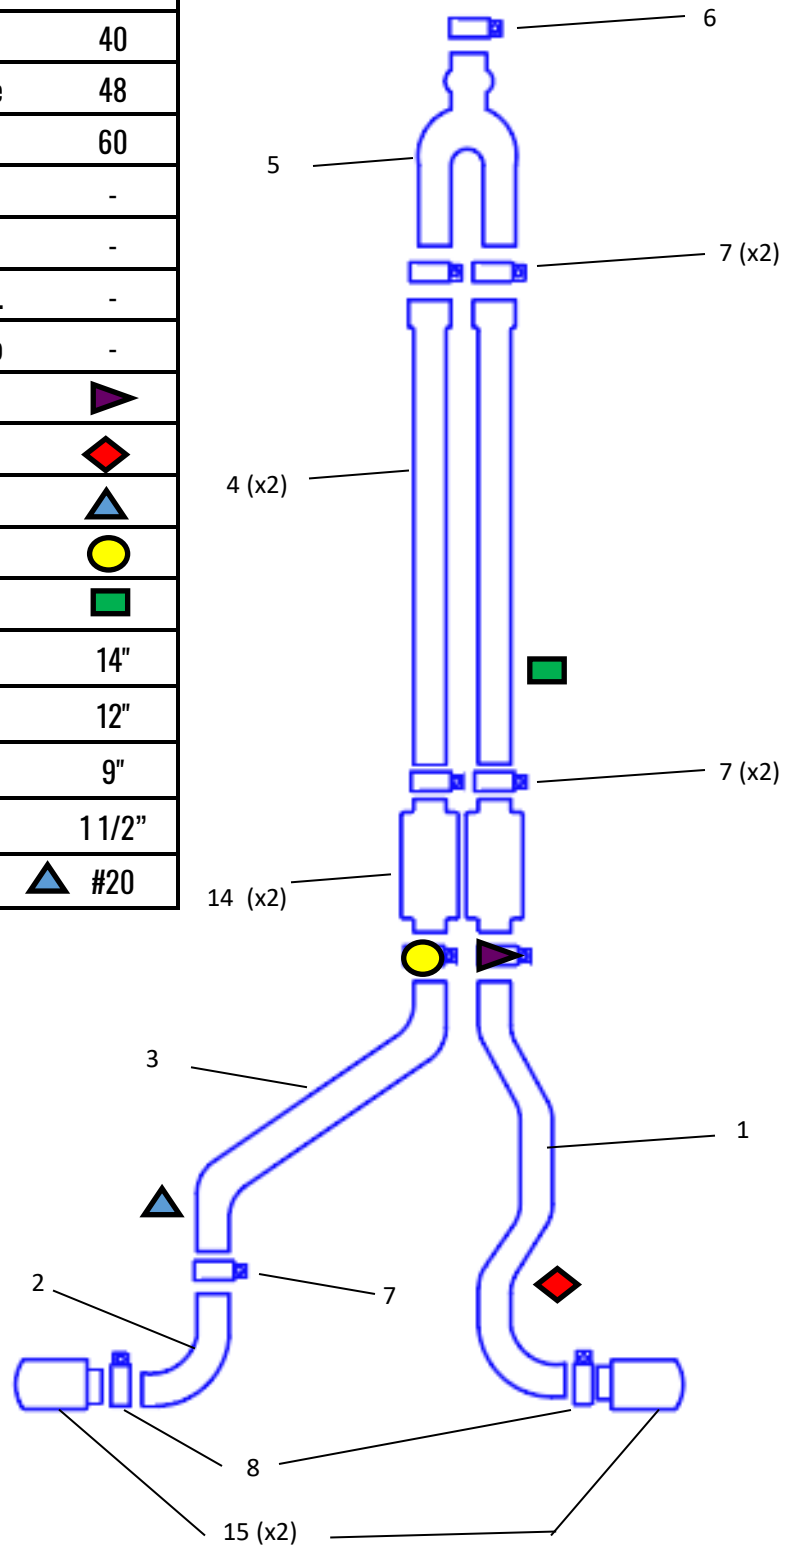









**G722-C**


Parts Diagram

2007 - 2013 Chevy 1500

With 4.8L & 5.3L Engine

Max : Wheelbase

| Item | QTY | Part NO.      | Descriptions  | Length  |
|------|-----|---------------|---|---|
| 1    | 1   | MPI - 21      | Right Side Tail Pipe  | 62  |
| 2    | 1   | MPI - 23      | Left Side Tail Pipe   | 40  |
| 3    | 1   | MPI - 22      | Left Side Axle Pipe   | 48  |
| 4    | 2   | MPI - 0 - 60  | Head Pipes  | 60  |
| 5    | 1   | MPI - PC2     | Pulse Chamber   | -   |
| 6    | 1   | MPI - SC300   | 3" Clamp - std.   | -   |
| 7    | 5   | MPI - SC225   | 2 1/4" Clamp - std.   | -   |
| 8    | 2   | MPI - BCSS225 | 2 1/4" Band Clamp   | -   |
| 9    |     | Hanger - 17   | RR Muffler  |    |
| 10   | 1   | Hanger - 18   | RR Tail Pipe  |  |
| 11   | 1   | Hanger-20     | 07 - LR Hanger  |  |
| 12   | 1   | Hanger-19     | LR muffler Hanger   |  |
| 13   | 1   | Hanger-16     | Head Pipe Hanger  |  |
| 14   | 2   | -             | Mufflers  | 14"   |
| 15   | 2   | 2435          | Tips  | 12"   |
| 16   | 2   | MPI-Wire tie  | Wire tie  | 9"  |
| 17   | 1   | MPI - 3/8-1.5 | Bolt - H02  | 1 1/2"  |
| 18   | 1   | MPI-HD-003    | Rubber Block—LR  #20 |   |

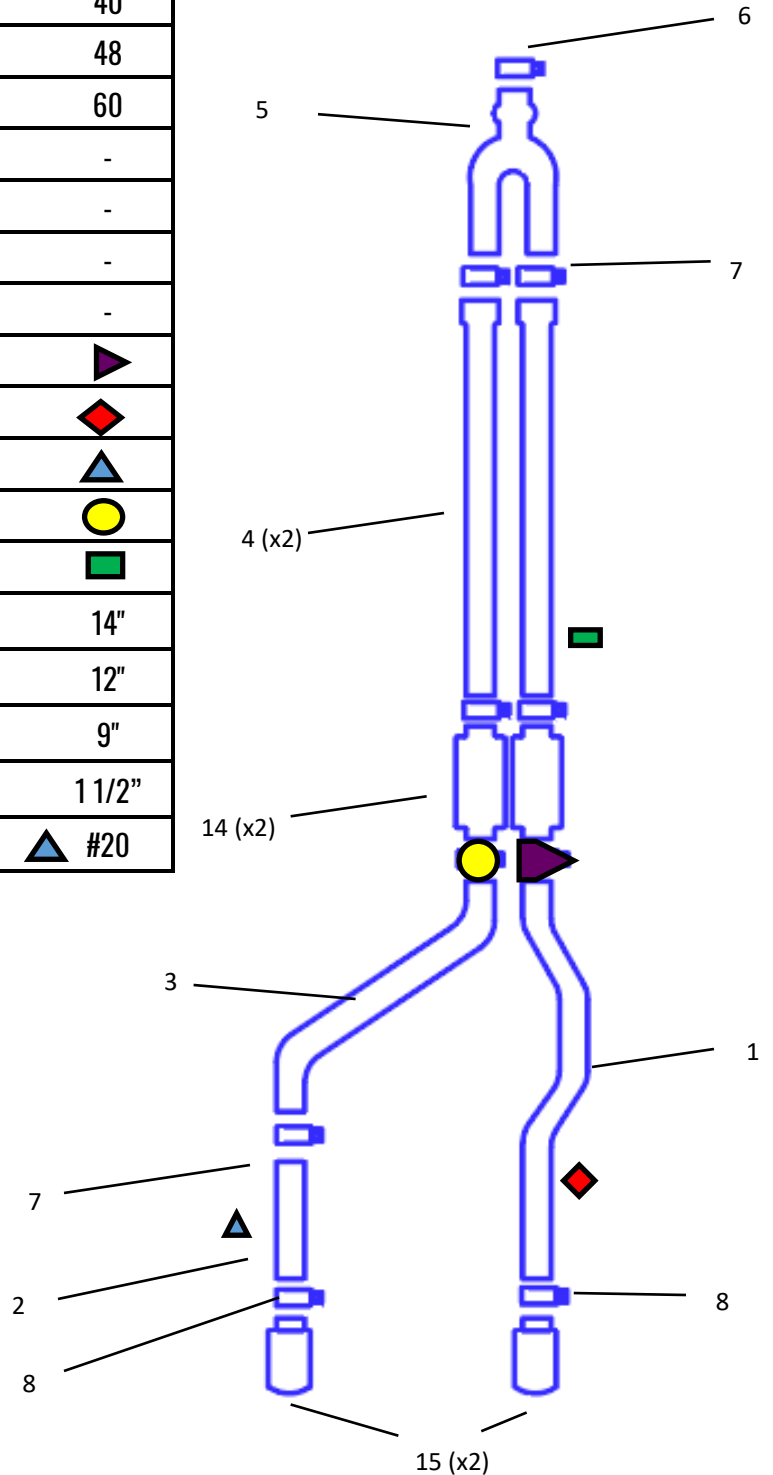

# Customer Support And Warranty information



Thank you for purchasing a MPI Exhaust Technologies System and letting MPI Exhaust customize your ride today! We have a friendly and knowledge staff so contact us with any questions. Enjoy the Sound of Perfection

## Questions -

ONLY contact MPI Exhaust Technologies if any products are possibly missing, damaged, during shipping or if you have any question about the products.

Call @ 406-669-3286

## Installation -

Watch the tutorial YouTube videos before installation or calling @mpi exhaust, we have a very knowledgeable staff that has installed hundreds of these kits.

## Warranty -



**Contact**

Phone - (406) 669-3286

Email : [mikespipesinc@gmail.com](mailto:mikespipesinc@gmail.com)




## Installations

2007 - 2013 Chevy 1500

With 4.8L & 5.3L Engine

Max : Wheelbase

1. Remove Factory tailpipes, then cut where factory turns into single , Ensure 2" straight flat pipe for proper clamp surface
2. Mark 2 inches In front of cut, Slide Pulse chamber over Factory pipe to your mark then Clamp Pulse Chamber
3. Install the Right side Head Pipe, then trim to Wheelbase (view diagram) Snug Clamps as you go, don't final tighten yet
4. Install Right side muffler, Ensure Rear Muffler Measurement is correct to ensure proper tailpipe placement with Offset Toward Front
5. Repeat previous 2 steps for Left Side
6. Install Hanger Head Pipe Hanger—Final tighten all clamp to this Point
7. Install RR Tail Pipe Level, then clamp
8. Install RR hanger then install Tips check to ensure level and placement,
9. Use MPI-Wire tie to secure brake lines and Breather lines together
10. Install Axle Pipe & LR tail Pipe, Ensure proper Clearance for Spare tire and rear end Travel
11. Install LR hanger— Use bolt MPI - 3/8-1.5
12. Install LR tip, Check level and positions to match RR
13. Clean finger prints off tips with glass cleaner, clean pipes with brake clean,

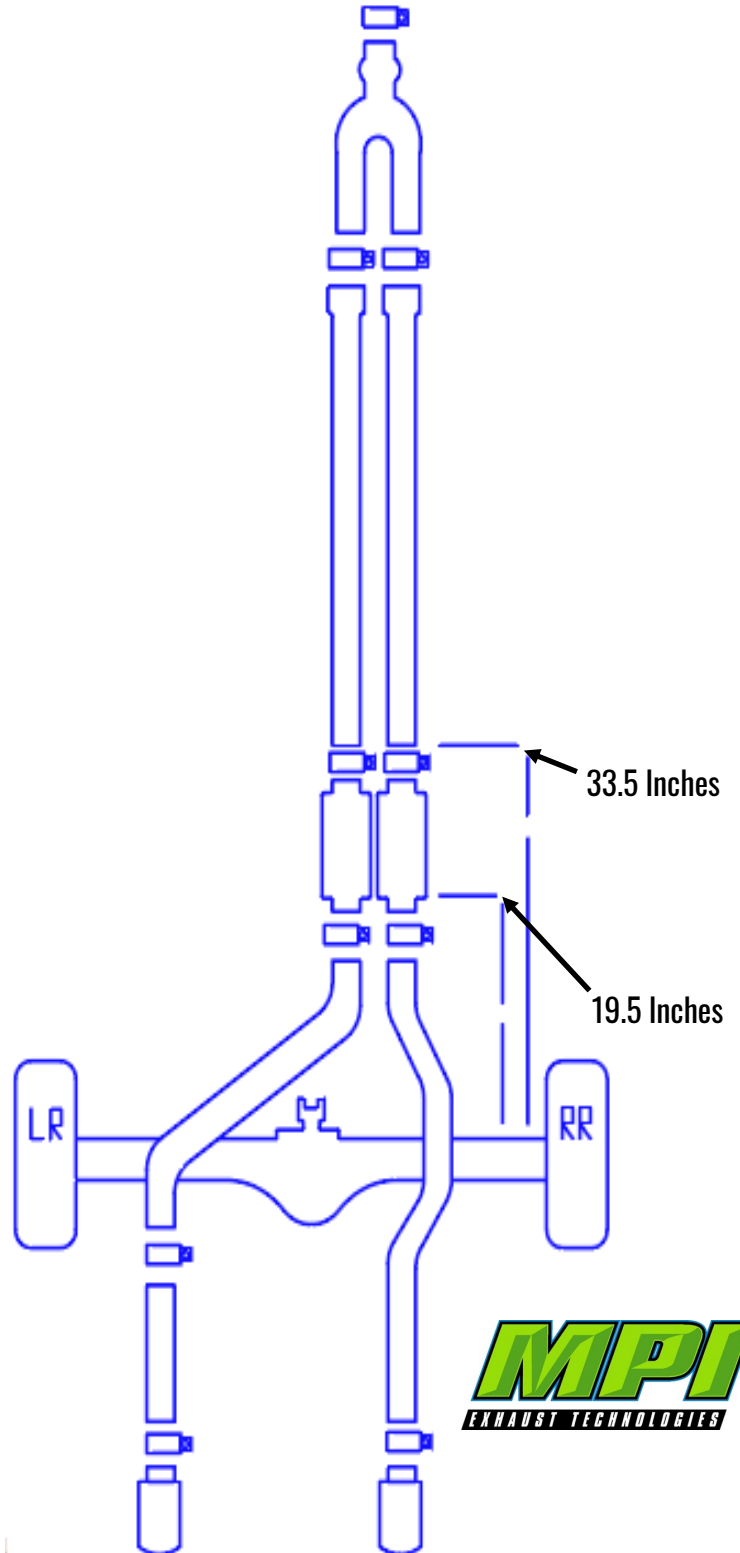

**G7-12**

**G721-C & G722-C**

**Instruction Packet**

2007 - 2013 Chevy 1500

With 4.8L & 5.3L Engine

*Max : Wheelbase*



**MPI**  
**EXHAUST TECHNOLOGIES**