

Hardware Guide & Mounting Instructions for P/N 488 & 298

Included Hardware:

- 2) #700-88 Brackets
- 3) #700-89 Rubber Mounts
- 2) 6 x 20mm Hex Bolts
- 6) 6mm Nylock Nuts
- 4) HD 6mm Flat Washers
- 4) std. 6mm Flat Washers
- 1) 6mm Lock Washer

6mm Nylock Nut
HD 6mm Flat Washer
6mm Lock Washer

#700-88 Bracket Assy.

Attach brackets to bike using:

6 x 20mm Hex Bolts
& std. 6mm Flat Washers

*Attach skid plate to bracket
as shown in Fig 1 using:*

#700-89 Rubber Mount
(2x) 6mm Nylock Nuts
std. 6mm Flat Washer
HD 6mm Flat Washer (larger one)

#700-89 Rubber Mounts
HD 6mm Flat Washer
6mm Nylock Nut

*Part number reference:
p/n 298 has bends here
p/n 488 is flat here*

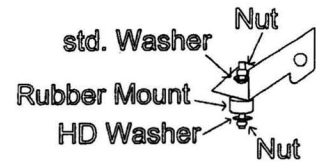


Fig 1

1. Remove the factory skid plate.
2. In the two forward spots where the factory plate attached mount a bracket with rubber mount as shown in the photo.
3. Use the the third rubber mount threaded directly into the motor on the rear mounting point.
4. Remove the nuts on the bottom side of the rubber mounts and slide the plate over the 4 exposed mounting posts and secure with the nylock nuts and a HD (larger) washer.

