

## Mounting Instructions for BMW 1250 GS/A Skidplate

P/N 329

1. Remove the stock skidplate and the front skidplate mount.
2. Mount the supplied # 700-15 bracket to the lower crash bar mount using the stock bolts. Leave the bolts loose enough so the bracket can still be rotated. Fig. 1
3. Mount the Ricochet plate to the stock mounts on the bottom with the 3) #833 cupped washers and 6mm X 16 flanged bolts. And the 8mm X 25 buttonhead bolts into the bracket. Fully tighten all of these bolts.
4. Fully tighten the bracket/crash bar mounting bolts.

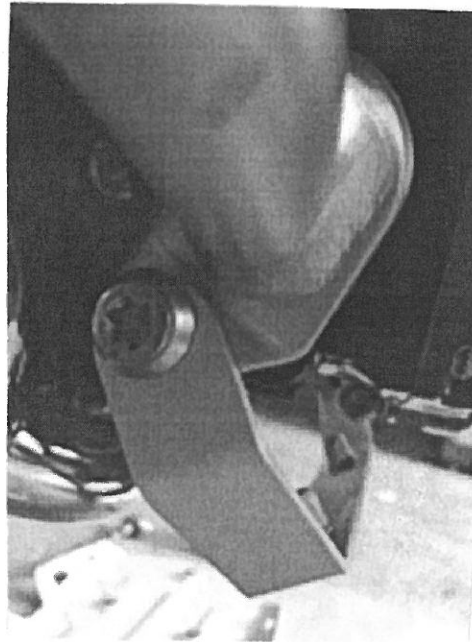


Fig. 1