


# #331

M8x60 Hex Bolt  
8mm HD Washer  
700-110

M8x80 Hex Bolt  
8mm HD Washer  
700-152-2

M6x16 Flange Bolt

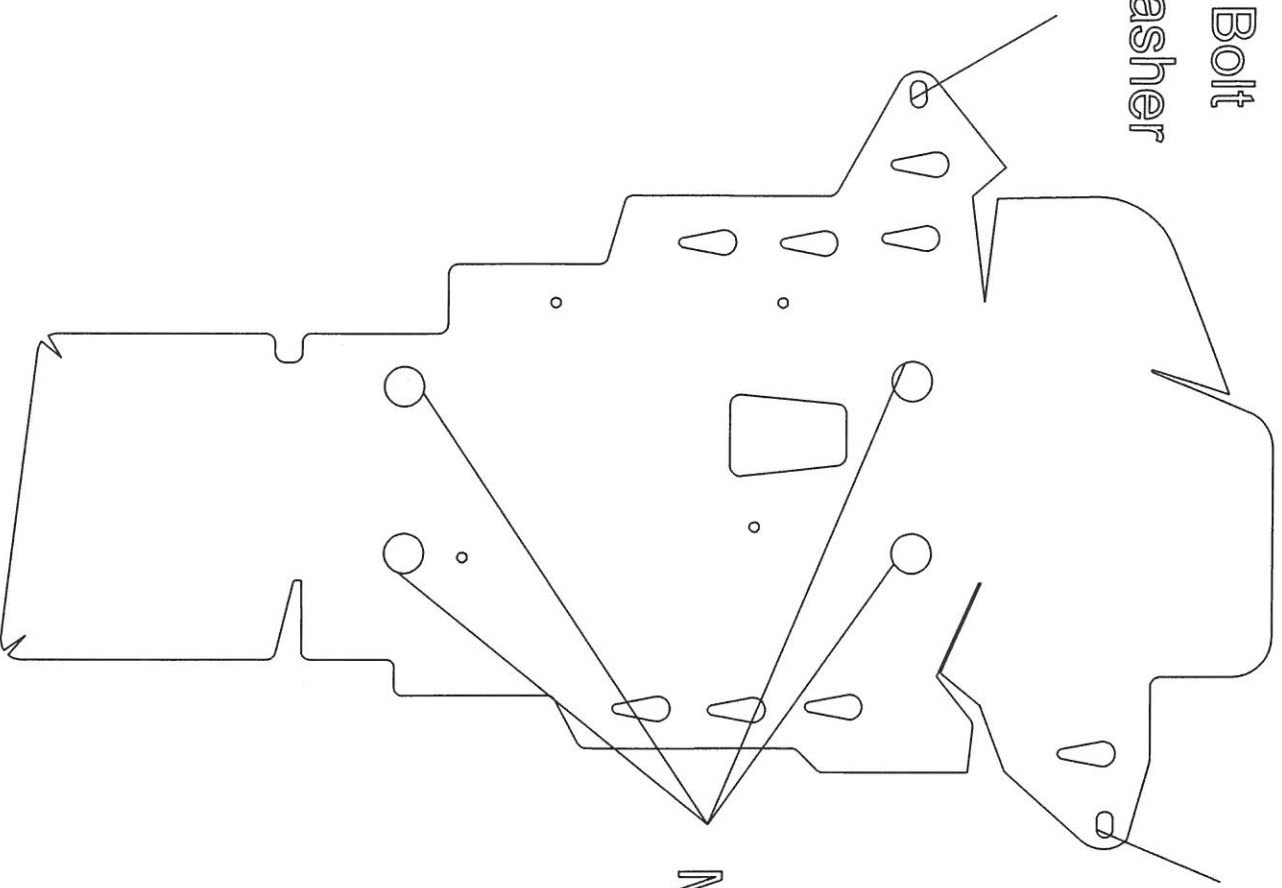

# Mounting Instructions for BMW 850 Skidplate

## GS & Adventure Models

1. First remove the stock skidplate but leave the OEM mounting brackets in place. If your bike is an Adventure model remove the lower forward crash bar mounting bolts.
2. Now attach the skidplate to the 4 stock mounting points with the M6x16 Flange Hex bolts (gold). Leave these a little bit loose at this time.
3. Install the front mounts using the appropriate spacer, bolt and washer on the placement chart. Leave these a little loose as well.
4. Now tighten the 4 bottom bolts first then the side bolts.
5. Go riding!

### Hardware for GS model

- M8x80 Hex
- M8x60 Hex
- 2) 8mm HD washers
- 700-153-1 spacer (short, use with 8x60 hex)
- 700-153-2 spacer (long, use with 8x80 hex)
- 4) M6x16 Flange Hex

### Hardware for Adventure model

- M8x60 Hex
- M8x80 Hex
- 2) 8mm HD washers
- 700-110 spacer (short, use with 8x60 hex)
- 700-152-2 spacer (long, use with 8x80 hex)
- 4) M6X16 Flange Hex