

Installation Instructions for Part# 759L

Note: If you are installing Ricochet aluminum, or ½" UHMW skids, those must be installed first before installing the 759L Skids.

Step One: Take your 834 clamps (marked 4) and slide those over the rear frame tube. The factory body work is usually pretty tight to the frame rail. You can simply push the clamp through the plastic, and then set it over the frame rail. In some cases, you may have to use a small screw driver to slightly pry the plastic up to make clearance for the clamps. This is the same procedure for both sides.

Step Two: Now you can take you 836 clamps (marked 6) and slide those into position around the front frame rail. There is only one spot that these clamps can go in, as the rest of the frame is boxed in. On the driver side, there is a small tin heat shield that needs to be pried out of the way to get the clamp around the frame tube. Pry the shield out enough to get the clamp on the frame tube, and then push the shield back into place. On the passenger side, there is no shield, and you can put the clamp right in place.

Step Three: Now you are ready to mount up your plates. The holes with the long spacers welded to the plate will take the 8x60 bolts and will bolt into the two 834 (4) clamps on the rear. Put the plate into position, slide the clamp over to line it up with the slot and start the bolt. Do this with both rear mounts and leave loose for now.

Step Four: Now you can take your 8x30 bolt and washer slide the bolt through the very front slot and start the bolt. Be sure to use anti seize on this bolt as well. The hole in the middle of the plate is not used for mounting, that is a location mark for us to weld on the support spacer.

Step Five: Align your plate to the machine for the best fit and tighten all the bolts. It is the same procedure for both sides.

Here are pictures of the plates installed.




Passenger side



Driver side

759L Hardware Placement

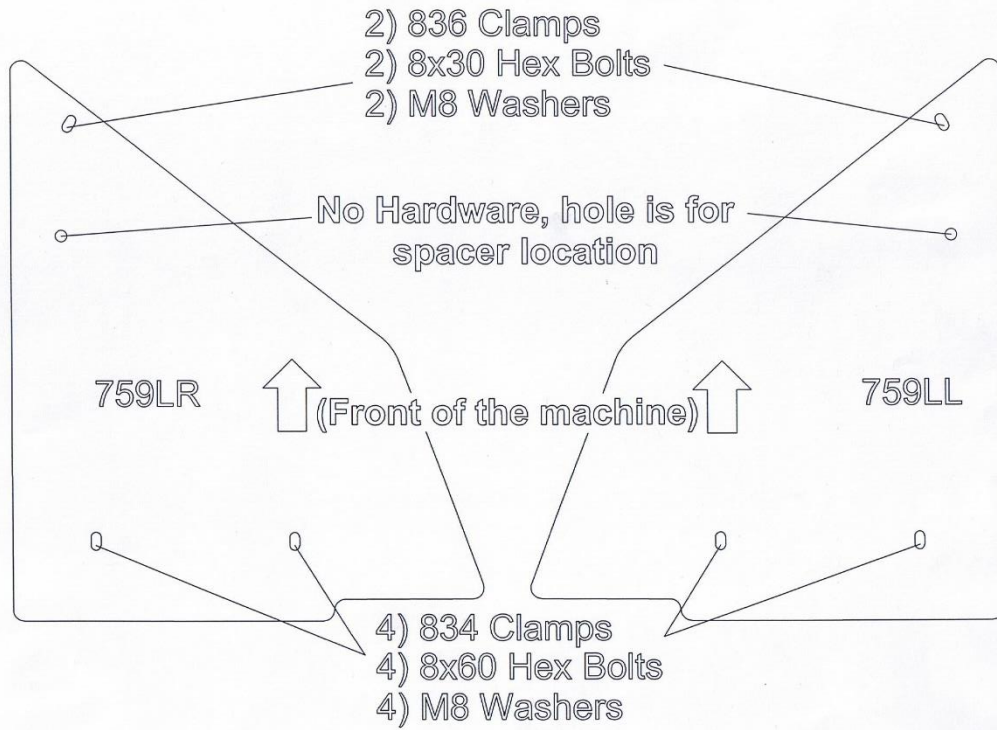

We also have a video on our youtube channel showing the installation procedure. Thank you for your purchase.