Thank for your purchase of this Ricochet Off-Road Armor Kit. All of our kits are custom designed to fit each model and should install hassle free with no additional modifications required. Please carefully read through all included instruction sheets before beginning your install.

The tips described on this sheet are general mounting tips that may or may not apply to your particular model, refer to the attached model specific instructions for a step by step mounting procedure.

If you do encounter a problem during installation please check the FAQ on our website or feel free to contact us by phone or email using the contact info at the bottom of this page.

Required Tools:

(refer to your hardware placement guide for bolt sizes)

Button Head TORX Bolts: (socket bit is highly recommended) 8mm bolts use a T-40 TORX bit 6mm bolts use a T-30 Torx bit

Hex Bolts & Nuts:

10mm bolts uses 17mm 8mm bolts uses 13mm 6mm bolts uses 10mm 1/4"-20 bolts uses 7/16"

Drill Bits:

While we try to avoid drilling whenever possible some models require one or two mounting points to be match drilled. When instructions call for a drilled mounting point use an **11/32**" bit to match drill through the mounting point on the skid plate only after the plate has been fully secured to your machine using the other hardware listed on your hardware guide.

Locking Nuts:

Most sets will include two types of locking nuts. Loose nuts are Nylock, and any nuts welded onto other hardware are pinch-style Stover lock nuts. It is highly recommended that you use a bit of Anti-seize or a drop of oil on the threads of the welded-on pinch style nuts, this will make the bolts go on and come off much easier.

Other helpful tips:

- -Before you begin the installation organize all the included hardware according to the hardware placement sheet so you can quickly find the correct bolts and brackets when you need them.
- -Install all bolts finger-tight at first until all hardware has been installed, this will give you maximum adjustability.
- -When using the cupped washers to secure the plates to factory mounting points do not over torque the bolts because the threads can strip easily. If you do strip one out the simplest way to repair the thread is to use a $1/4''-20 \times 5/8''$ self tapping bolt.
- -You may find it easier to remove the rear tires when installing the rear a-arm guards, it's typically very tight and hard to see when the tires are left on.

Contact us at 1-866-273-1197 or dh_gibbs@comcast.net with any questions or concerns.

Hardware List & Mounting Instructions for P/N 7771F-14

P/N 771-14 (771T, 771M, 787R)

- 2) 6 x 20mm Button Head Bolts
- 2) 6 x 20mm Hex Bolts
- 2) 6 x 25mm Hex Bolts
- 8) 6 x 30mm Hex Bolts
- 3) 8 x 20mm Button Head Bolts
- 2) 8 x 25mm Button Head Bolts
- 2) 8 x 50mm Button Head Bolts
- 2) 1/4 x 1" Self Tapping Hex Bolts
- 3) 1 1/2" Clamps (marked with a "A")
- 12) #833 Cupped Washers
- 12) 6mm HD flat washers (6 used for installation, others for shimming)
- 2) 6mm Lock Washers
- 9) 8mm Flat Washers
- 2) 8mm Nylock Nuts
- 2) #700-06 Nut Plates
- 8) #700-93s (5/16") Spacers

P/N 771FB (771FBA, 771FBB)

- 2) 6 x 30mm Hex Bolts
- 16) 8 x 30mm Button Head Bolts
- 16) 8mm Flat Washers
- 2) #833 Cupped Washers
- 8) #700-92 Nut Plates

P/N 771A (771AFA, 771AFB, 771ARA, 771ARB)

- 16) 8 x 20mm Button Head Bolts
- 16) 8mm Flat Washers
- 16) 1 1/8" Clamps

optional UHMW Add-On (910P1, 771P2, 910P4R, 910P4L)

- 62) #833 Cupped Washers
- 2) #833-8 Cupped Washers (larger Hole)
- 60) 6mm Hex Flange Bolts
- 2) 6 x 25mm Hex Bolts
- 2) 8 x 20mm Hex Bolts
- 2) #700-06 Nut Plates



add 6mm washers here if necessary

shimming)

#700-92



#700-93



#833






Mounting Tips for installing UHMW Overlay

- 1. Follow the instructions below and install all of the aluminum parts including the rock sliders before attaching the UHMW.
- 2. The UHMW layer will attach easily to the inserts in the skid plate using the #833 cupped washers and 6mm Flange bolts. Use the same technique of leaving everything loose until all hardware is in place
- 3. On your hardware placement guide you will note 4 spots where the inserts are not used. At the spot labeled $\bf A$ on you hardware guide you will use the cupped washers with the larger hole and an 8 x 20mm hex bolt to secure the plastic to a #700-06 nut plate placed on the back side of the skid plate.
- 4. At the spot labeled **B** you will need to remove the cupped wahsers you installed earlier and replace them on top of the UHMW layer so that the bolt passes through both the plastic and aluminum.

Mounting Instructions

- 1. Remove all factory plastic skid plates.
- 2. Refer to the hardware placement guide and organize all the included hardware combining each bolt with its corresponding hardware pieces. Prepare each hex bolt that uses a cupped washer and spacer as shown in Fig 1. It's highly recommended that you apply a small amount of oil or anti-seize to each locking nut that is welded onto a clamp. This will make them easier to torque down and make it easier to remove later on.
- **3**. Mount the main center skid plates first (771M) using the hardware shown on your hardware placement guide. Leave all the bolts loose for now so that plates position can be adjusted.
- **4**. Now mount the front skid plate (771T) overlapping the two top mouning points of the center skid using the hardware shown on your hardware placement guide. Again leave everything loose at this time.
- 5. Now you may mount the rear skid (787R) and begin tightening all the bolts on each skid you have previously mounted making sure each plate butts up against each adjacent plate to create smooth transitions. Do not over torque the 6mm bolts that are threaded into factory mounting points beause they strip easily. NOTE: the space between the mounting point and the skid plate can vary from machine to machine, if the spacer doesn't seem long enough to fill the gap you can add 6mm flat washers to ensure a tight fit.
- **6**. Now feed the #700-92 nut plates into the crossmembers on the outside of the main frame as shown in fig 2. Using the access hole on the rock slider skid plates, position the nut plate so it aligns with the mounting points on the skid plate and feed an 8 x 30mm bolt into each nut. Finish the installation using a cupped washer and 6mm bolt in the front mounting point of each rock slider plate.
- 7. Now install your front and rear a-arm guards using the 1 1/8" clamps wrapped around the a-arm frame tube. Keep everything loose until all the clamps are installed. Finally tighten down the clamps making sure the guards position is clear of any interferances.

Clamp & Hardware Placement Guide for P/N 7771F-14

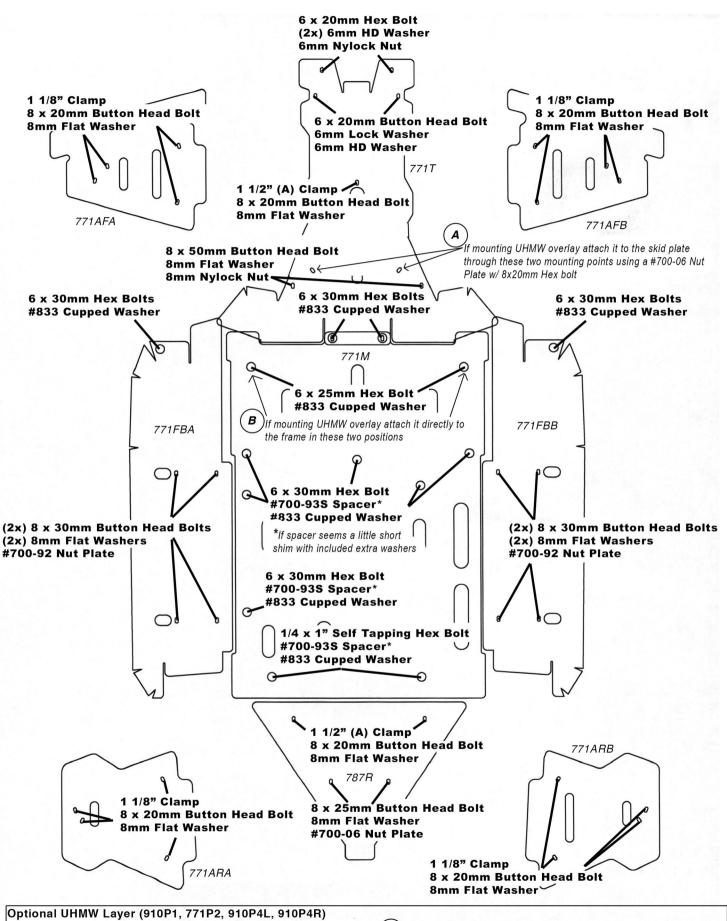

Attach to inserts in center skid plates using: 34) #833 Cupped Washers

34) 6 x 16mm Flange Bolts

A Attach to skid plate using:

2) #833-8 Cupped Washer(larger hole)

2) 8 x 20mm Hex Bolt 2) #700-06 Nut Plate

Attach to frame using: 2) #833 Cupped Washer

2) 6 x 25mm Hex Bolts

Attach to rock sliders using: 26) #833 Cupped Washer 26) 6 x 25mm Hex Bolts