


# Hardware For 793FB

- 2) 700-75R
- 2) 700-75L
- 8) 8x25 Torx Bolts
- 4) M8 Nylock Nuts
- 12) M8 Washers

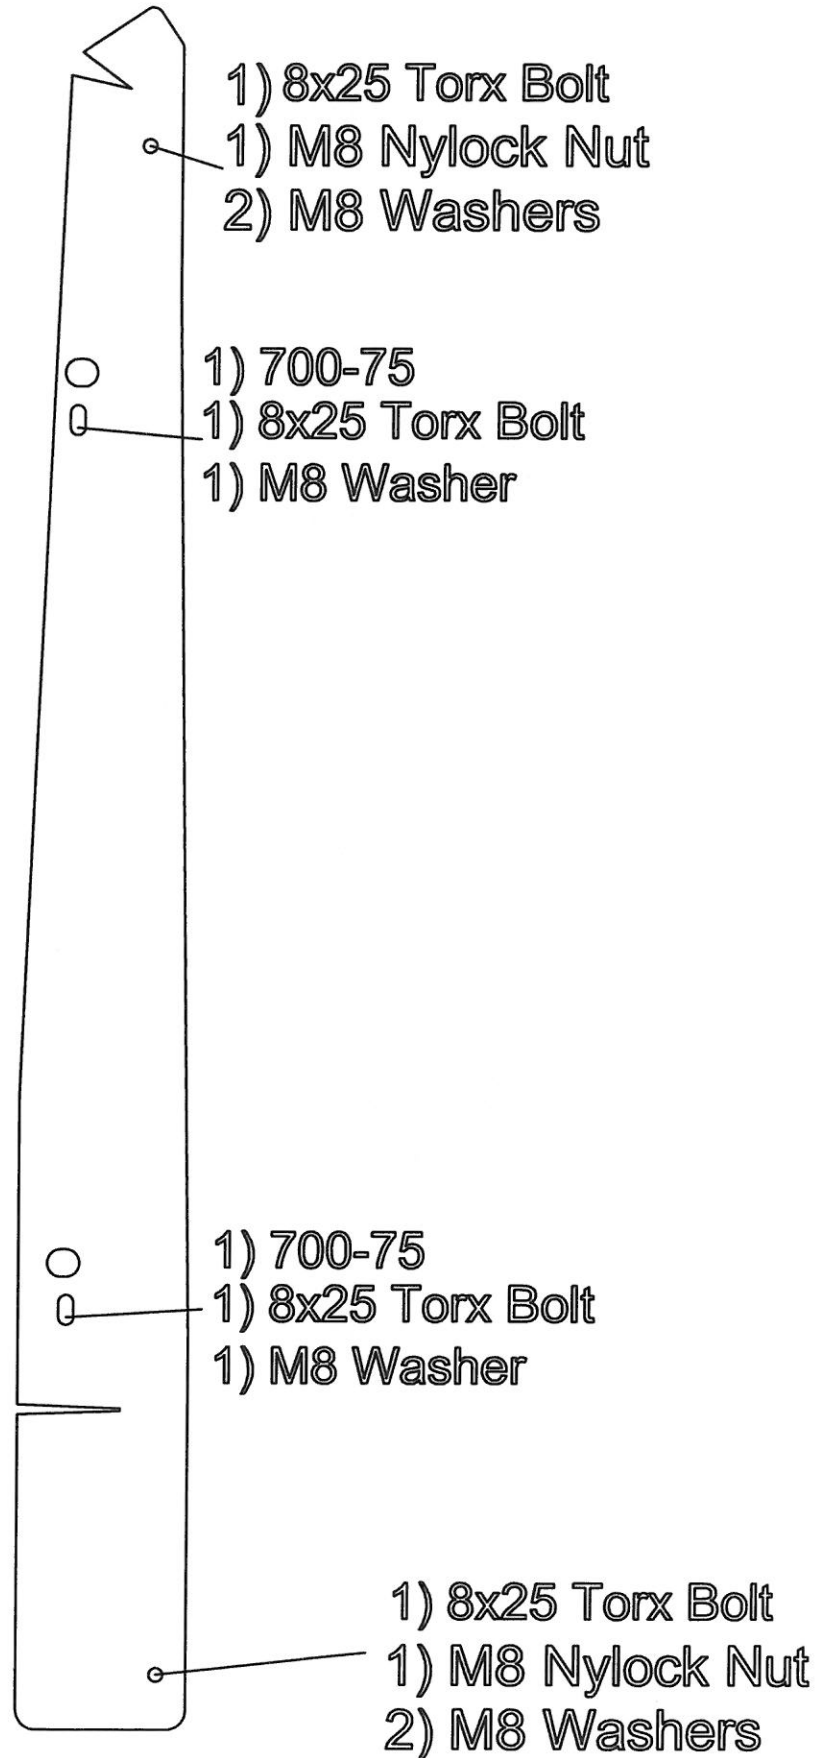

Mount the 700-75 brackets to the side of your machine reusing the existing bolts as shown in the picture below. Be aware there are lefts and rights so make sure it is oriented as shown in the photo.

Using an 11/32" drill bit (3/8" will work also) match drill through the front and rear mounting points

On each rock slider and install a M8X25 button head bolt with the nylock nut to complete the installation.

